STR-DE598/DE698/DV10

SERVICE MANUAL

Ver. 1.1 2005. 04

US Model
STR-DE598/DE698/DV10
Canadian Model
AEP Model
UK Model
E Model
Australian Model
STR-DE598/DE698

Photo: STR-DE698

Manufactured under license from Dolby Laboratories.
“Dolby”, “Pro Logic” and the double-D symbol are trademarks of Dolby Laboratories.
“DTS”, “DTS-ES”, “Neo:6” and “DTS 96/24” are trademarks of Digital Theater Systems, Inc.

SPECIFICATIONS

AUDIO POWER SPECIFICATIONS

POWER OUTPUT AND TOTAL HARMONIC DISTORTION:
(Models of area code US only)

With 8 ohm loads, both channels driven, from 20 – 20,000 Hz; rated 90 watts per channel (DE598/DE698) or 80 watts per channel (DV10) minimum RMS power, with no more than 0.09 % total harmonic distortion from 250 milliwatts to rated output.

Amplifier section

Power Output
Models of area code US, CND
Rated Power Output at Stereo Mode
(8 ohms 20 Hz – 20 kHz, THD 0.09 %)
90 W + 90 W [1] (DE598/DE698)
80 W + 80 W [1] (DV10)
(8 ohms 1 kHz, THD 0.7 %)
100 W + 100 W [1] (DE598/DE698)
90 W + 90 W [1] (DV10)
(8 ohms 1 kHz, THD 10 %)
125 W + 125 W [1] (DE598/DE698)
115 W + 115 W [1] (DV10)
Reference Power Output [1]
(8 ohms 20 Hz – 20 kHz, THD 0.09 %)
FRONT [2] : 90 W/ch (DE598/DE698)
80 W/ch (DV10)
CENTER [2] : 90 W (DE598/DE698)
80 W (DV10)
SURR [2] : 90 W/ch (DE598/DE698)
80 W/ch (DV10)
SURR BACK [2] : 90 W (DE598)
90 W/ch (DE698)
80 W/ch (DV10)
(8 ohms 1 kHz, THD 0.7 %)
FRONT [2] : 100 W/ch (DE598/DE698)
90 W/ch (DV10)
CENTER [2] : 100 W (DE598/DE698)
90 W (DV10)
SURR [2] : 100 W/ch (DE598/DE698)
90 W/ch (DV10)
SURR BACK [2] : 100 W (DE598)
100 W/ch (DE698)
90 W/ch (DV10)
(8 ohms 1 kHz, THD 10 %)
FRONT [2] : 125 W/ch (DE598/DE698)
115 W/ch (DV10)
CENTER [2] : 125 W (DE598/DE698)
115 W (DV10)
SURR [2] : 125 W/ch (DE598/DE698)
115 W/ch (DV10)
SURR BACK [2] : 125 W (DE598)
125 W/ch (DE698)
115 W/ch (DV10)

– Continued on next page –

FM STEREO/FM-AM RECEIVER

9-879-487-02
2005D04-1
© 2005. 04
Sony Corporation
Audio Group
Published by Sony Engineering Corporation

SONY

Models of area code AEP, UK, E2, AUS, AR, KR, TW
Rated Power Output at Stereo Mode
(8 ohms 20 Hz – 20 kHz, THD 0.09 %)
80 W + 80 W [1)]
(EXCEPT AEP, UK)
90 W + 90 W [1)] (AEP, UK)
70 W + 70 W [3)]
(8 ohms 1 kHz, THD 0.7 %)
100 W + 100 W [1)]
90 W + 90 W [3)]
(8 ohms 1 kHz, THD 10 %)
120 W + 120 W [1)]
(EXCEPT AEP, UK)
125 W + 125 W [1)] (AEP, UK)
110 W + 110 W [3)]
Reference Power Output [1)]
(8 ohms 20 Hz – 20 kHz, THD 0.09 %)
FRONT [2)] : 110 W/ch
CENTER [2)] : 110 W
SURR [2)] : 110 W/ch
SURR BACK [2)] :
110 W (DE598)
110 W/ch (DE698)
(8 ohms 1 kHz, THD 0.7 %)
FRONT [2)] : 120 W/ch
CENTER [2)] : 120 W
SURR [2)] : 120 W/ch
SURR BACK [2)] :
120 W (DE598)
120 W/ch (DE698)
(8 ohms 1 kHz, THD 10 %)
FRONT [2)] : 150 W/ch
CENTER [2)] : 150 W
SURR [2)] : 150 W/ch
SURR BACK [2)] :
150 W (DE598)
150 W/ch (DE698)

1) Measured under the following conditions:

Area code	Power requirements
US, CND	120 V AC, 60 Hz
AEP, UK, AR, KR	230 V AC, 50 Hz
E2, AUS	240 V AC, 50 Hz
TW	110 V AC, 60 Hz

2) Depending on the sound field settings and the source, there may be no sound output.

3) Measured under the following conditions:

Area code	Power requirements
AR, KR	220 V AC, 50 Hz

Frequency response

MULTI CH IN, SA-CD/CD, MD/TAPE, DVD, AUX (DE698/DV10), VIDEO 1, 2, 3	10 Hz – 70 kHz +0.5/–2 dB (with sound field and tone (DE598) or equalizer (DE698/DV10) bypassed)

Inputs (Analog)

MULTI CH IN, SA-CD/CD, MD/TAPE, DVD, AUX (DE698/DV10), VIDEO 1, 2, 3	Sensitivity: 500 mV Impedance: 50 k ohms S/N [4)] : 96 dB (A, 500 mV [5)])

4) INPUT SHORT (with sound field and tone (DE598) or equalizer (DE698/DV10) bypassed).
5) Weighted network, input level.

Inputs (Digital)

DVD, SA-CD/CD (DE698/DV10) (Coaxial)	Sensitivity: – Impedance: 75 ohms S/N: 100 dB (A, 20 kHz LPF)
VIDEO 2, 3, MD/TAPE (DE698/DV10), SA-CD/CD (Optical)	Sensitivity: – Impedance: – S/N: 100 dB (A, 20 kHz LPF)

Outputs (Analog)

MD/TAPE (OUT), VIDEO 1 (AUDIO OUT)	Voltage: 500 mV Impedance: 10 k ohms
SUB WOOFER	Voltage: 2 V Impedance: 1 k ohms

Outputs (Digital) (DE698/DV10)

MD/TAPE (Optical)	Sensitivity: –

Tone (DE598),
Equalizer (DE698/DV10)

Gain levels	±6 dB, 1 dB step

FM tuner section

Tuning range	87.5 – 108.0 MHz
Antenna	FM wire antenna
Antenna terminals	75 ohms, unbalanced
Intermediate frequency	10.7 MHz
Sensitivity	
Mono:	18.3 dBf, 2.2 µV/75 ohms
Stereo:	38.3 dBf, 22.5 µV/75 ohms
Useable sensitivity	11.2 dBf, 1 µV/75 ohms
S/N	
Mono:	76 dB
Stereo:	70 dB
Harmonic distortion at 1 kHz	
Mono:	0.3%
Stereo:	0.5%
Separation	45 dB at 1 kHz
Frequency response	30 Hz – 15 kHz, +0.5/–2 dB
Selectivity	60 dB at 400 kHz

AM tuner section

Tuning range	
Models of area code US, CND	
With 10-kHz tuning scale:	530 – 1,710 kHz [6)]
With 9-kHz tuning scale:	531 – 1,710 kHz [6)]
Models of area code E2	
With 10-kHz tuning scale:	530 – 1,610 kHz [6)]
With 9-kHz tuning scale:	531 – 1,602 kHz [6)]
Models of area code AEP, UK, AUS, TW, KR	
With 9-kHz tuning scale:	531 – 1,602 kHz
Models of area code AR	
With 10-kHz tuning scale:	530 – 1,610 kHz
Antenna	Loop antenna
Intermediate frequency	450 kHz
Usable sensitivity	50 dB/m (at 1,000 kHz or 999 kHz)
S/N	54 dB (at 50 mV/m)
Harmonic distortion	0.5 % (50 mV/m, 400 Hz)
Selectivity	
At 9 kHz:	35 dB
At 10 kHz:	40 dB

6) You can change the AM tuning scale to 9 kHz or 10 kHz. After tuning in any AM station, turn off the receiver. While holding down PRESET TUNING + or TUNING +, press **I**/⏻. All preset stations will be erased when you change the tuning scale. To reset the scale to 10 kHz (or 9 kHz), repeat the procedure.

Video section

Inputs/Outputs	
Video:	1 Vp-p, 75 ohms
S-video:	Y: 1 Vp-p, 75 ohms
(DE698/DV10)	C: 0.286 Vp-p, 75 ohms
COMPONENT VIDEO:	
(Except for models of area code DE598: AEP, UK)	
	Y: 1 Vp-p, 75 ohms
	P_B/C_B/B-Y: 0.7 Vp-p, 75 ohms
	P_R/C_R/R-Y: 0.7 Vp-p, 75 ohms
	80 MHz HD Pass Through

General

Power requirements

Area code	Power requirements
US, CND	120 V AC, 60 Hz
AEP, UK	230 V AC, 50/60 Hz
AUS	240 V AC, 50 Hz
AR, KR	220 – 230 V AC, 50/60 Hz
E2	120/220/240 V AC, 50/60 Hz
TW	110 V AC, 50/60 Hz

Power consumption

Area code	Power consumption
DE598: US, AEP, UK, E2, AUS, KR, AR	220 W
DE598: CND	300 VA
DE598: TW	500 W
DE698/DV10: US, AEP, UK, E2, AUS, AR	230 W
DE698: CND	310 VA

Power consumption (during standby mode)
0.2 W

AC outlets (DE698: EXCEPT E2/DV10)

Area code	AC outlets
US, CND	1 switched, 120 W/1A MAX
AEP, UK, E2, AUS	1 switched, 100 W MAX

Dimensions (w/h/d) (Approx.)
DE598: 430 × 157.5 × 310 mm (16 7/8 × 6 2/8 × 12 2/8 inches) including projecting parts and controls
DE698/DV10: 430 × 157.5 × 370 mm (16 7/8 × 6 2/8 × 14 4/8 inches) including projecting parts and controls

Mass (Approx.)
DE598: 8.0 kg (17 lb 11 oz)
DE698/DV10: 9.0 kg (19 lb 14 oz)

Supplied accessories
FM wire antenna (1)
AM loop antenna (1)
Remote commander RM-AAU001 (1) (DE598/DV10)
Remote commander RM-AAP001 (1) (DE698)
R6 (size-AA) batteries (2)

Design and specifications are subject to change without notice.

• Abbreviation
CND : Canadian model
E2 : AC 120 V area in E model
AUS : Australian model
AR : Argentina model
KR : Korean model
TW : Taiwan model

SAFETY CHECK-OUT (US MODEL)

After correcting the original service problem, perform the following safety check before releasing the set to the customer:
Check the antenna terminals, metal trim, “metallized” knobs, screws, and all other exposed metal parts for AC leakage.
Check leakage as described below.

LEAKAGE TEST

The AC leakage from any exposed metal part to earth ground and from all exposed metal parts to any exposed metal part having a return to chassis, must not exceed 0.5 mA (500 microampers.). Leakage current can be measured by any one of three methods.

1. A commercial leakage tester, such as the Simpson 229 or RCA WT-540A. Follow the manufacturers’ instructions to use these instruments.
2. A battery-operated AC milliammeter. The Data Precision 245 digital multimeter is suitable for this job.
3. Measuring the voltage drop across a resistor by means of a VOM or battery-operated AC voltmeter. The “limit” indication is 0.75 V, so analog meters must have an accurate low-voltage scale. The Simpson 250 and Sanwa SH-63Trd are examples of a passive VOM that is suitable. Nearly all battery operated digital multimeters that have a 2 V AC range are suitable. (See Fig. A)

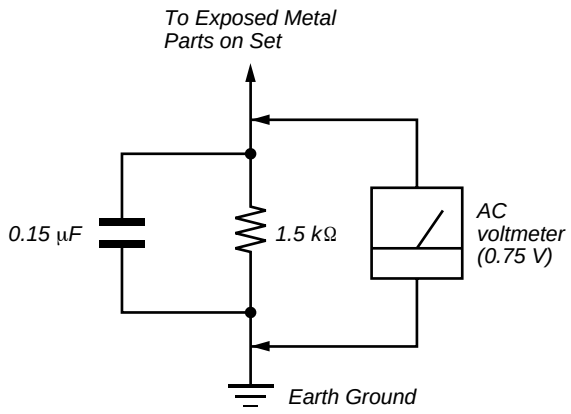

Fig. A. Using an AC voltmeter to check AC leakage.

SAFETY-RELATED COMPONENT WARNING!!

COMPONENTS IDENTIFIED BY MARK ⚠ OR DOTTED LINE WITH MARK ⚠ ON THE SCHEMATIC DIAGRAMS AND IN THE PARTS LIST ARE CRITICAL TO SAFE OPERATION. REPLACE THESE COMPONENTS WITH SONY PARTS WHOSE PART NUMBERS APPEAR AS SHOWN IN THIS MANUAL OR IN SUPPLEMENTS PUBLISHED BY SONY.

ATTENTION AU COMPOSANT AYANT RAPPORT À LA SÉCURITÉ!!

LES COMPOSANTS IDENTIFIÉS PAR UNE MARQUE ⚠ SUR LES DIAGRAMMES SCHÉMATIQUES ET LA LISTE DES PIÈCES SONT CRITIQUES POUR LA SÉCURITÉ DE FONCTIONNEMENT. NE REMPLACER CES COMPOSANTS QUE PAR DES PIÈCES SONY DONT LES NUMÉROS SONT DONNÉS DANS CE MANUEL OU DANS LES SUPPLÉMENTS PUBLIÉS PAR SONY.

STR-DE598/DE698/DV10

Ver. 1.1

MODEL IDENTIFICATION

— BACK PANEL —

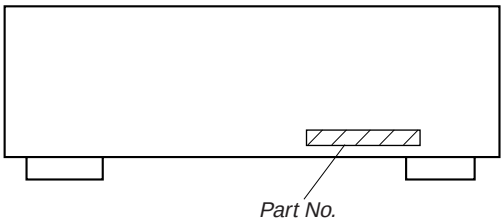

MODEL	PART No.
STR-DE598: US	2-515-627-0☐
STR-DE598: CND	2-515-627-1☐
STR-DE598: AEP, UK	2-515-627-3☐
STR-DE598: AUS	2-515-627-4☐
STR-DE598: TW	2-515-627-5☐
STR-DE598: KR	2-515-627-6☐
STR-DE598: E2	2-515-627-7☐
STR-DE598: AR	2-515-627-8☐
STR-DE698: US	2-541-614-0☐
STR-DE698: CND	2-541-614-1☐
STR-DE698: AEP, UK	2-541-614-3☐
STR-DE698: AUS	2-541-614-4☐
STR-DE698: E2	2-541-614-5☐
STR-DE698: AR	2-541-614-6☐
STR-DV10: US	2-541-614-7☐

- Abbreviation
  CND: Canadian model
  E2 : AC 120 V area in E model
  AUS : Australian model
  AR : Argentina model
  KR : Korean model
  TW : Taiwan model

TABLE OF CONTENTS

1. GENERAL

STR-DE598: Main unit 5
STR-DE598/DV10: Remote button description 6
STR-DE698/DV10: Main unit 7
STR-DE698: Remote button description 8

2. DISASSEMBLY

2-1. Case 9
2-2. Front Panel Section 10
2-3. Back Panel Section 10
2-4. Digital Board 11
2-5. Standby Board 11
2-6. Main Board 12
2-7. SB AMP Board 12

3. TEST MODE 13

4. DIAGRAMS

4-1. Circuit Boards Location 14
4-2. Block Diagram – Tuner/Audio Section – 15
4-3. Block Diagram – Digital Section – 16
4-4. Block Diagram – Video Section – 17
4-5. Block Diagram – Key/Display Section – 18
4-6. Block Diagram – Power Section – 19
4-7. Printed Wiring Boards – Main Section – 21
4-8. Schematic Diagram – Main Section (1/2) – 22
4-9. Schematic Diagram – Main Section (2/2) – 23
4-10. Printed Wiring Board – Digital Section (1/2) – 24
4-11. Printed Wiring Board – Digital Section (2/2) – 25
4-12. Schematic Diagram – Digital Section (1/4) – 26
4-13. Schematic Diagram – Digital Section (2/4) – 27
4-14. Schematic Diagram – Digital Section (3/4) – 28
4-15. Schematic Diagram – Digital Section (4/4) – 29
4-16. Printed Wiring Boards – Speaker Section – 30
4-17. Schematic Diagram – Speaker Section – 31
4-18. Printed Wiring Boards – Video Section – 32
4-19. Schematic Diagram – Video Section – 33
4-20. Printed Wiring Board
– S-video Up Convert Section (STR-DE698) – 34
4-21. Schematic Diagram
– S-video Up Convert Section (STR-DE698) – 34
4-22. Printed Wiring Board
– S-video Section (STR-DE698/DV10) – 35
4-23. Schematic Diagram
– S-video Section (STR-DE698/DV10) – 35
4-24. Printed Wiring Boards – Panel Section – 36
4-25. Schematic Diagram – Panel Section – 37
4-26. Printed Wiring Board – Power Section – 38
4-27. Schematic Diagram – Power Section – 39

5. EXPLODED VIEWS

5-1. Case Section 46
5-2. Front Panel Section 47
5-3. Back Panel Section 48
5-4. Chassis Section 49

6. ELECTRICAL PARTS LIST 50

SECTION 1
GENERAL

This section is extracted from instruction manual.

STR-DE598:

List of button locations and reference pages

How to use this page

Use this page to find the location of buttons that are mentioned in the text.

Illustration number
DISPLAY 3 (26, 27, 50)
Name of button/part
Reference page

Main unit

ALPHABETICAL ORDER

A - H

A.F.D. (button/indicator) 11 (31, 33)
AM 21 (22, 23, 24, 25, 41)
DIMMER 4 (27)
DISPLAY 3 (26, 27, 50)
Display 7 (26, 27)
DVD 25 (22)
ENTER 15 (17, 18, 41)
FM 22 (22, 23, 24, 25, 41)
FM MODE 32 (23)

I - O

Input buttons 20 (22, 36, 40, 41, 50)
INPUT MODE 17 (36)
IR (receptor) 5 (44, 50)
MAIN MENU 8 (18, 37, 38, 41)
MASTER VOLUME –/+ 16 (17, 21, 22, 49)
MD/TAPE 24 (22)
MEMORY 34 (24, 25)
MOVIE (button/indicator) 12 (32, 33, 50)
MULTI CHANNEL DECODING (indicator) 6 (23)
MULTI CH IN 9 (23)
MUSIC (button/indicator) 13 (33, 50)

P - Z

PHONES (jack) 33 (22, 49)
PRESET TUNING –/+ 29 (25, 53)
SA-CD/CD 23 (22)
SPEAKERS (OFF/A/B/A+B) 2 (16, 42, 49)
SURR BACK DECODING 14 (34)
TUNING –/+ 30 (23, 53)
VIDEO 1 28 (22)
VIDEO 2 27 (22)
VIDEO 3 26 (22)
VIDEO 3 IN/PORTABLE AV IN (jacks) 31 (13)

NUMBERS AND SYMBOLS

2CH (button/indicator) 10 (30, 33, 38)
I/⏻ (power) 1 (17, 18, 24, 38, 53)
</> 19 (18, 37, 38, 41)
+/– 18 (18, 37, 39, 41)

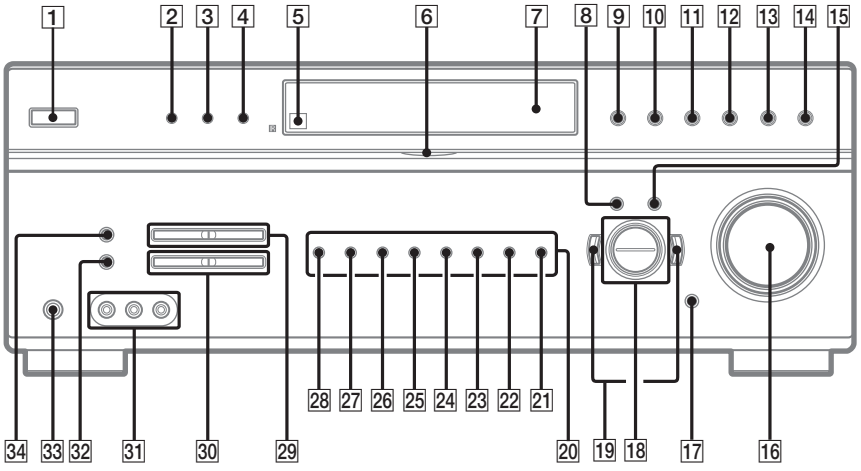

STR-DE598/DV10:

Operations Using the Remote RM-AAU001

You can use the remote RM-AAU001 to operate the components in your system.

Before you use your remote

Inserting batteries into the remote

Insert R6 (size-AA) batteries with the + and – properly oriented in the battery compartment. When using the remote, point it at the remote sensor ▣ on the receiver.

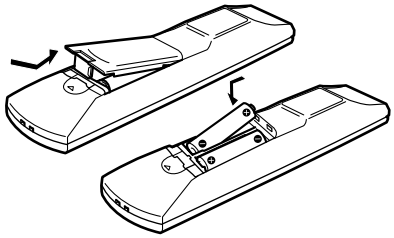

Tip

Under normal conditions, the batteries should last for about 6 months. When the remote no longer operates the receiver, replace all batteries with new ones.

Notes

- Do not leave the remote in an extremely hot or humid place.
- Do not use a new battery with an old one.
- Do not expose the remote sensor to direct sunlight or lighting apparatuses. Doing so may cause a malfunction.
- If you don't use the remote for an extended period of time, remove the batteries to avoid possible damage from battery leakage and corrosion.

Remote button description

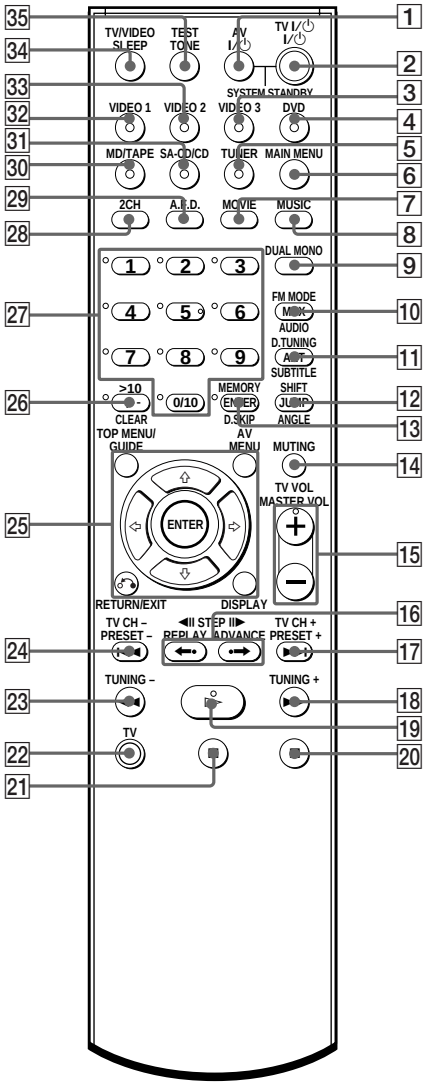

STR-DE698/DV10:

List of button locations and reference pages

How to use this page

Use this page to find the location of buttons that are mentioned in the text.

Illustration number
DISPLAY 3 (27, 28, 56)
Name of button/part
Reference page

Main unit

ALPHABETICAL ORDER

A - H

A.F.D. (button/indicator) 11 (32, 34)
AUX 21 (23)
DIMMER 4 (28)
DISPLAY 3 (27, 28, 56)
Display 7 (27, 28)
DVD 25 (23)
ENTER 15 (18, 42, 57)
FM MODE 32 (24)

I - O

Input buttons 20 (23, 37, 41, 42, 56)
INPUT MODE 17 (37)
IR (receptor) 5 (45, 57)
MAIN MENU 8 (18, 38, 39, 42)
MASTER VOLUME –/+ 16 (18, 22, 23, 55)
MD/TAPE 24 (23)
MEMORY 34 (26)
MOVIE (button/indicator) 12 (33, 34, 56)
MULTI CHANNEL DECODING (indicator) 6 (24)
MULTI CH IN 9 (24)
MUSIC (button/indicator) 13 (34, 56)

P - Z

PHONES (jack) 33 (23, 55)
PRESET TUNING –/+ 29 (26, 59)
SA-CD/CD 23 (23)
SPEAKERS (OFF/A/B/A+B) 2 (16, 43, 55)
SURR BACK DECODING 14 (35)
TUNER FM/AM 22 (23, 24, 25, 26, 42)
TUNING –/+ 30 (24, 59)
VIDEO 1 28 (23)
VIDEO 2 27 (23)
VIDEO 3 26 (23)
VIDEO 3 IN/PORTABLE AV IN (jacks) 31 (13)

NUMBERS AND SYMBOLS

2CH (button/indicator) 10 (31, 34, 39)
I/⏻ (power) 1 (18, 25, 39, 57, 59)
</> 19 (18, 38, 39, 42)
–/+ jog dial 18 (18, 38, 39, 42)

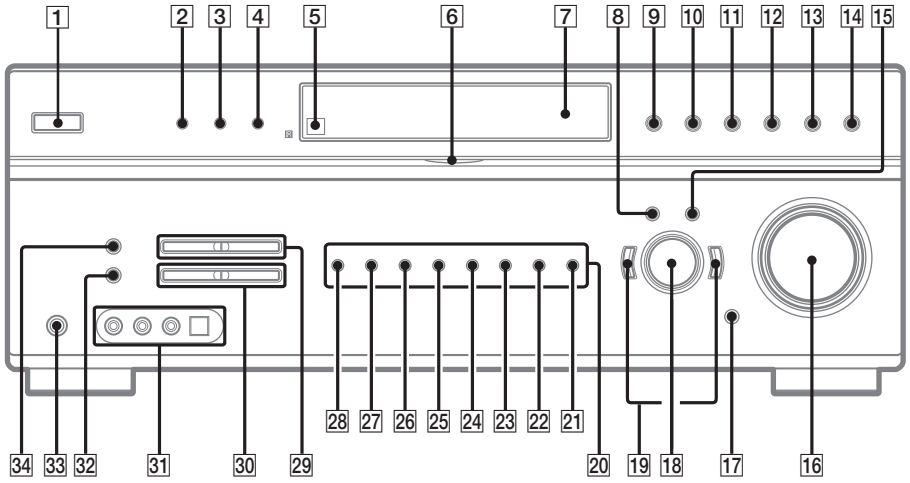

STR-DE698:

Operations Using the Remote RM-AAP001

You can use the remote RM-AAP001 to operate the components in your system.

Before you use your remote

Inserting batteries into the remote

Insert R6 (size-AA) batteries with the + and – properly oriented in the battery compartment. When using the remote, point it at the remote sensor ▣ on the receiver.

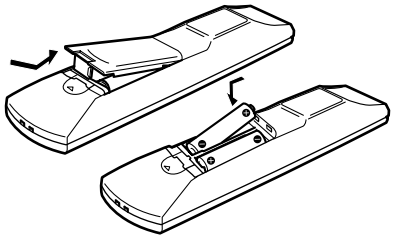

Tip

Under normal conditions, the batteries should last for about 6 months. When the remote no longer operates the receiver, replace all batteries with new ones.

Notes

- Do not leave the remote in an extremely hot or humid place.
- Do not use a new battery with an old one.
- Do not expose the remote sensor to direct sunlight or lighting apparatuses. Doing so may cause a malfunction.
- If you don't use the remote for an extended period of time, remove the batteries to avoid possible damage from battery leakage and corrosion.

Remote button description

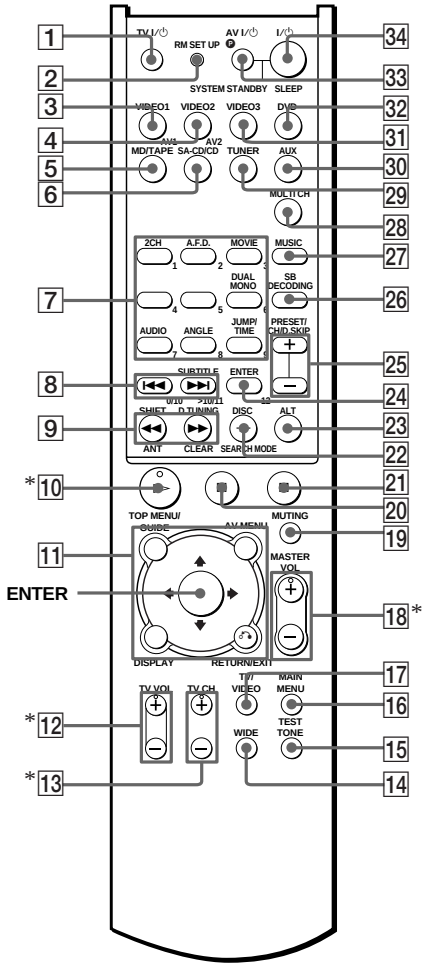

* The ▻, TV VOL +, TV CH + and MASTER VOL + buttons have a tactile dot. Use the tactile dot as a reference when operating the receiver and other audio/video components.

continued

SECTION 2
DISASSEMBLY

Note : This set can be disassemble according to the following sequence.

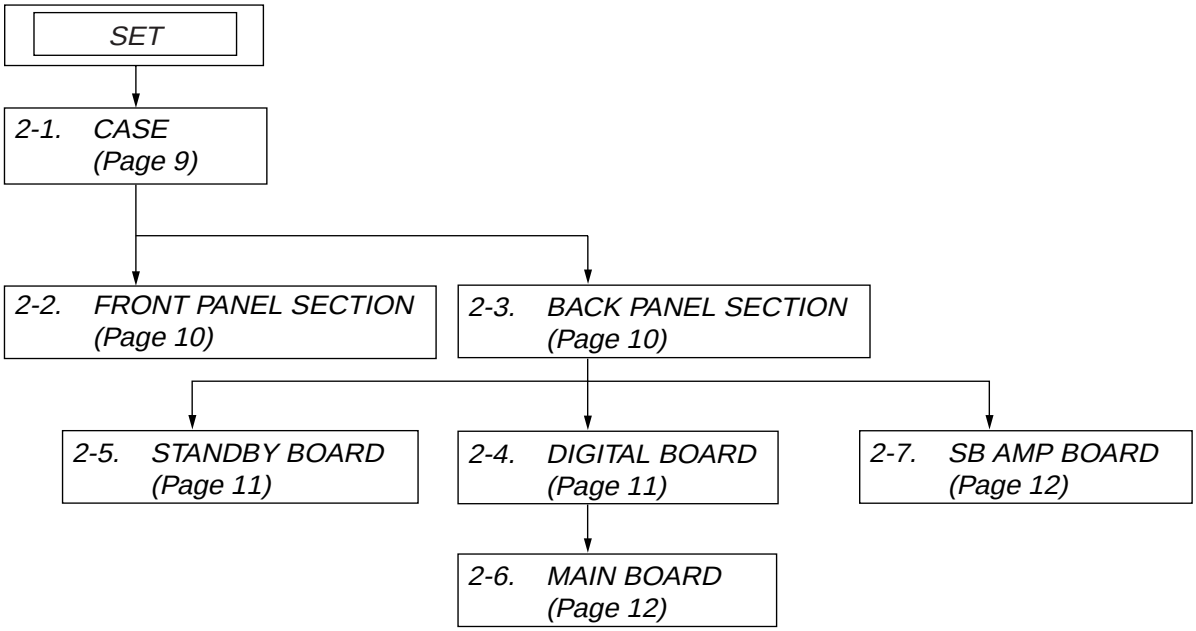

Note : Follow the disassembly procedure in the numerical order given.

2-1. CASE

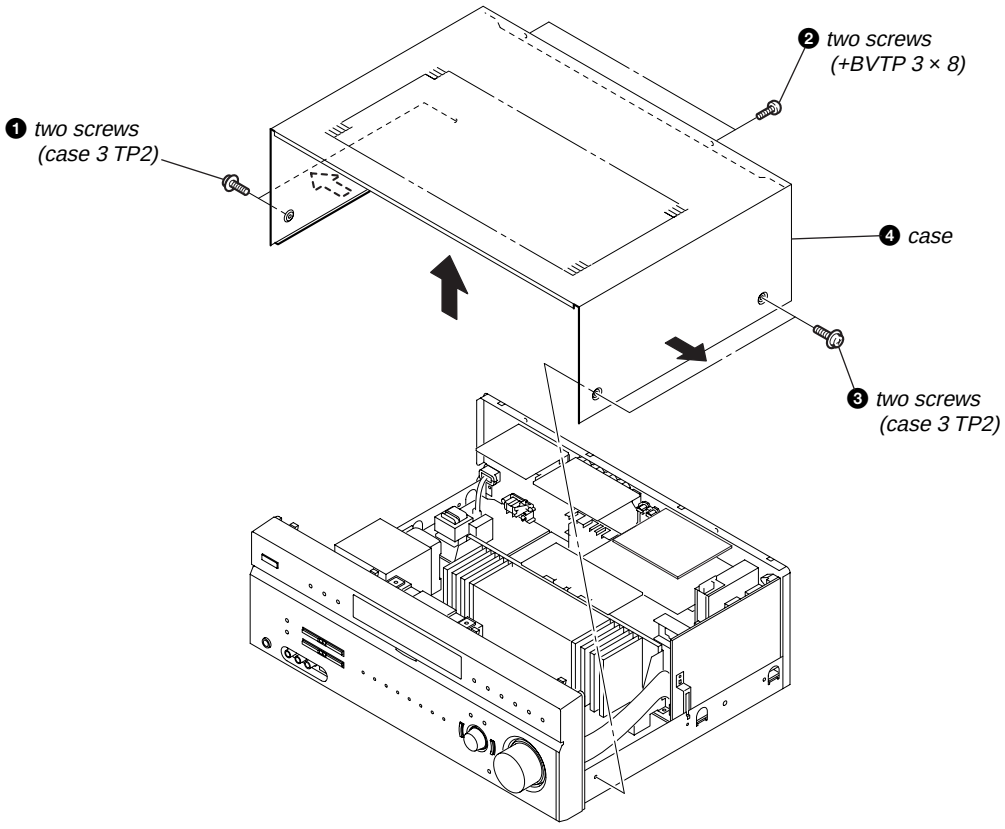

2-2. FRONT PANEL SECTION

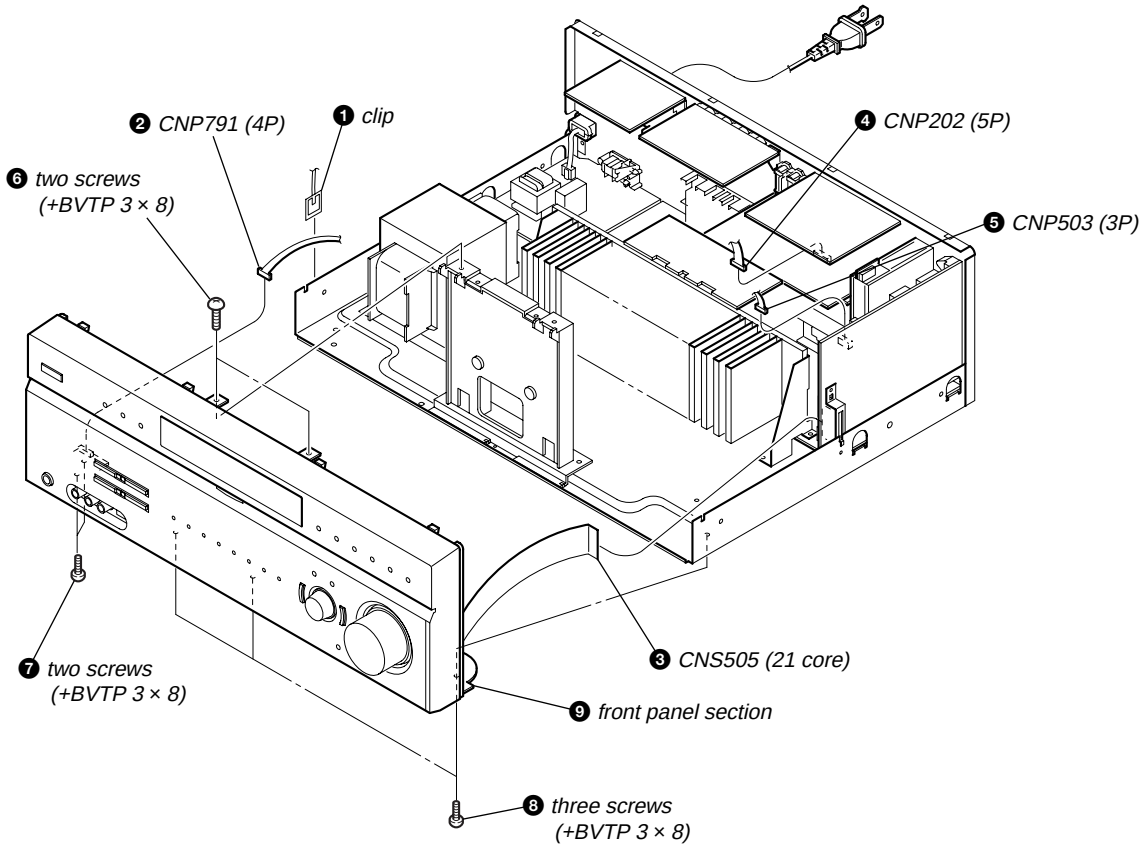
❷ CNP791 (4P)
❶ clip
❹ CNP202 (5P)
❻ two screws (+BVTP 3 × 8)
❺ CNP503 (3P)
❼ two screws (+BVTP 3 × 8)
❸ CNS505 (21 core)
❾ front panel section
❽ three screws (+BVTP 3 × 8)

2-3. BACK PANEL SECTION

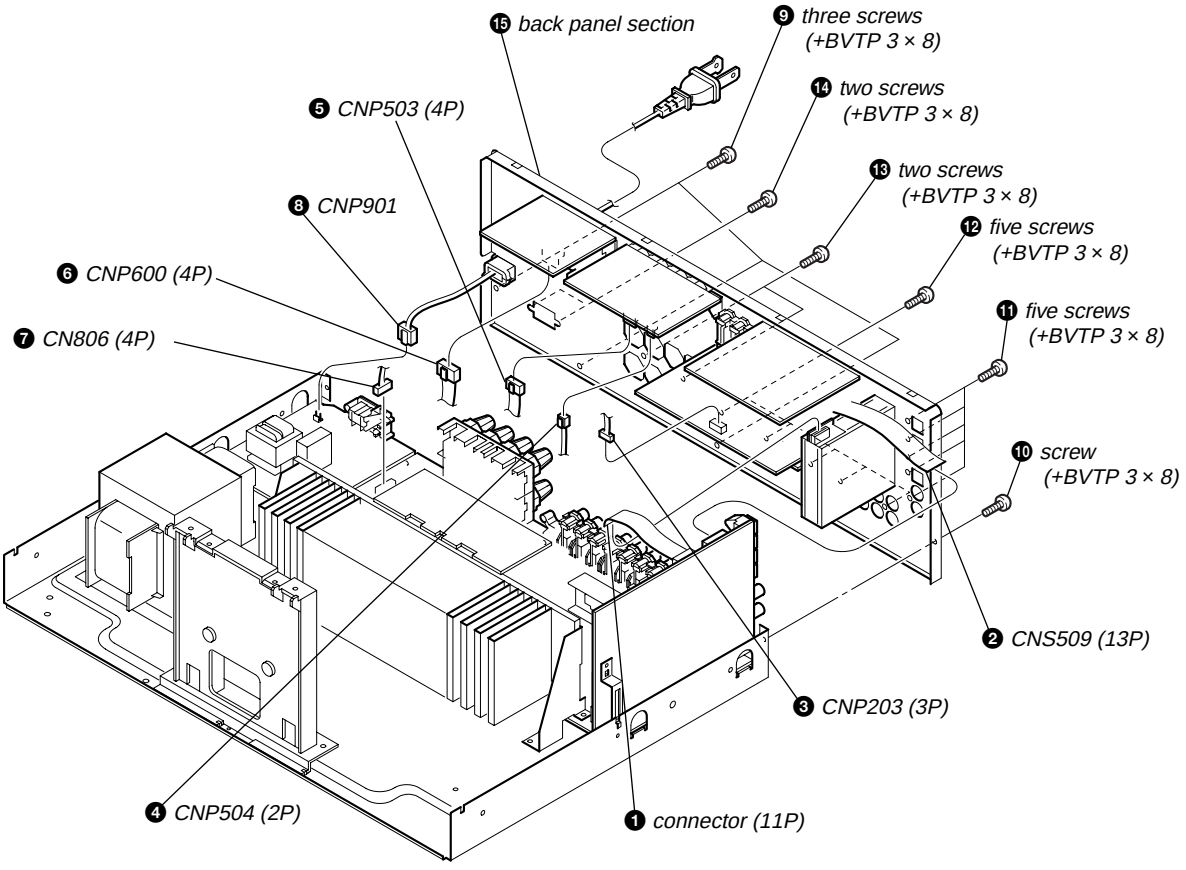
⓯ back panel section
❾ three screws (+BVTP 3 × 8)
❺ CNP503 (4P)
⓮ two screws (+BVTP 3 × 8)
⓭ two screws (+BVTP 3 × 8)
❽ CNP901
⓬ five screws (+BVTP 3 × 8)
❻ CNP600 (4P)
⓫ five screws (+BVTP 3 × 8)
❼ CN806 (4P)
❿ screw (+BVTP 3 × 8)
❷ CNS509 (13P)
❸ CNP203 (3P)
❹ CNP504 (2P)
❶ connector (11P)

2-4. DIGITAL BOARD

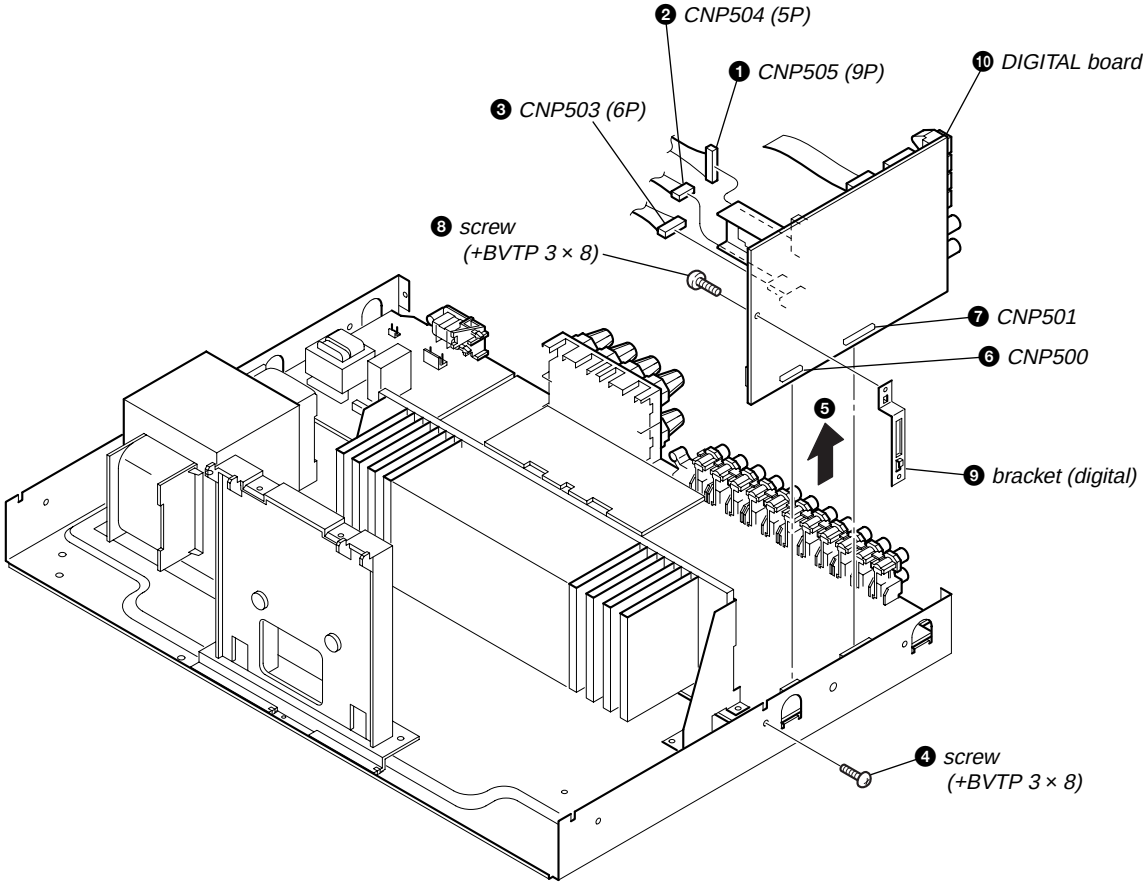

2-5. STANDBY BOARD

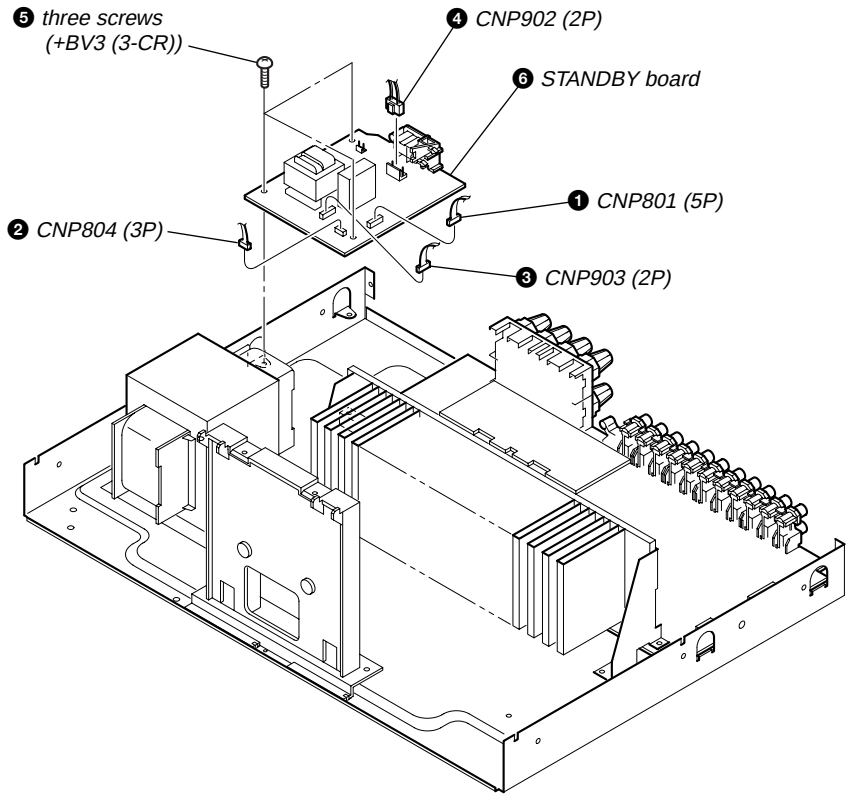

2-6. MAIN BOARD

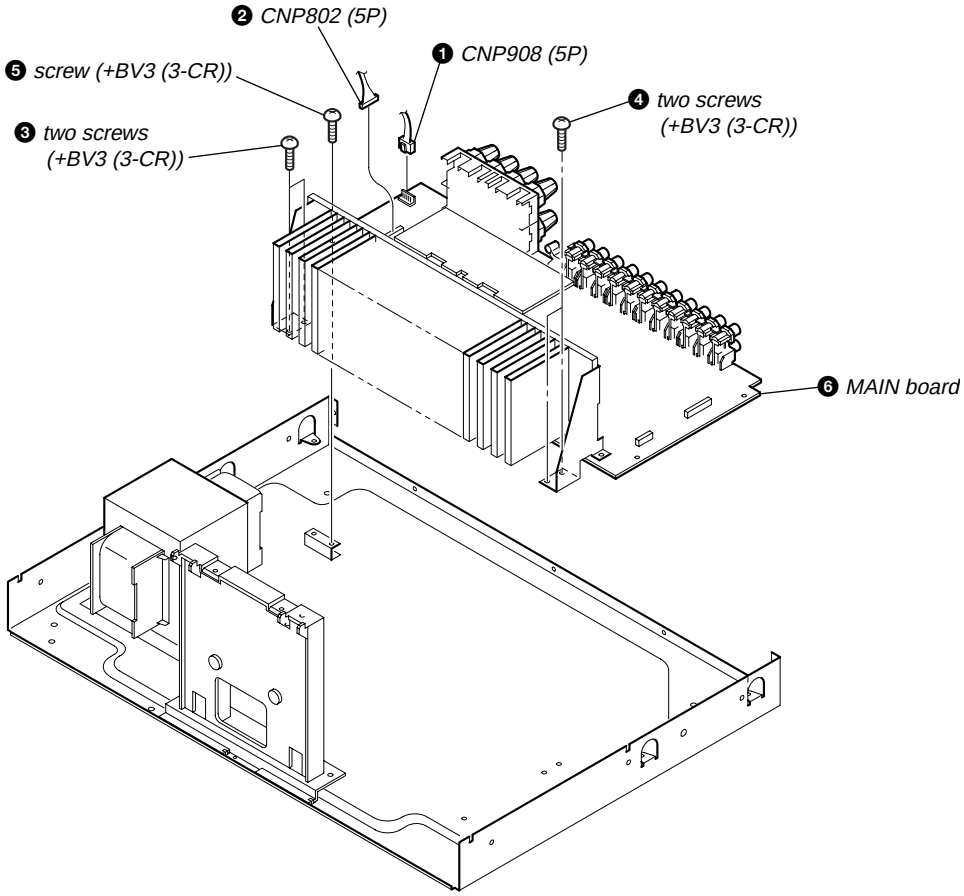

2-7. SB AMP BOARD

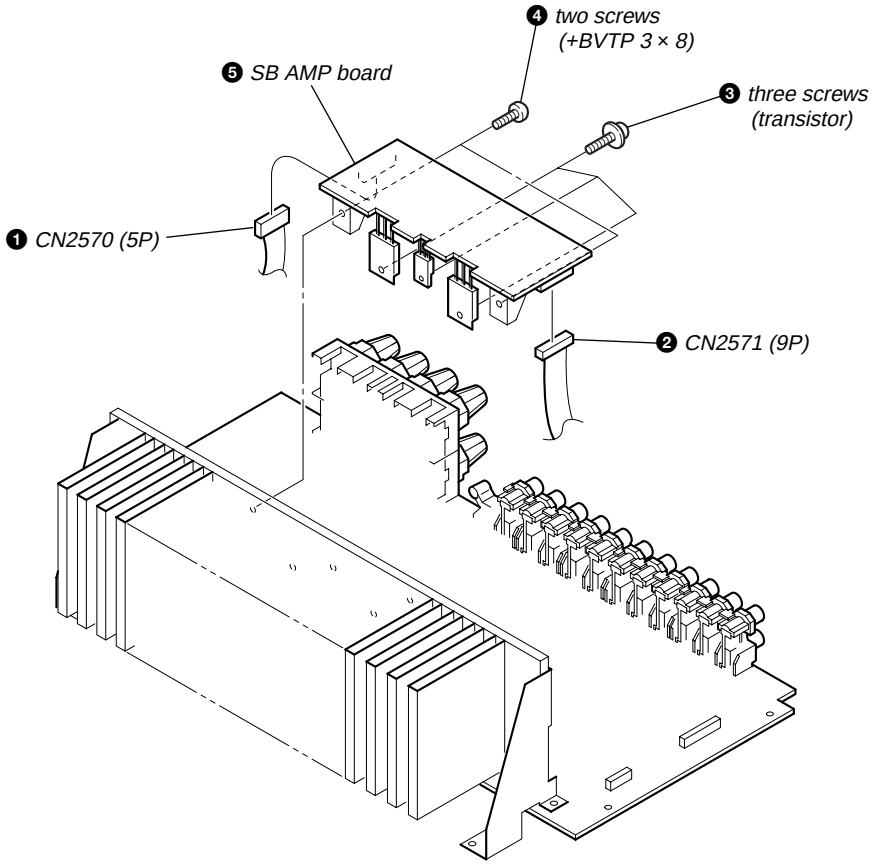

SECTION 3
TEST MODE

FACTORY PRESET MODE

* All preset contents are reset to the default setting.
* Procedure:
  While depressing the [FM MODE] and the [DISPLAY] buttons simultaneously, press the [I/⏻] button to turn on the main power.
  The message "FACTORY" appears for a moment and the present contents are reset to the default values.

AM CHANNEL STEP 9 kHz/10 kHz SELECTION MODE (US, Canadian, E2 model only)

* Either the 9 kHz step or 10 kHz step can be selected for the AM channel step.
* Procedure:
  Press the [AM] (STR-DE598) or [TUNER FM/AM] (STR-DE698/DV10) button to set AM and press the [I/⏻] button to turn off the main power.
  While depressing the [PRESET TUNING +] button or the [TUNING +] button, press the [I/⏻] button to turn on the main power.
  Either the message "9k STEP" or "10k STEP" appears for a moment and select the desired step.

SPEAKER SIZE SELECTION MODE

* Either the normal speaker or micro satellite speaker can be selected.
* Procedure:
  While depressing the [DIMMER] button, press the [I/⏻] button to turn on the main power.
  Either the message "NORM. SP." or "MICRO SP." appears for a moment and select the desired speaker size.

FLUORESCENT INDICATOR TUBE TEST MODE

* All fluorescent segments are tested.
  When this test is activated, all segments light on at the same time, then each segment lights on one after another.
* Procedure:
  While depressing the [TUNING –] and the [SPEAKERS (OFF/A/B/A+B)] buttons simultaneously, press the [I/⏻] button to turn on the main power.

1. ALL segments light on.

[2CH], [A.F.D.], [MOVIE], [MUSIC] and [MULTI CHANNEL DECODING] LED light on.

2. Press the [VIDEO 1] button, confirm display.

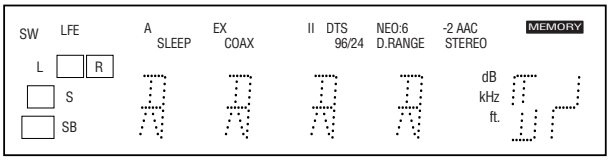

[A.F.D.] and [MUSIC] LED light on.

3. Press the [VIDEO 1] button, confirm display.

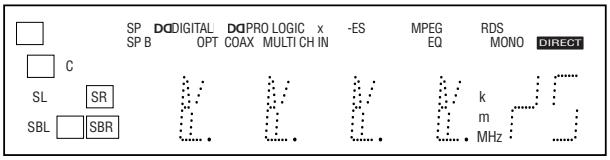

[2CH], [MOVIE] and [MULTI CHANNEL DECODING] LED light on.

4. Press the [VIDEO 1] button, all segments and all LEDs light off.

5. Every pressing the [VIDEO 1] button turns on each segment and LED one after another in the same order.
   (Not only the [VIDEO 1] button, but also the other buttons such as [VIDEO 2], [VIDEO 3], [DVD], [MD/TAPE], [SA-CD/CD], [FM] (STR-DE598) or [TUNER FM/AM] (STR-DE698/DV10) and [AM] (STR-DE598) or [AUX] (STR-DE698/DV10) can be used.)

SOUND FIELD CLEAR MODE

* The preset sound field is cleared when this mode is activated.
  Use this mode before returning the product to clients upon completion of repair.
* Procedure:
  While depressing the [2CH] button, press the [I/⏻] button to turn on the main power.
  The message "SF. CLR." appears for a moment and initialization is performed.

SOFTWARE VERSION DISPLAY MODE

* The software version is displayed.
* Procedure:
  While depressing the [TUNING –] and the [DISPLAY] buttons simultaneously, press the [I/⏻] button to turn on the main power.
  The model name, destination and the software version are displayed for a moment.

KEY CHECK MODE

* Button check
* Procedure:
  While depressing the [TUNING –] and the [MAIN MENU] buttons simultaneously, press the [I/⏻] button to turn on the main power.
  Either the message "REST 30" (STR-DE598) or "REST 28" (STR-DE698/DV10) appears.
  Every pressing of any button other than the [I/⏻] counts down the buttons. The buttons which are already counted once are not counted again. When all buttons are pressed "REST 00" appears.

AUTOBETICAL MODE (AEP, UK model only)

* When this mode is used, the receiver scans the broadcasts that can be received by the tuner, and sets up the broadcasts.
  Be sure to start scanning after connecting the antenna.
* Procedure:
  Check that the antenna is connected.
  While depressing the [MEMORY] button, press the [I/⏻] button to turn on the main power.
  The message "AUTO-BETICAL SELECT" appears for a moment and the receiver starts scanning.

COMMAND MODE SELECTION MODE

* The command mode (AV1 or AV2) of the remote commander can be selected.
* Procedure:
  While depressing the [ENTER] button, press the [I/⏻] button to turn on the main power.
  Either the message "C.MODE.AV 1" or "C.MODE.AV 2" appears for a moment and select the desired mode.

SECTION 4
DIAGRAMS

4-1. CIRCUIT BOARDS LOCATION

— STR-DE598 —

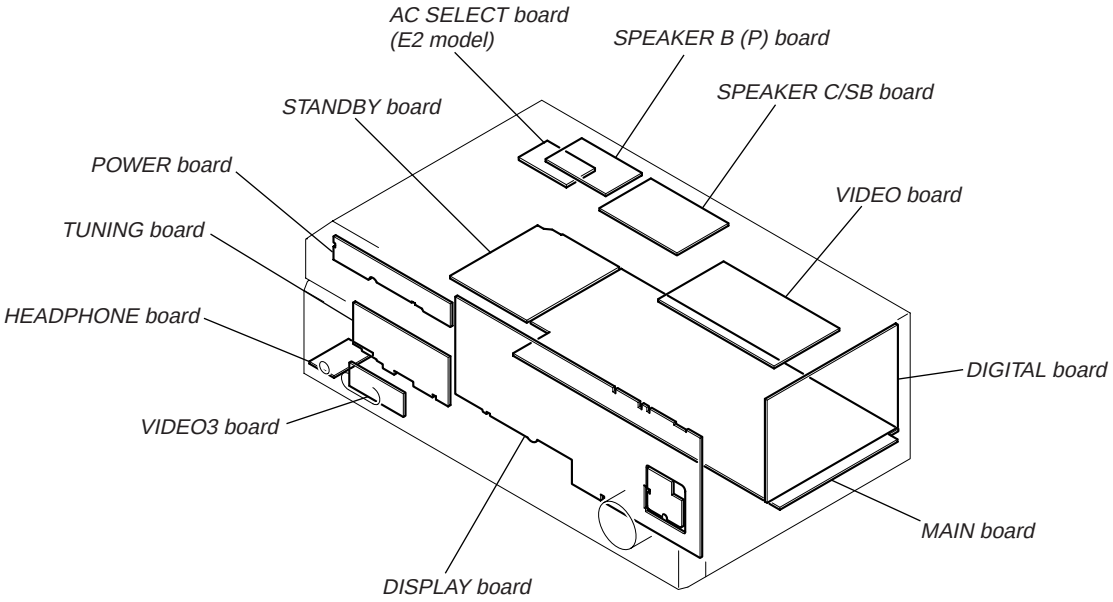

— STR-DE698/DV10 —

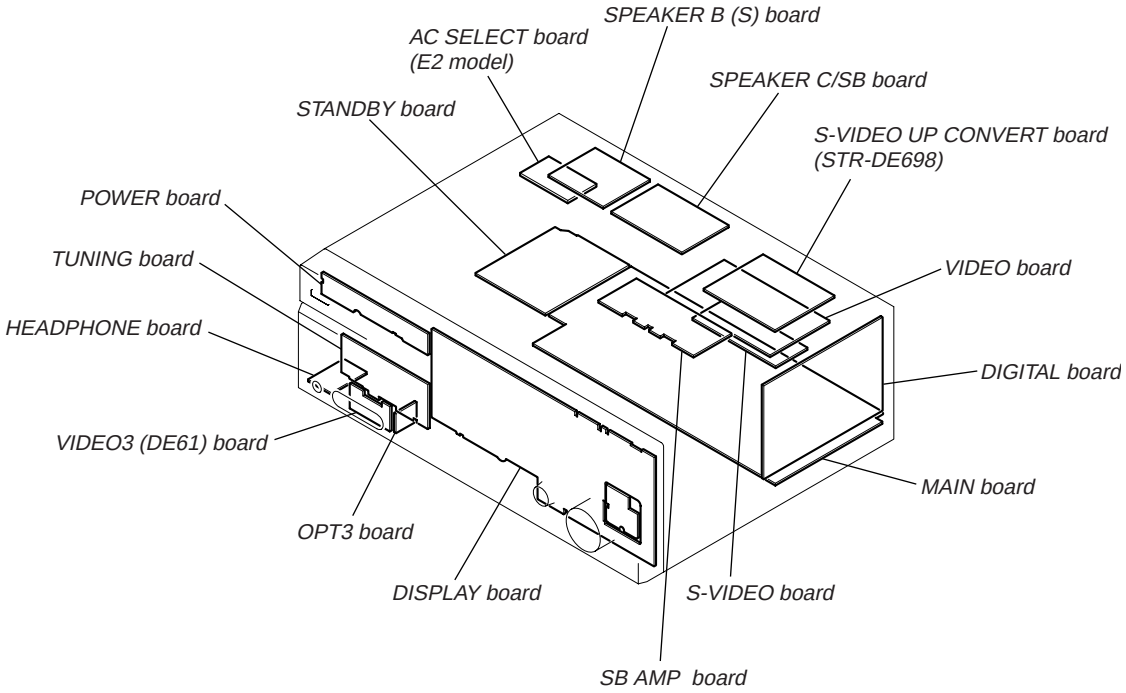

4-2. BLOCK DIAGRAM — TUNER/AUDIO SECTION —

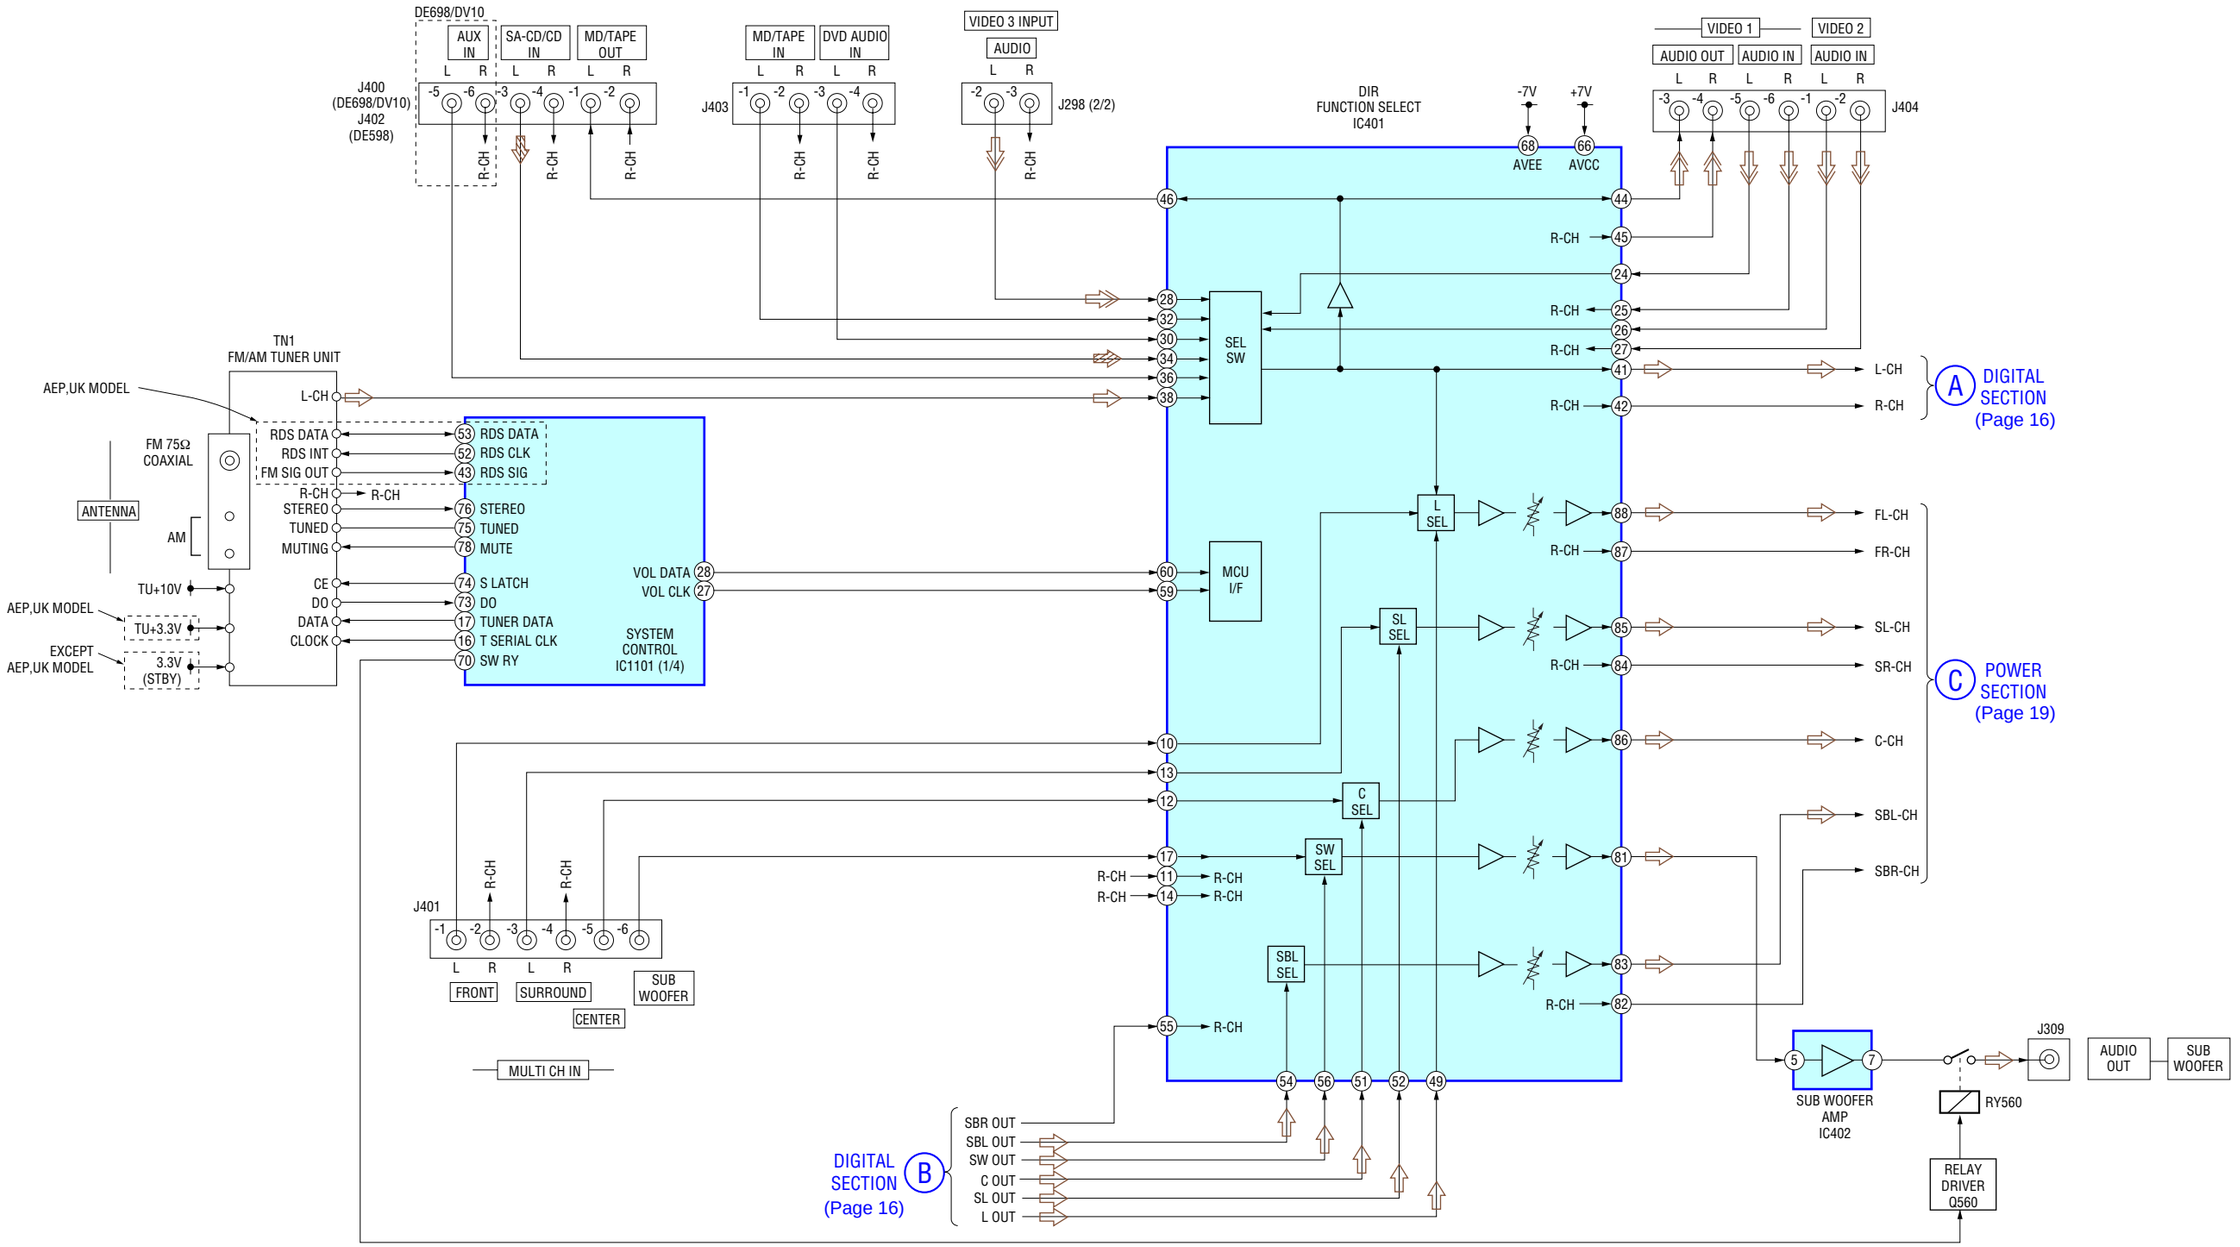

- Signal path
  - ⇨ : TUNER (FM/AM)
  - ⇨ : VIDEO (AUDIO)
  - ⇨ : CD (ANALOG)
- R-ch is omitted due to same as L-ch.

4-3. BLOCK DIAGRAM — DIGITAL SECTION —

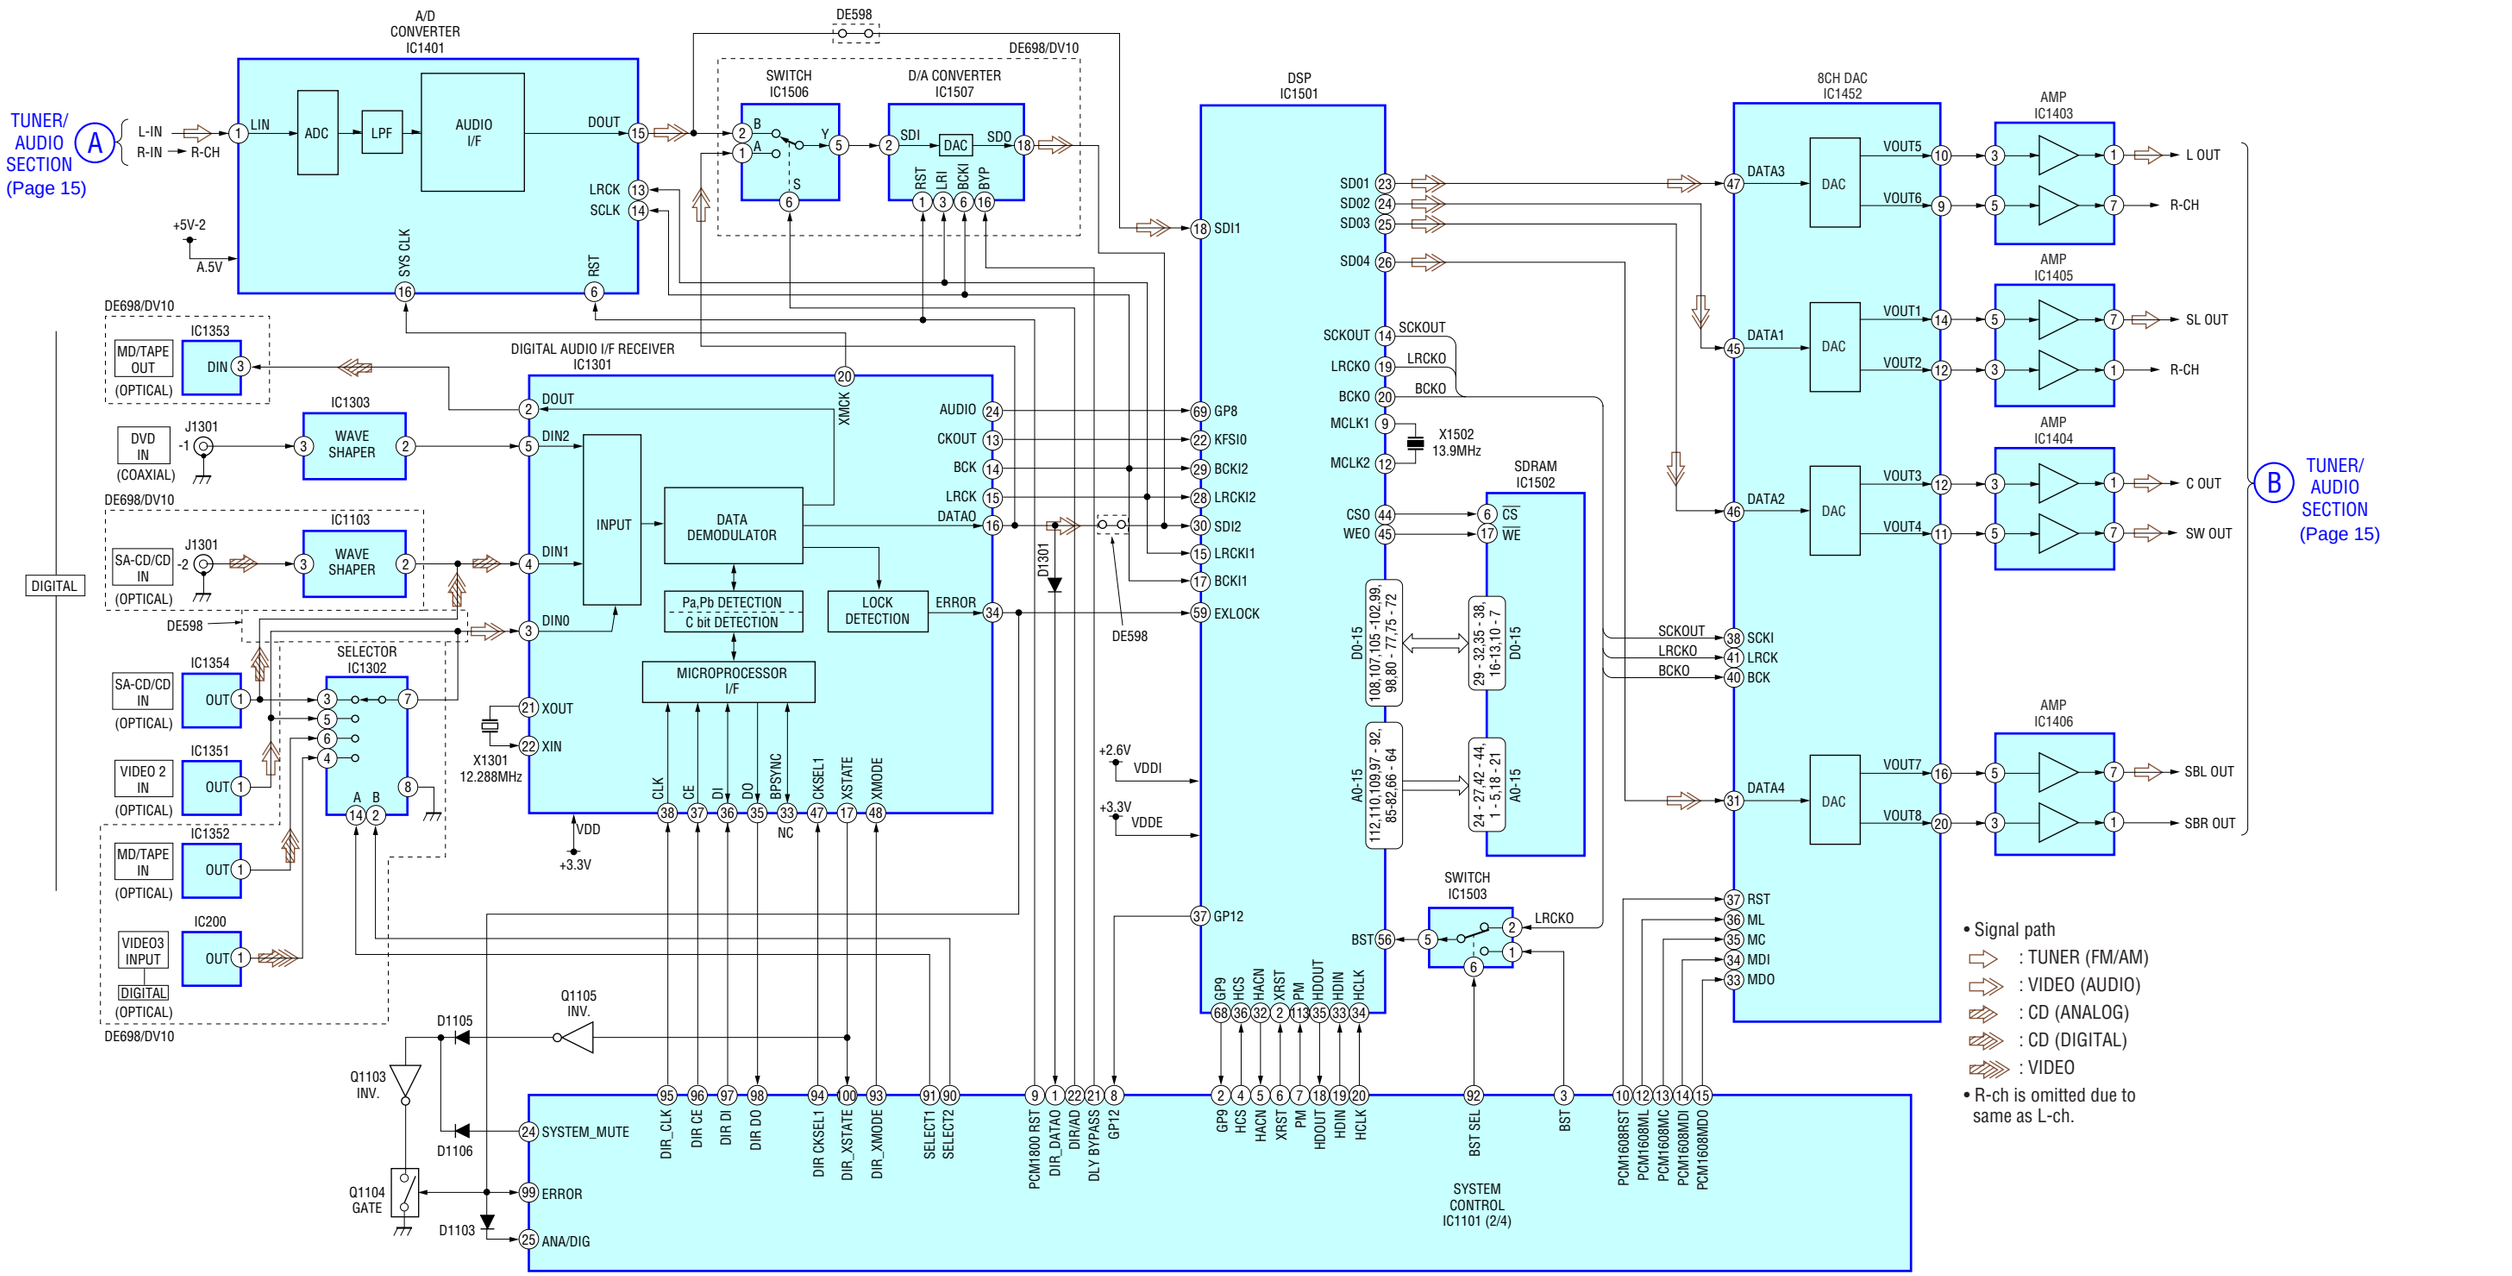

4-4. BLOCK DIAGRAM — VIDEO SECTION —

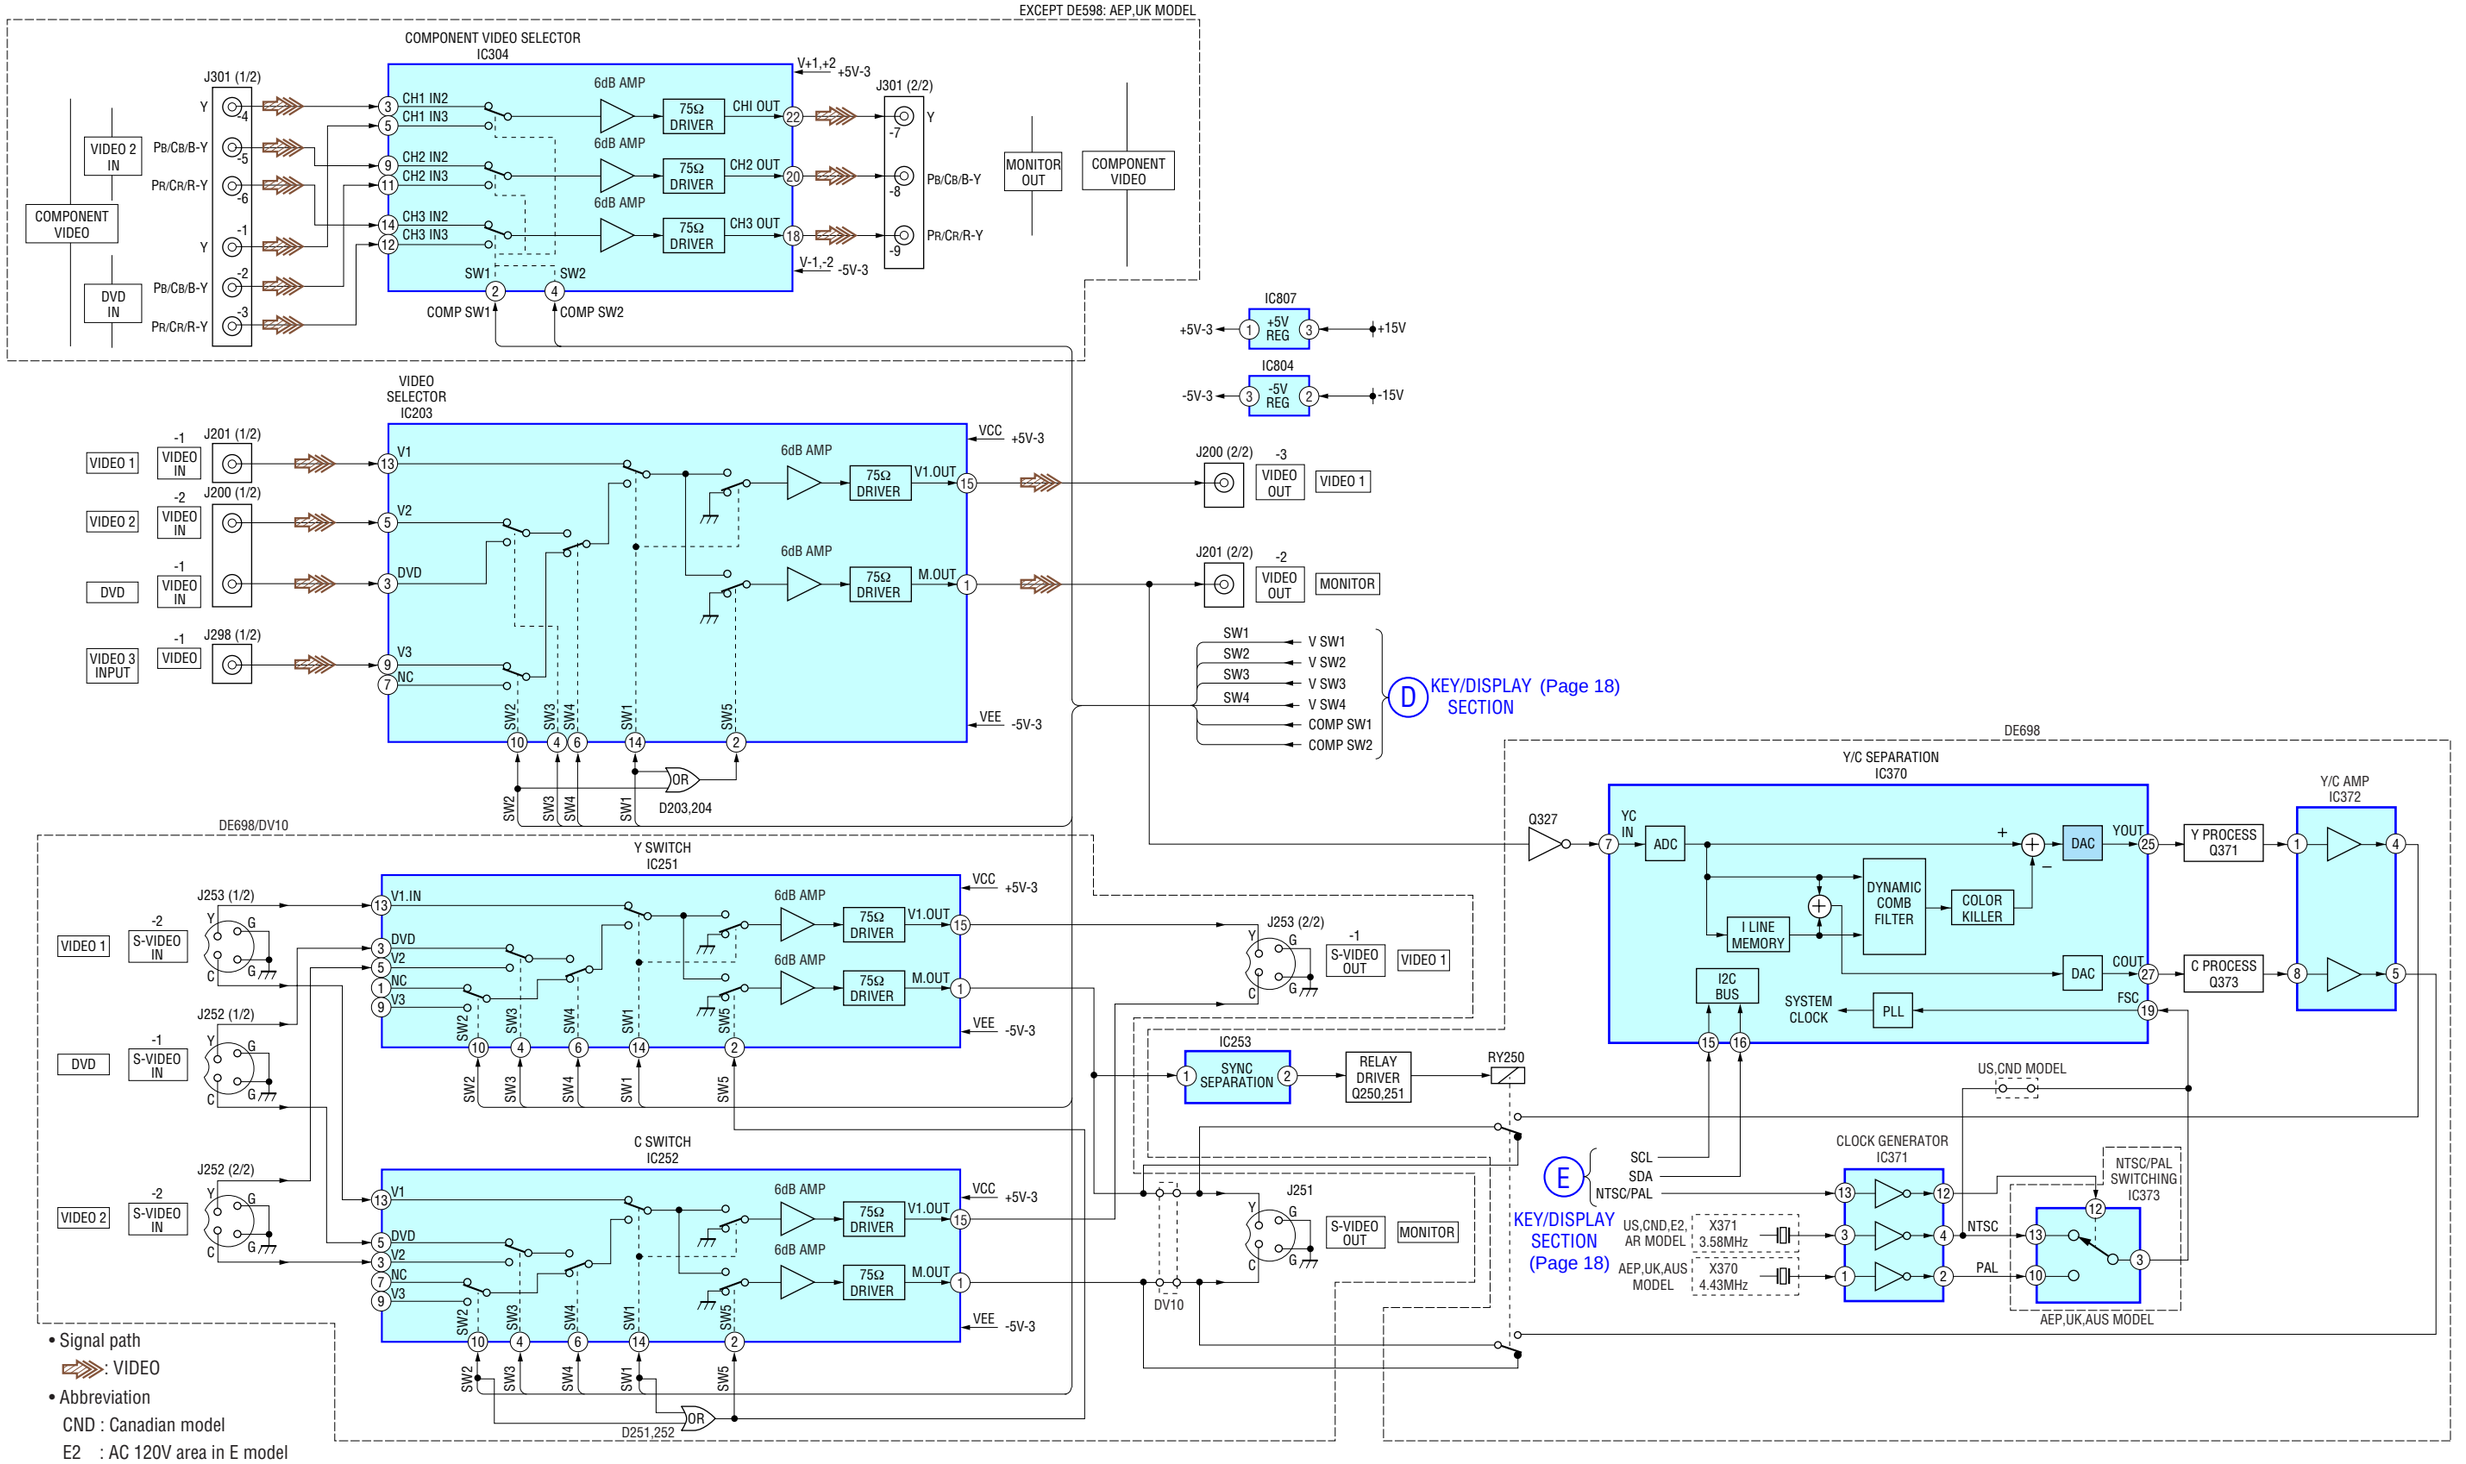

- Signal path
  ⇒: VIDEO
- Abbreviation
  CND : Canadian model
  E2 : AC 120V area in E model
  AUS : Australian model
  AR : Argentina model

4-5. BLOCK DIAGRAM — KEY/DISPLAY SECTION —

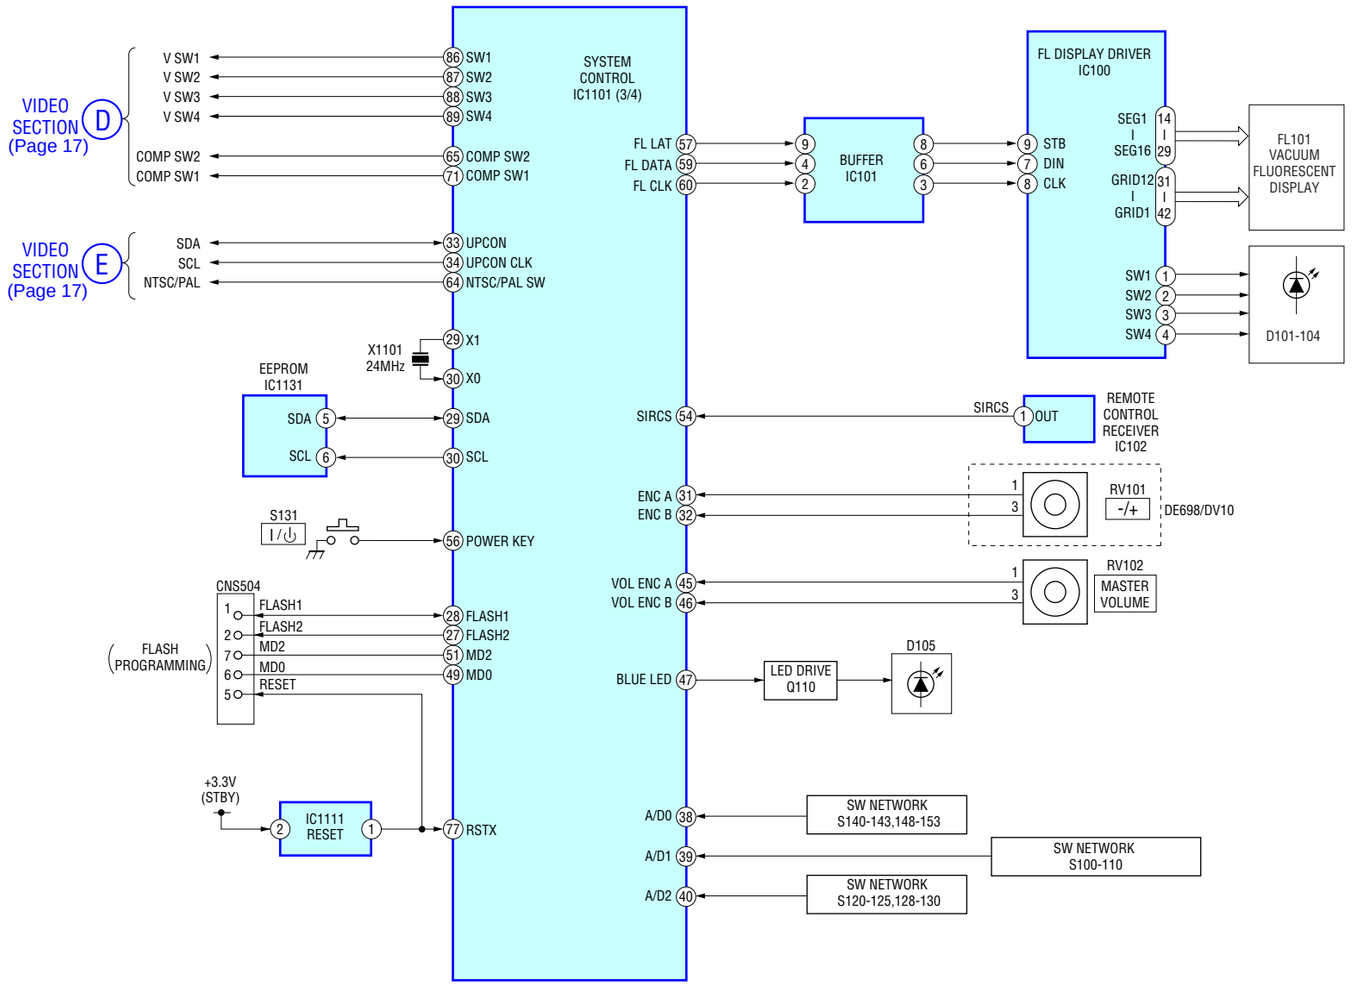

4-6. BLOCK DIAGRAM — POWER SECTION —

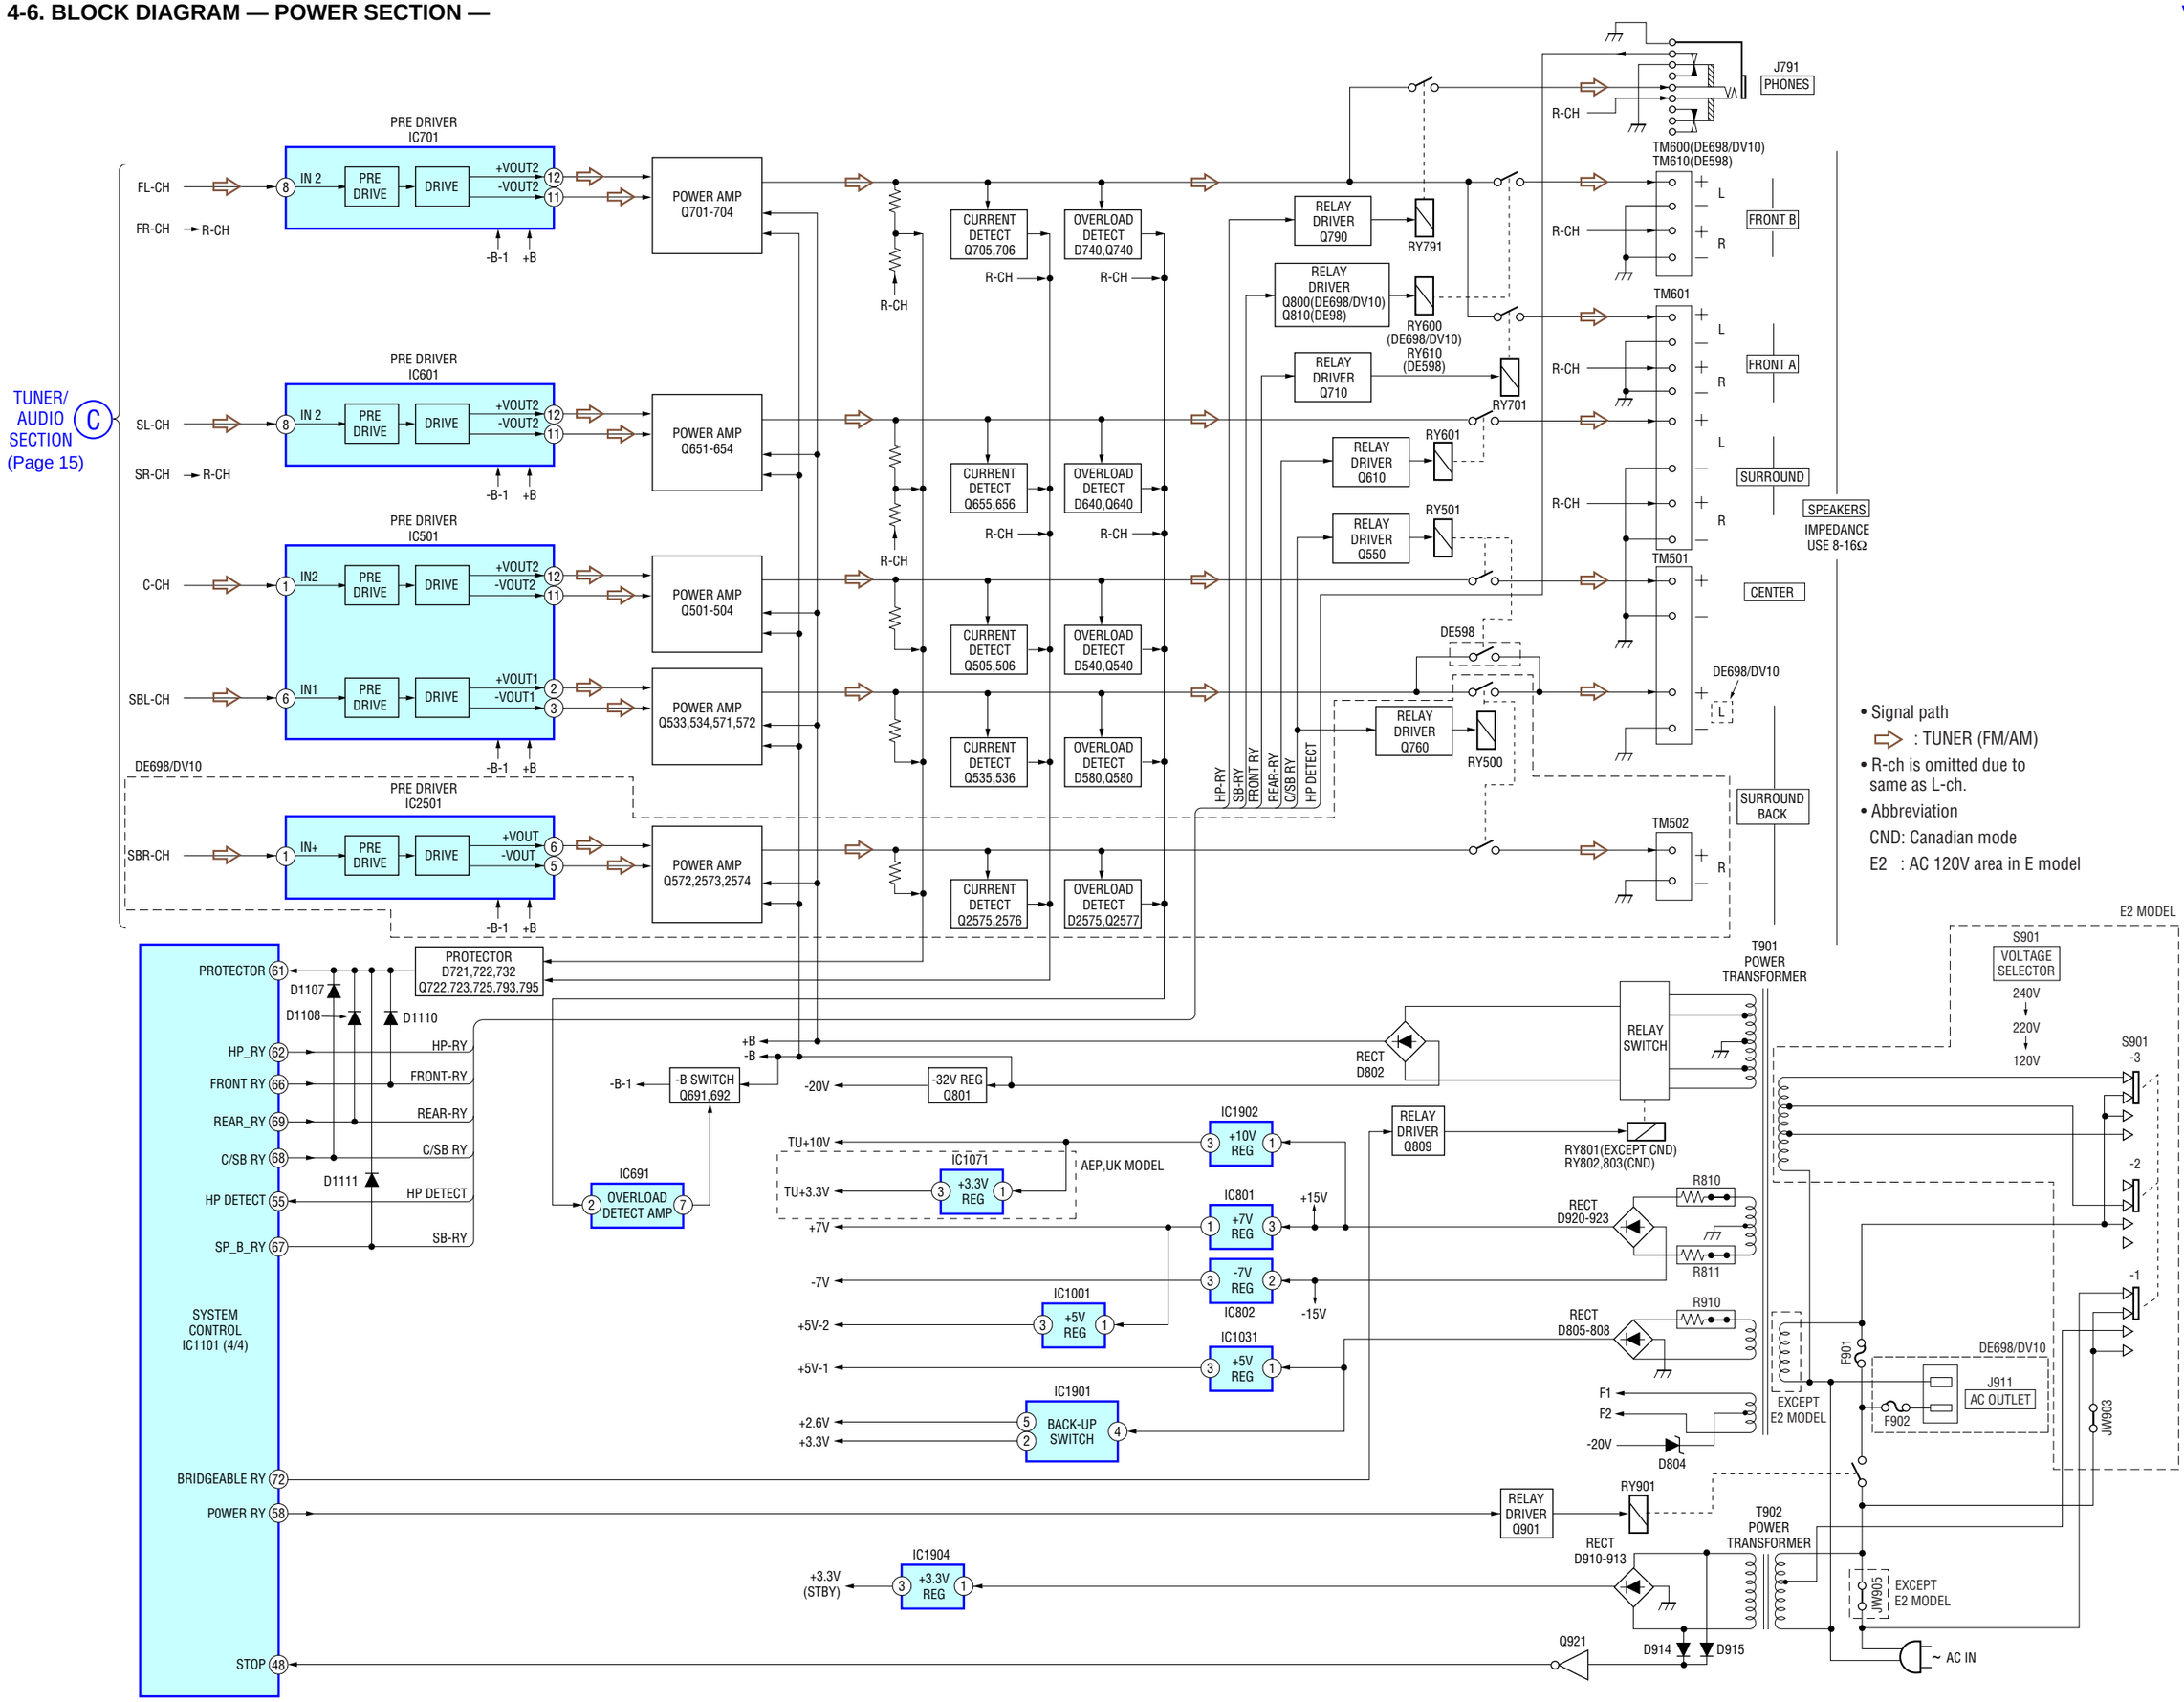

THIS NOTE IS COMMON FOR PRINTED WIRING BOARDS AND SCHEMATIC DIAGRAMS.
(In addition to this, the necessary note is printed in each block.)

for schematic diagram:

- All capacitors are in µF unless otherwise noted. (p: pF) 50 WV or less are not indicated except for electrolytics and tantalums.
- All resistors are in Ω and 1/4 W or less unless otherwise specified.
- △ : internal component.
- : nonflammable resistor.
- : fusible resistor.
- : panel designation.

Note:	**Note:**
The components identified by mark ⚠ or dotted line with mark ⚠ are critical for safety. Replace only with part number specified.	Les composants identifiés par une marque ⚠ sont critiques pour la sécurité. Ne les remplacer que par une piéce portant le numéro spécifié.

- : B+ Line.
- : B– Line.
- Voltage and waveforms are dc with respect to ground under no-signal (detuned) conditions.
  no mark : FM
- Voltages are taken with a VOM (Input impedance 10 MΩ). Voltage variations may be noted due to normal production tolerances.
- Waveforms are taken with a oscilloscope. Voltage variations may be noted due to normal production tolerances.
- Circled numbers refer to waveforms.
- Signal path.
  - : TUNER (FM/AM)
  - : VIDEO (AUDIO)
  - : VIDEO
  - : CD (ANALOG)
  - : CD (DIGITAL)
- Abbreviation
  - CND : Canadian model.
  - E2 : AC 120 V area in E model.
  - AUS : Australian model.
  - AR : Argentina model.
  - KR : Korean model.
  - TW : Taiwan model.

for printed wiring boards:

- : parts extracted from the component side.
- △ : internal component.
- : Pattern from the side which enables seeing.

Caution:	
Pattern face side: (Side B)	Parts on the pattern face side seen from the pattern face are indicated.
Parts face side: (Side A)	Parts on the parts face side seen from the parts face are indicated.

- Abbreviation
  - CND : Canadian model.
  - E2 : AC 120 V area in E model.
  - AUS : Australian model.
  - AR : Argentina model.
  - KR : Korean model.
  - TW : Taiwan model.



These are omitted.

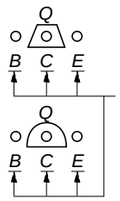

These are omitted.

• Waveforms
— DIGITAL Board —

① IC1301 ⑬ (CKOUT)

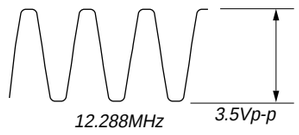

1V/DIV, 50nsec/DIV

② IC1301 ⑭ (BCK)

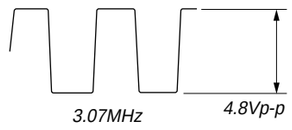

1V/DIV, 0.2µs/DIV

③ IC1301 ㉑ (XOUT)

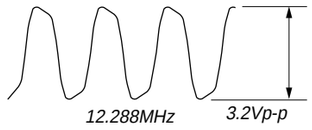

1V/DIV, 50nsec/DIV

④ IC1501 ⑨ (MCLK1)

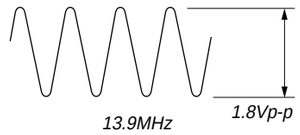

1V/DIV, 50nsec/DIV

⑤ IC1501 ⑫ (MCLK2)

1V/DIV, 50nsec/DIV

⑥ IC1501 ⑭ (SCKOUT)

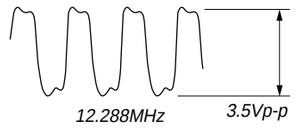

1V/DIV, 50nsec/DIV

⑦ IC1101 ㉝ (X1)

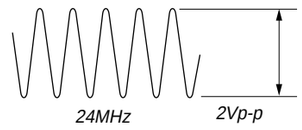

1V/DIV, 50nsec/DIV

— S-VIDEO UP CONVERT Board —
(STR-DE698 only)

① IC371 ①

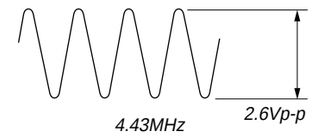

1V/DIV, 20nsec/DIV

② IC371 ③

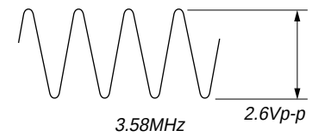

1V/DIV, 20nsec/DIV

4-7. PRINTED WIRING BOARDS — MAIN SECTION — • Refer to page 14 for Circuit Boards Location.

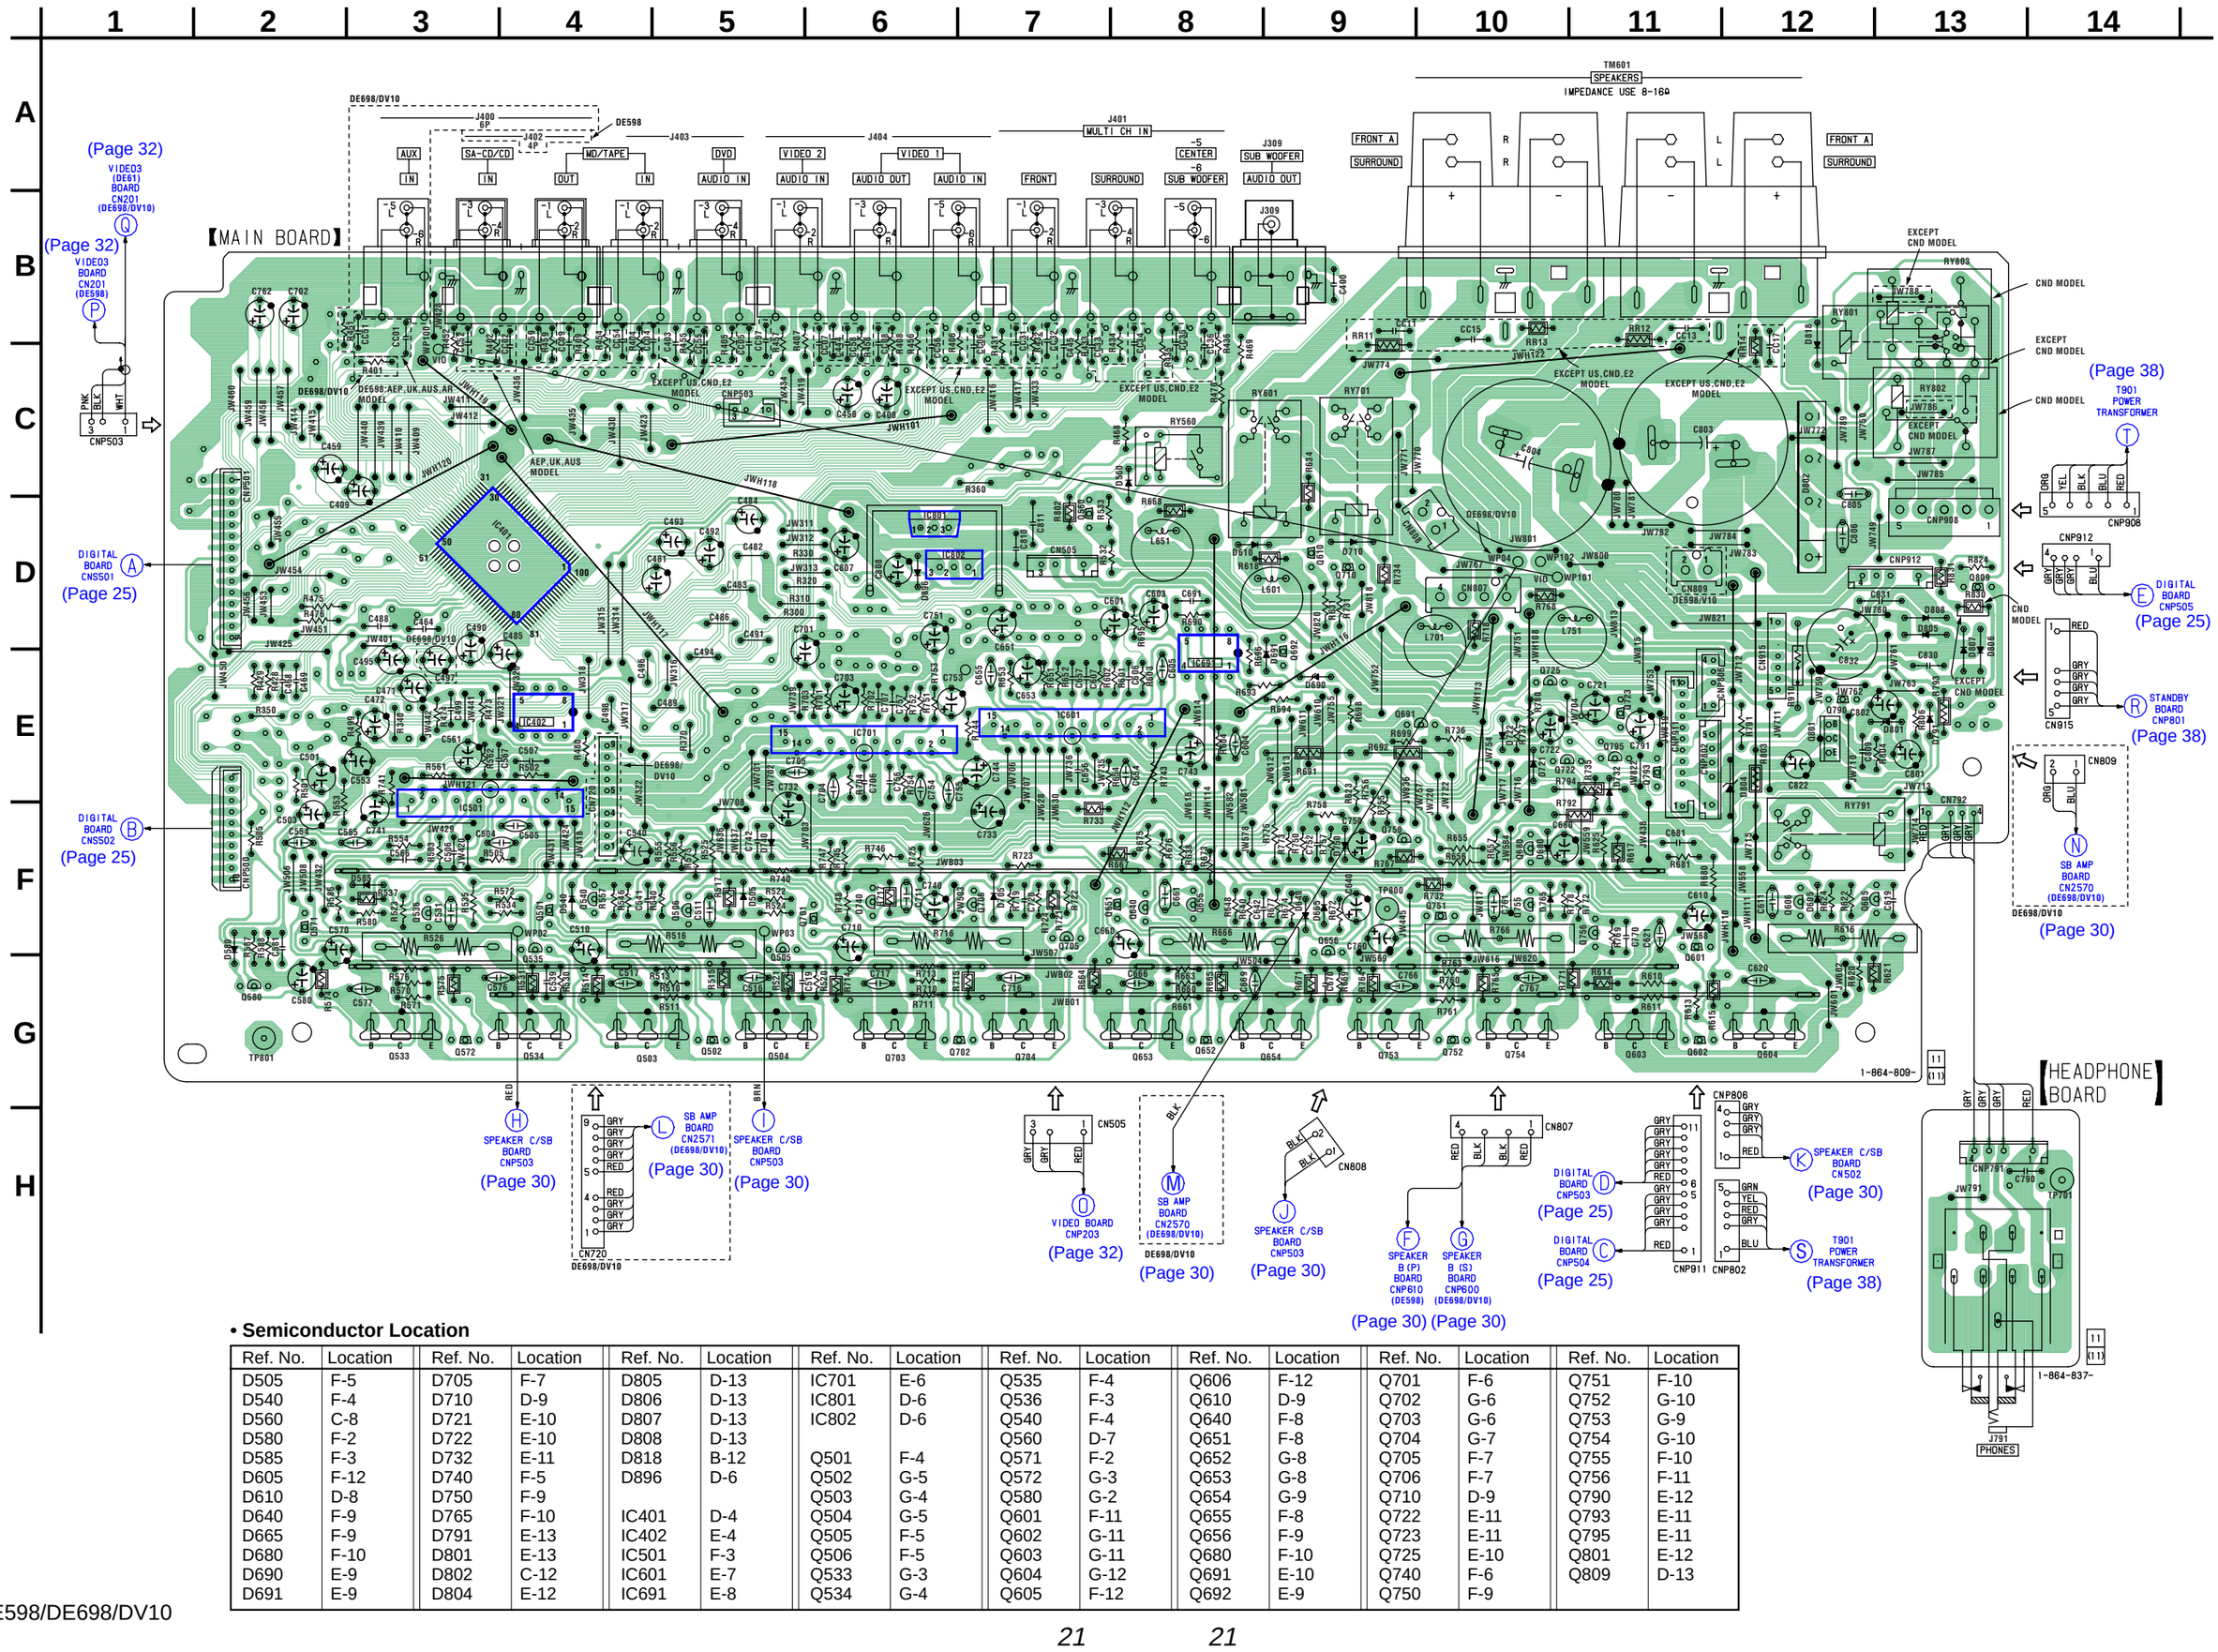

• **Semiconductor Location**

Ref. No.	Location	Ref. No.	Location	Ref. No.	Location	Ref. No.	Location	Ref. No.	Location	Ref. No.	Location	Ref. No.	Location	Ref. No.	Location
D505	F-5	D705	F-7	D805	D-13	IC701	E-6	Q535	F-4	Q606	F-12	Q701	F-6	Q751	F-10
D540	F-4	D710	D-9	D806	D-13	IC801	D-6	Q536	F-3	Q610	D-9	Q702	G-6	Q752	G-10
D560	C-8	D721	E-10	D807	D-13	IC802	D-6	Q540	F-4	Q640	F-8	Q703	G-6	Q753	G-9
D580	F-2	D722	E-10	D808	D-13			Q560	D-7	Q651	F-8	Q704	G-7	Q754	G-10
D585	F-3	D732	E-11	D818	B-12	Q501	F-4	Q571	F-2	Q652	G-8	Q705	F-7	Q755	F-10
D605	F-12	D740	F-5	D896	D-6	Q502	G-5	Q572	G-3	Q653	G-8	Q706	F-7	Q756	F-11
D610	D-8	D750	F-9			Q503	G-4	Q580	G-2	Q654	G-9	Q710	D-9	Q790	E-12
D640	F-9	D765	F-10	IC401	D-4	Q504	G-5	Q601	F-11	Q655	F-8	Q722	E-11	Q793	E-11
D665	F-9	D791	E-13	IC402	E-4	Q505	F-5	Q602	G-11	Q656	F-9	Q723	E-11	Q795	E-11
D680	F-10	D801	E-13	IC501	F-3	Q506	F-5	Q603	G-11	Q680	F-10	Q725	E-10	Q801	E-12
D690	E-9	D802	C-12	IC601	E-7	Q533	G-3	Q604	G-12	Q691	E-10	Q740	F-6	Q809	D-13
D691	E-9	D804	E-12	IC691	E-8	Q534	G-4	Q605	F-12	Q692	E-9	Q750	F-9		

4-8. SCHEMATIC DIAGRAM — MAIN SECTION (1/2) —

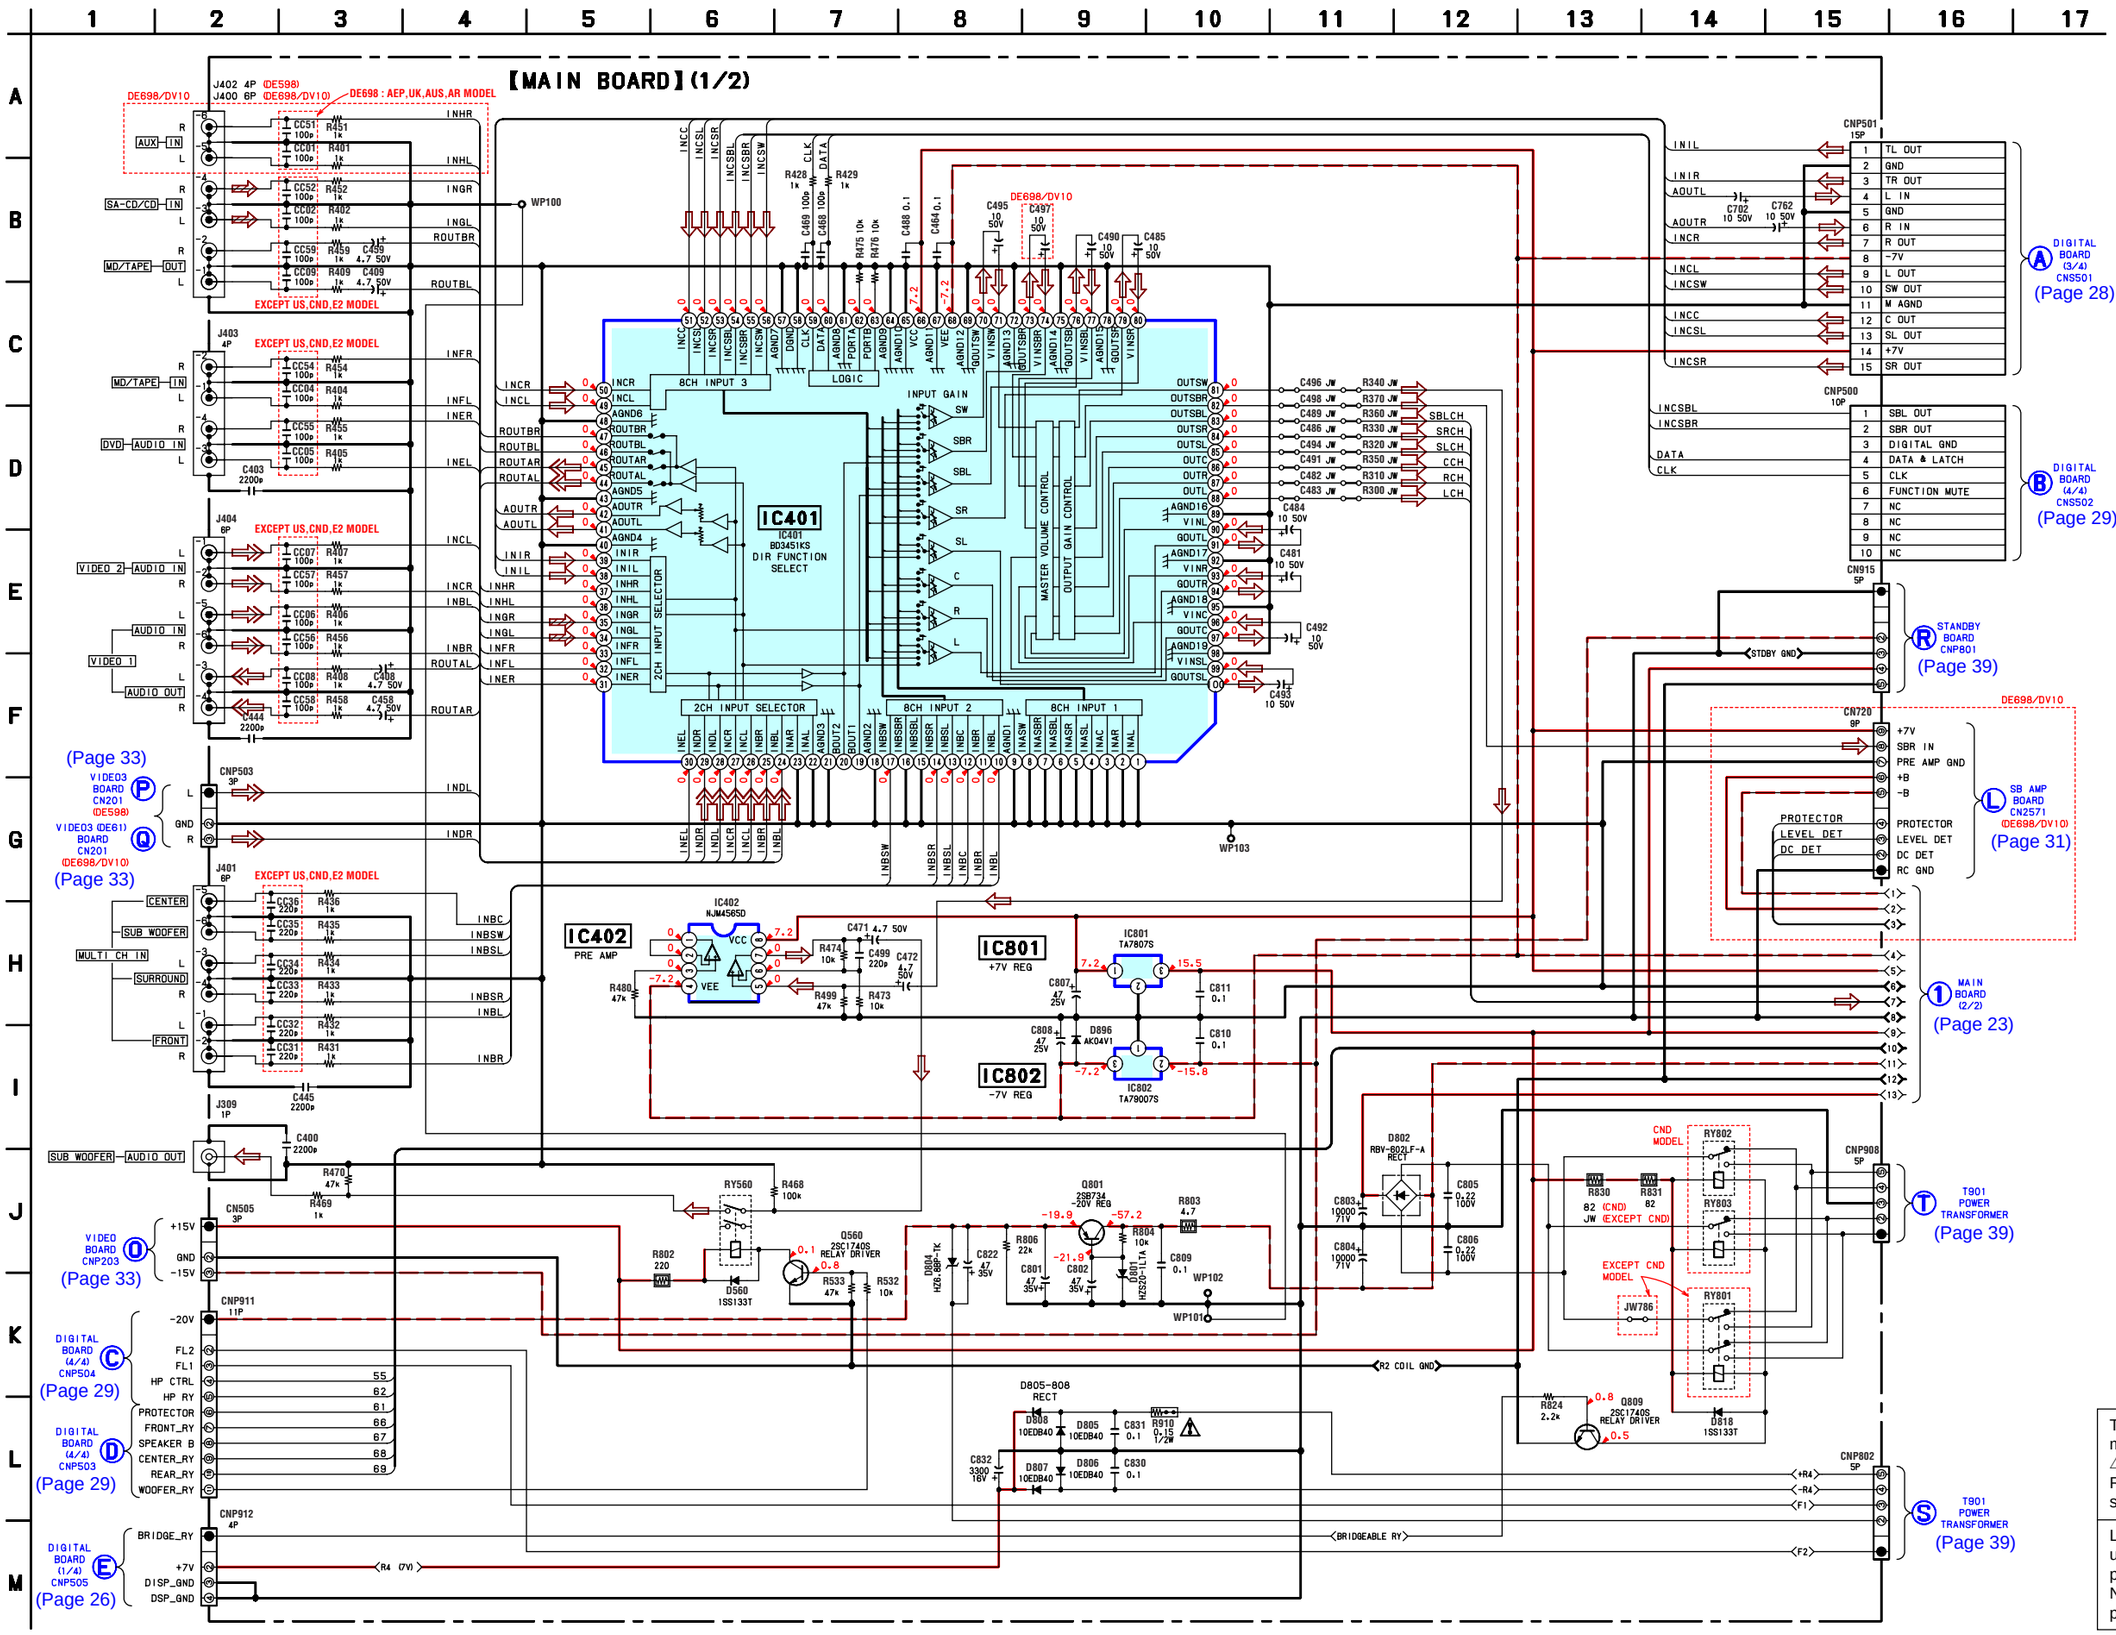

The components identified by mark ⚠ or dotted line with mark ⚠ are critical for safety.
Replace only with part number specified.

Les composants identifiés par une marque ⚠ sont critiques pour la sécurité.
Ne les remplacer que par une pièce portant le numéro spécifié.

4-9. SCHEMATIC DIAGRAM — MAIN SECTION (2/2) — • Refer to page 40 for IC Block Diagrams.

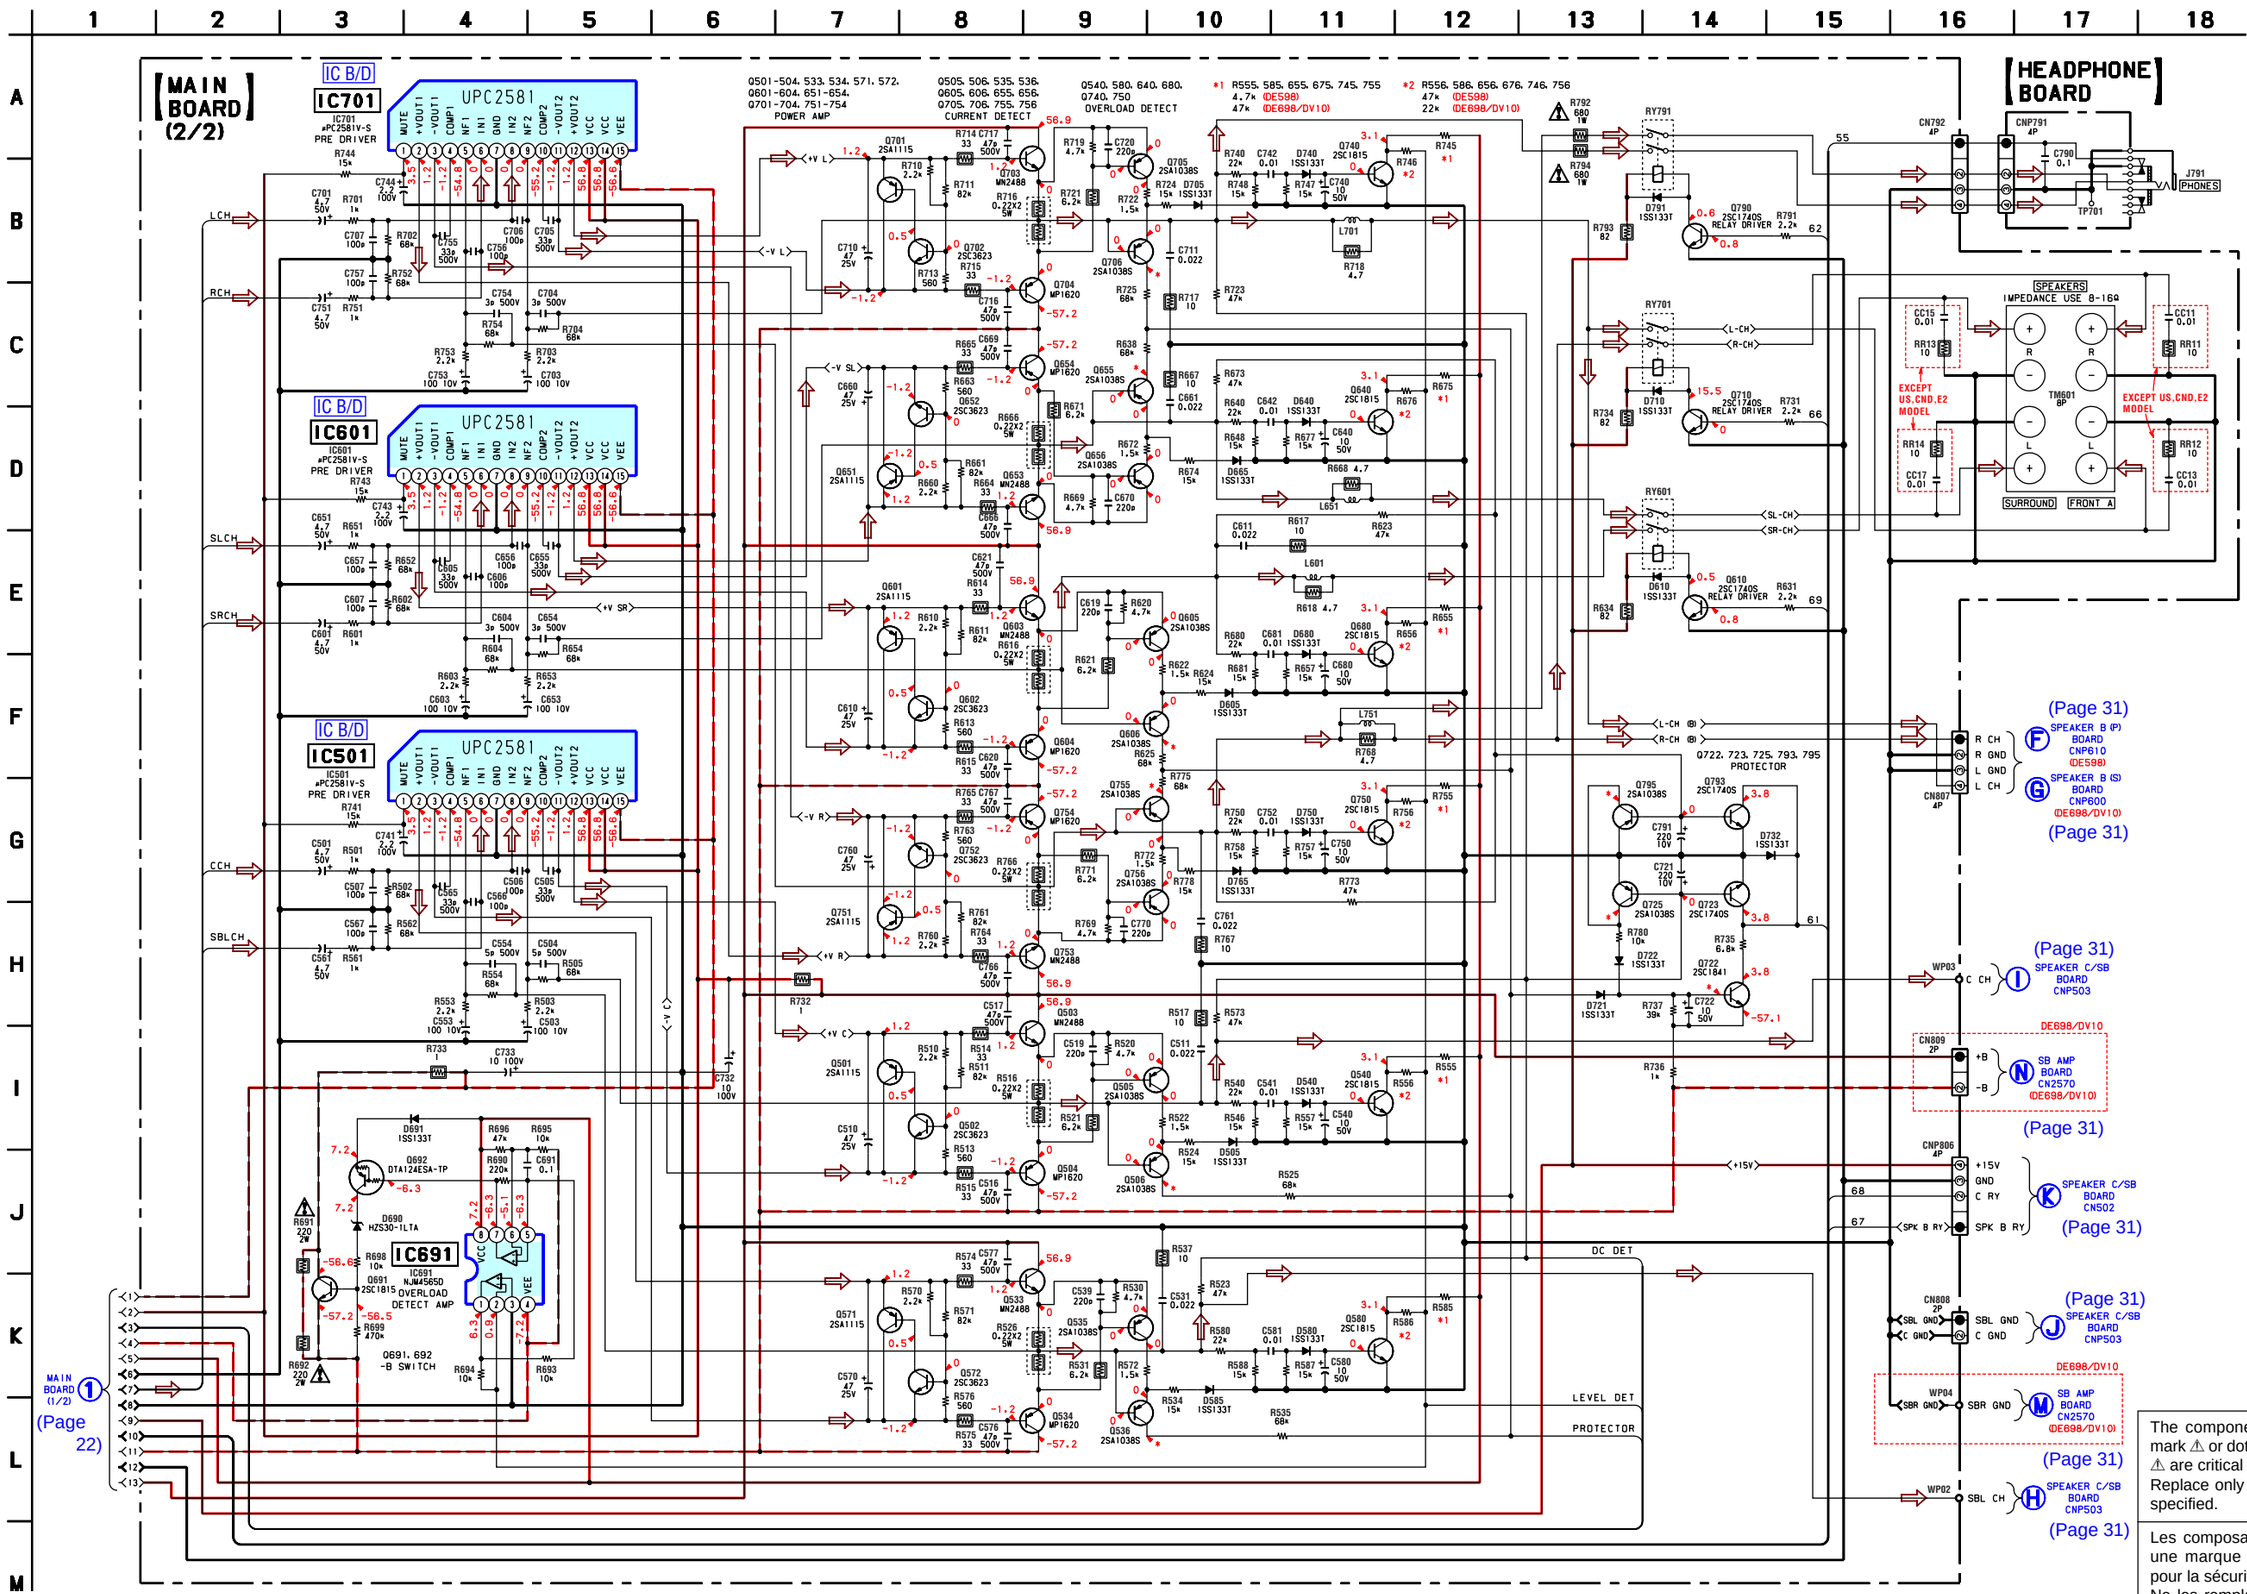

The components identified by mark ⚠ or dotted line with mark ⚠ are critical for safety.
Replace only with part number specified.

Les composants identifiés par une marque ⚠ sont critiques pour la sécurité.
Ne les remplacer que par une pièce portant le numéro spécifié.

4-10. PRINTED WIRING BOARD — DIGITAL SECTION (1/2) — **• Refer to page 14 for Circuit Boards Location.**

【DIGITAL BOARD】(SIDE A)

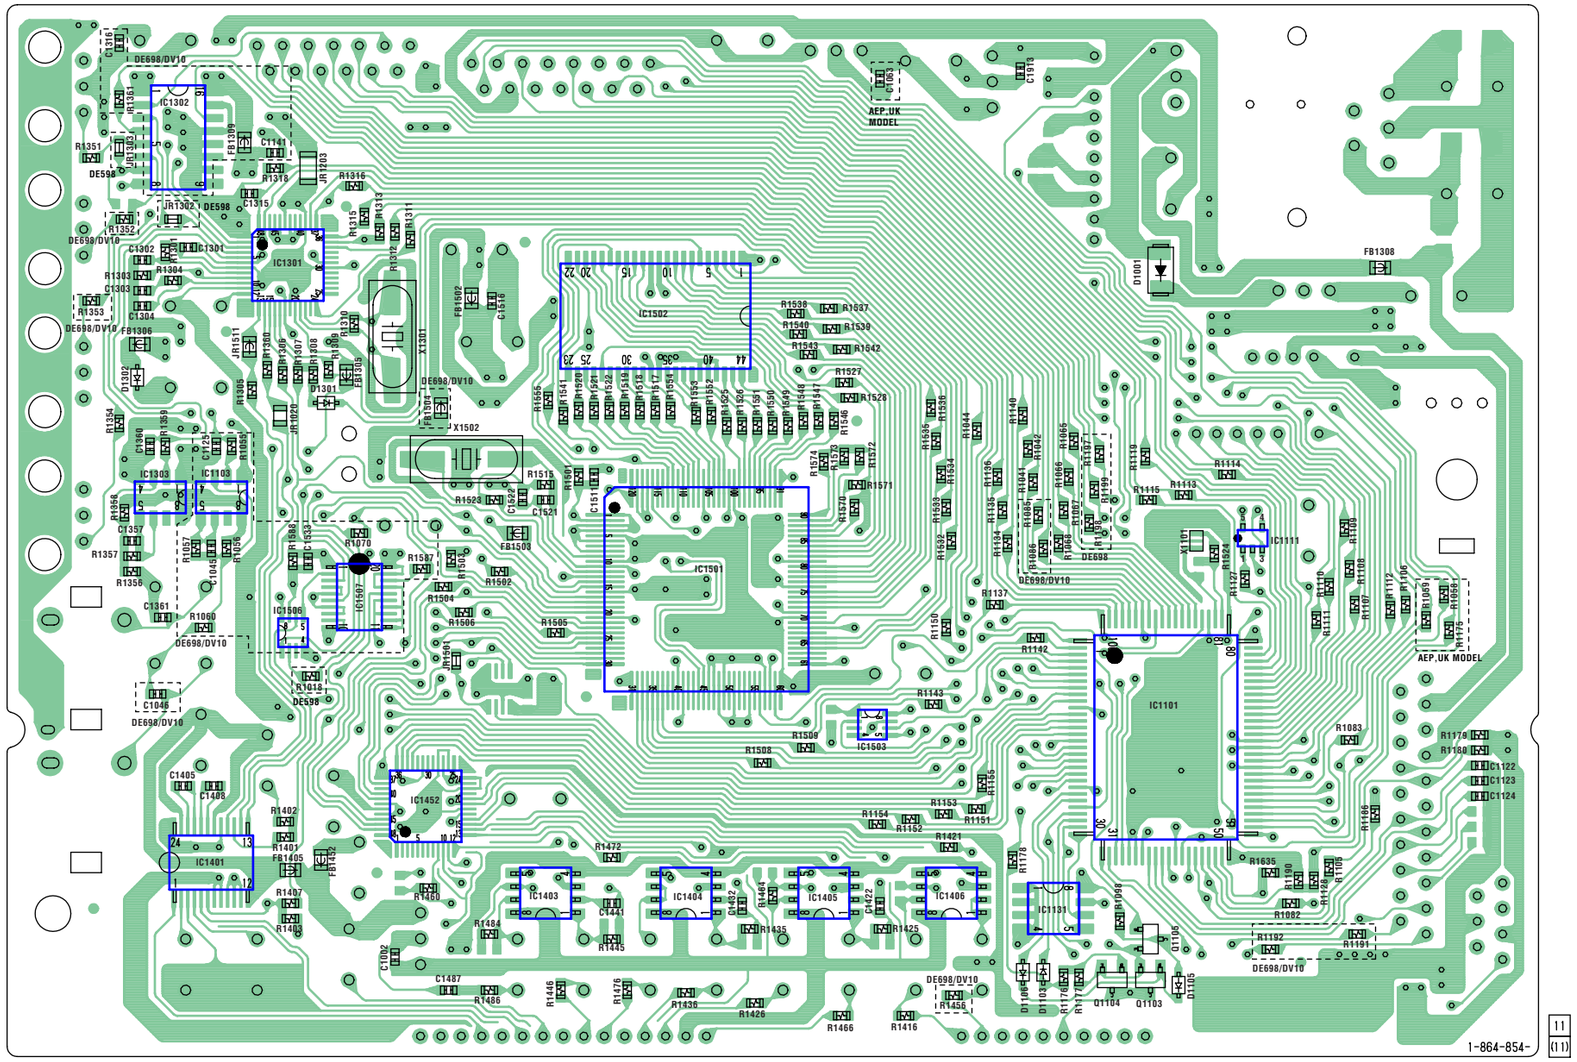

• Semiconductor Location (Side A)

Ref. No.	Location
D1001	D-5
D1103	I-5
D1105	I-4
D1106	I-5
D1301	E-10
D1302	E-11
IC1101	G-4
(IC1103)	E-10
IC1111	F-4
IC1131	H-5
IC1301	D-10
(IC1302)	C-11
IC1303	E-11
IC1401	H-10
IC1403	H-8
IC1404	H-7
IC1405	H-7
IC1406	H-6
IC1452	G-9
IC1501	F-7
IC1502	D-8
IC1503	G-6
(IC1506)	F-10
(IC1507)	F-9
Q1103	I-5
Q1104	I-5
Q1105	H-5

( ) : STR-DE698/DV10 only

4-11. PRINTED WIRING BOARD — DIGITAL SECTION (2/2) — • Refer to page 14 for Circuit Boards Location.

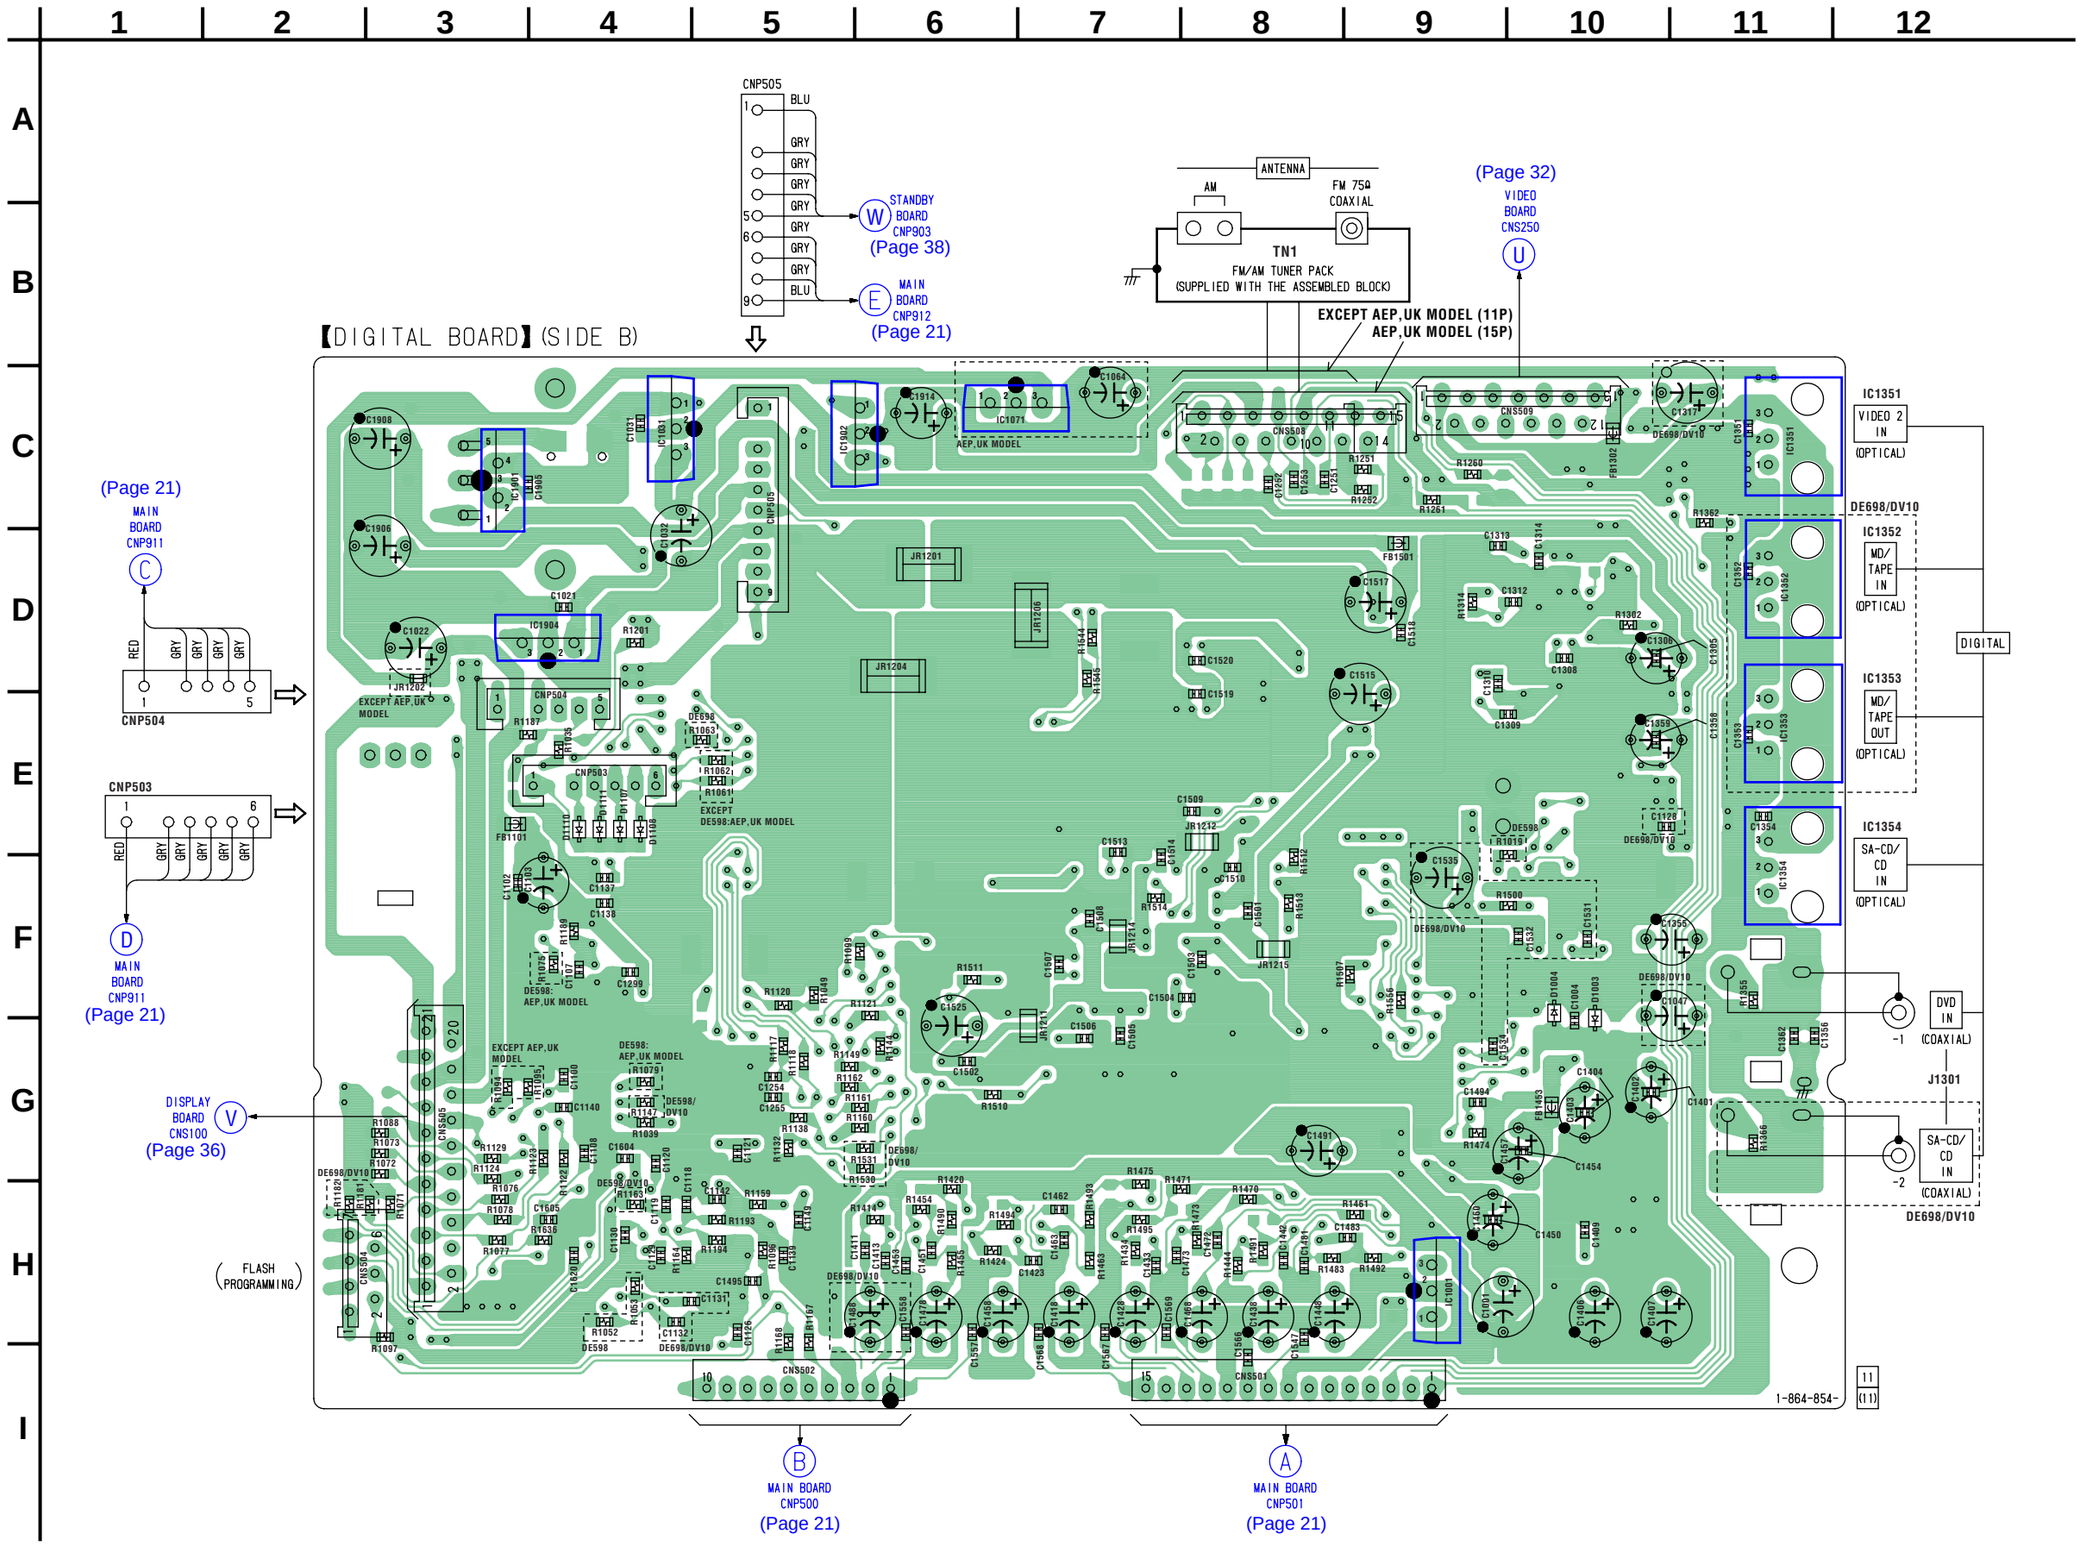

• **Semiconductor Location (Side B)**

Ref. No.	Location
D1003	F-10
D1004	F-10
D1107	E-4
D1108	E-4
D1110	E-4
D1111	E-4
IC1001	H-9
IC1031	C-4
(IC1071)	C-7
IC1351	C-12
<IC1352>	D-12
<IC1353>	E-12
IC1354	F-12
IC1901	C-3
IC1902	C-6
IC1904	D-4

( ) : AEP, UK model only
< > : STR-DE698/DV10 only

4-12. SCHEMATIC DIAGRAM — DIGITAL SECTION (1/4) — • Refer to page 20 for Waveforms and page 40 for IC Block Diagrams.

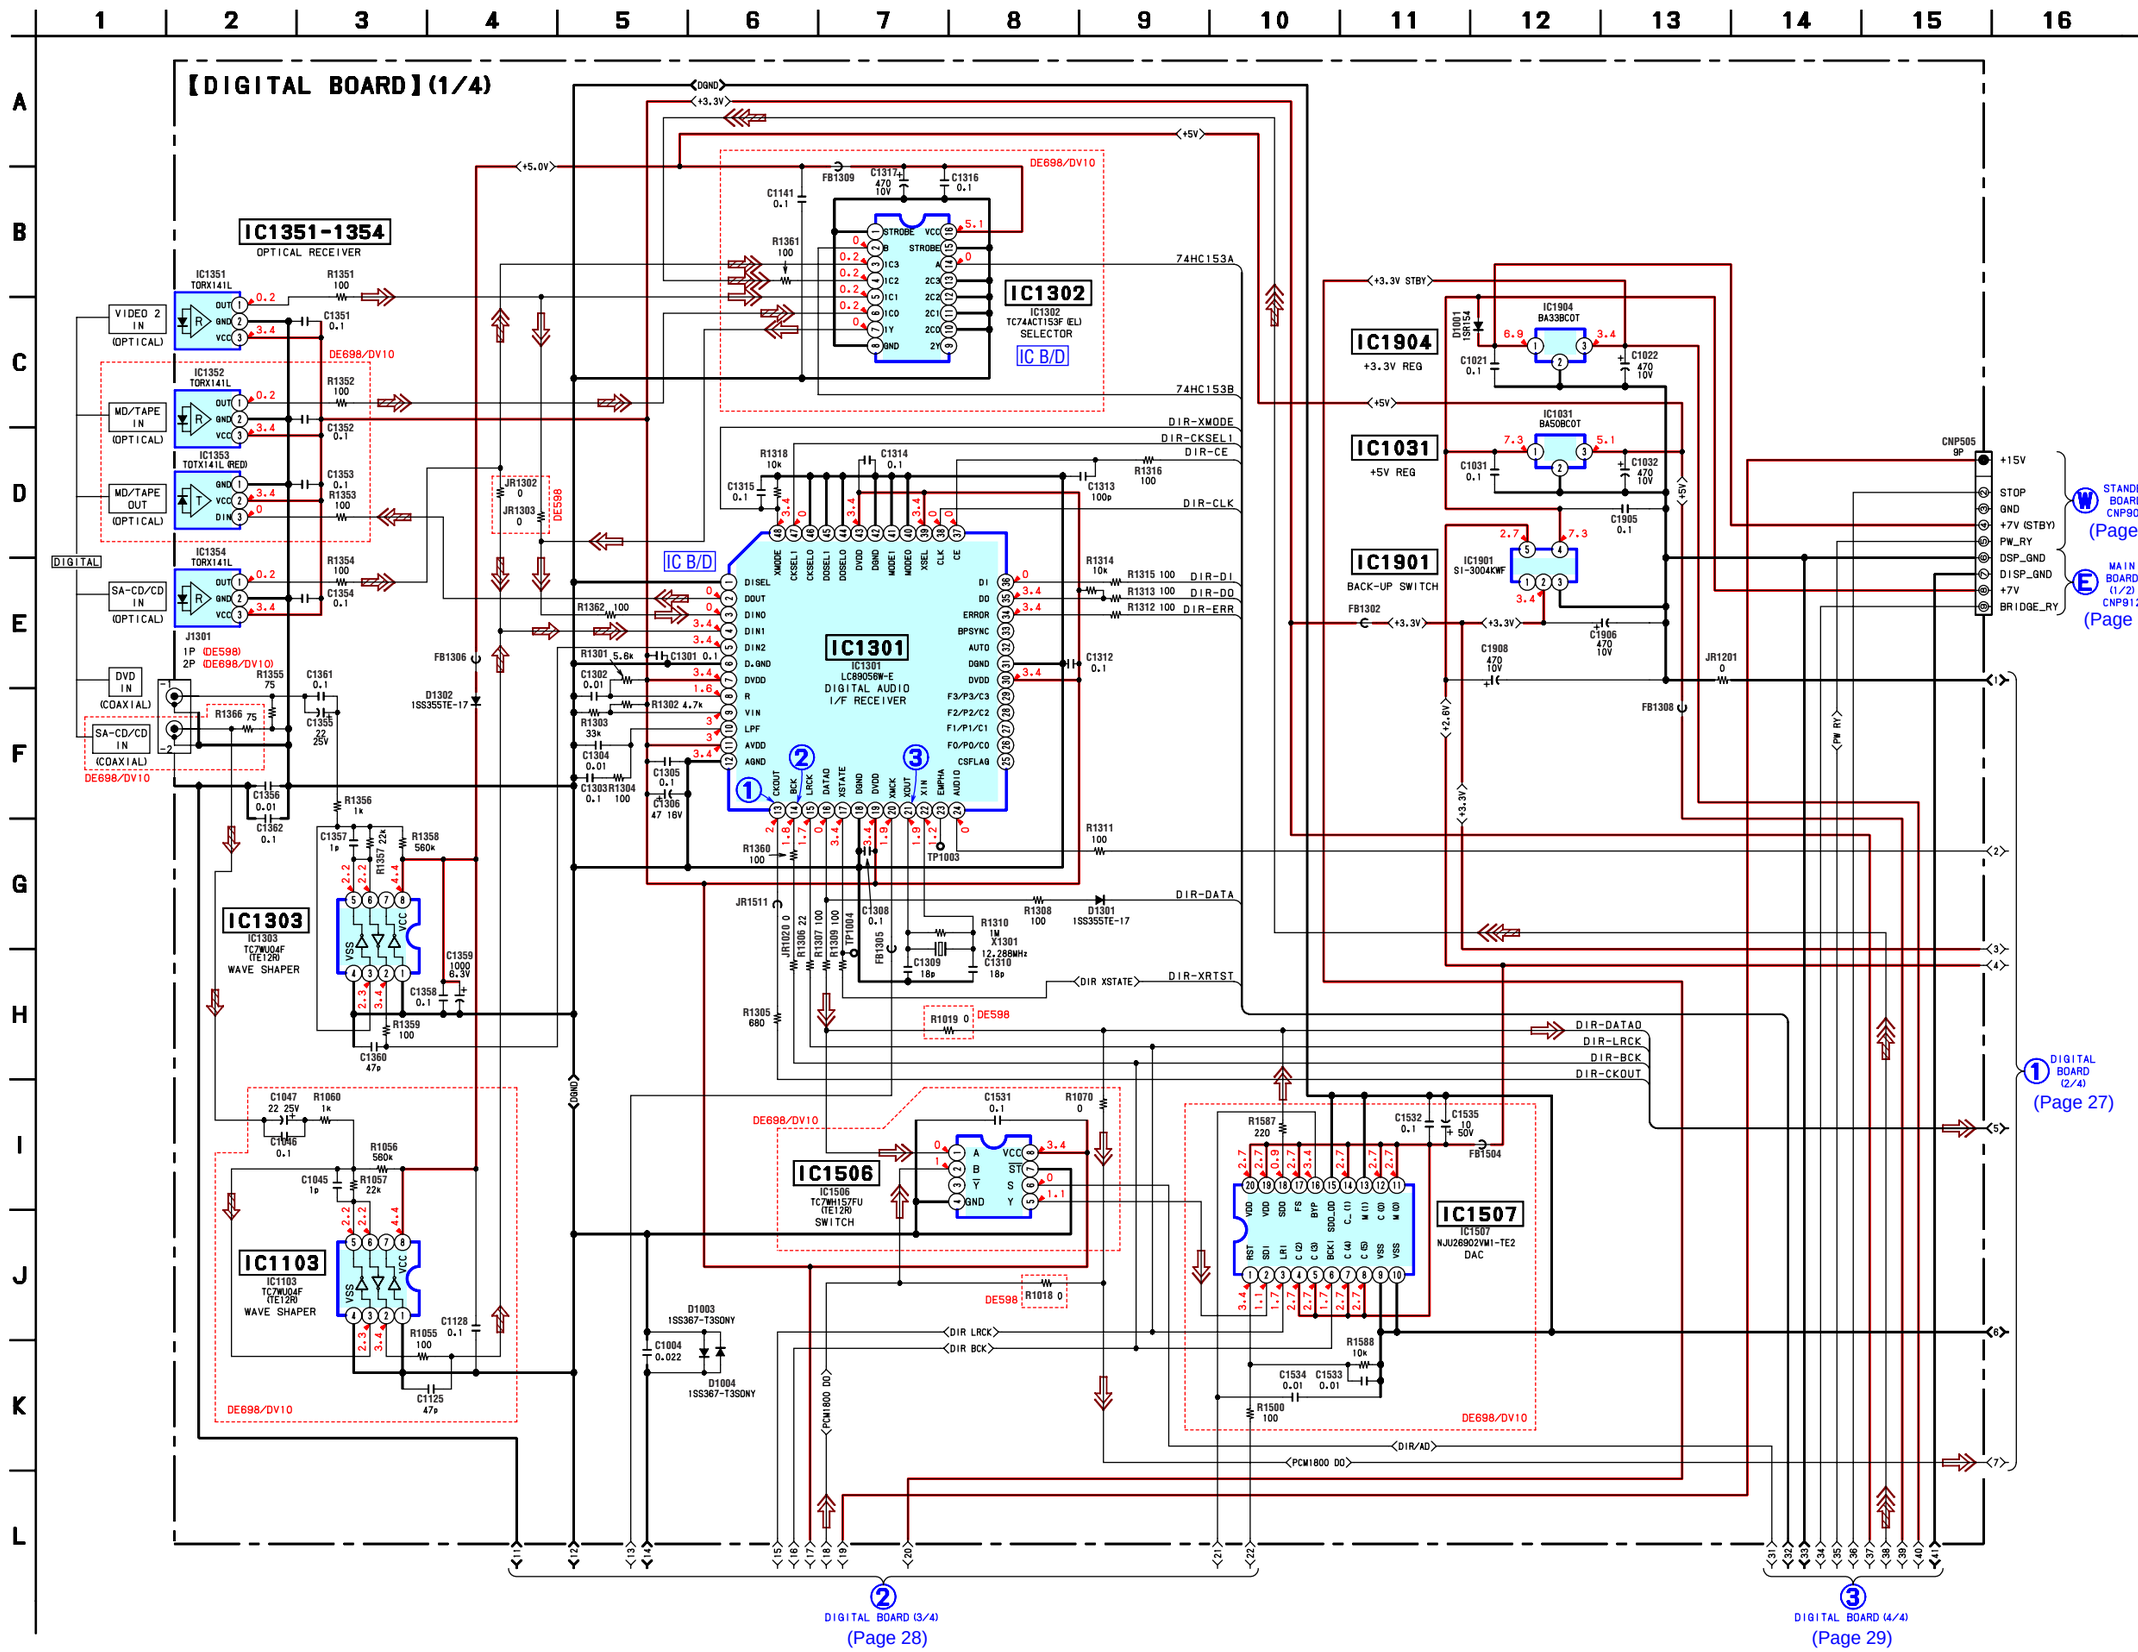

4-13. SCHEMATIC DIAGRAM — DIGITAL SECTION (2/4) — • Refer to page 20 for Waveforms. • Refer to page 42 for IC Pin Descriptions.

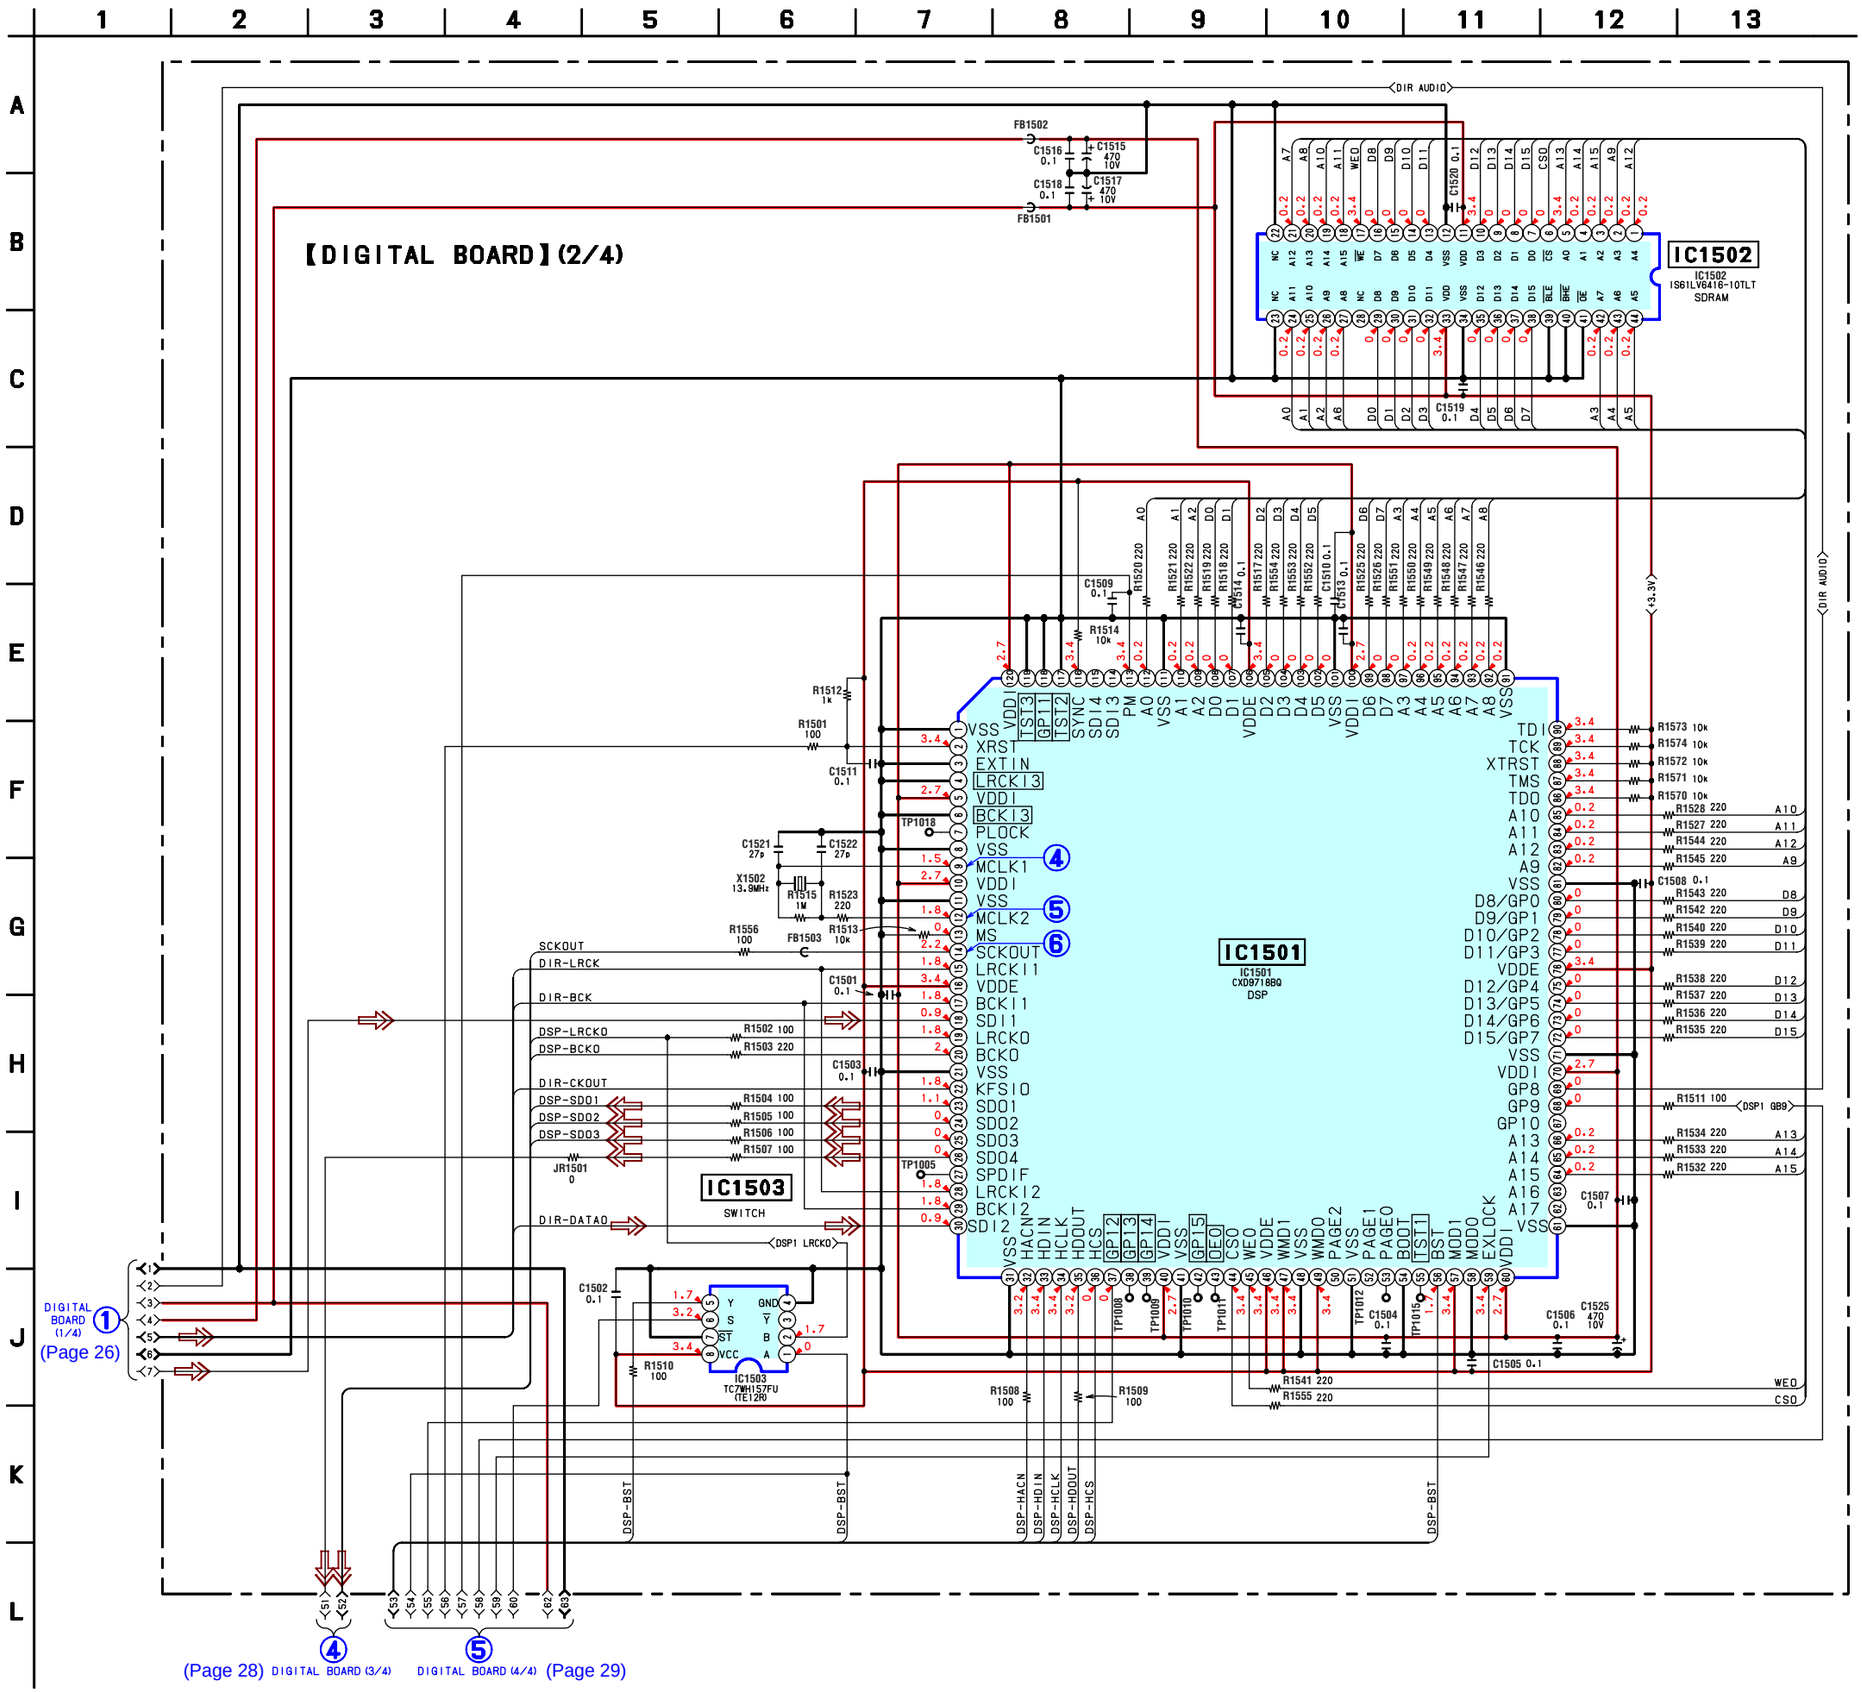

4-14. SCHEMATIC DIAGRAM — DIGITAL SECTION (3/4) — • Refer to page 40 for IC Block Diagrams.

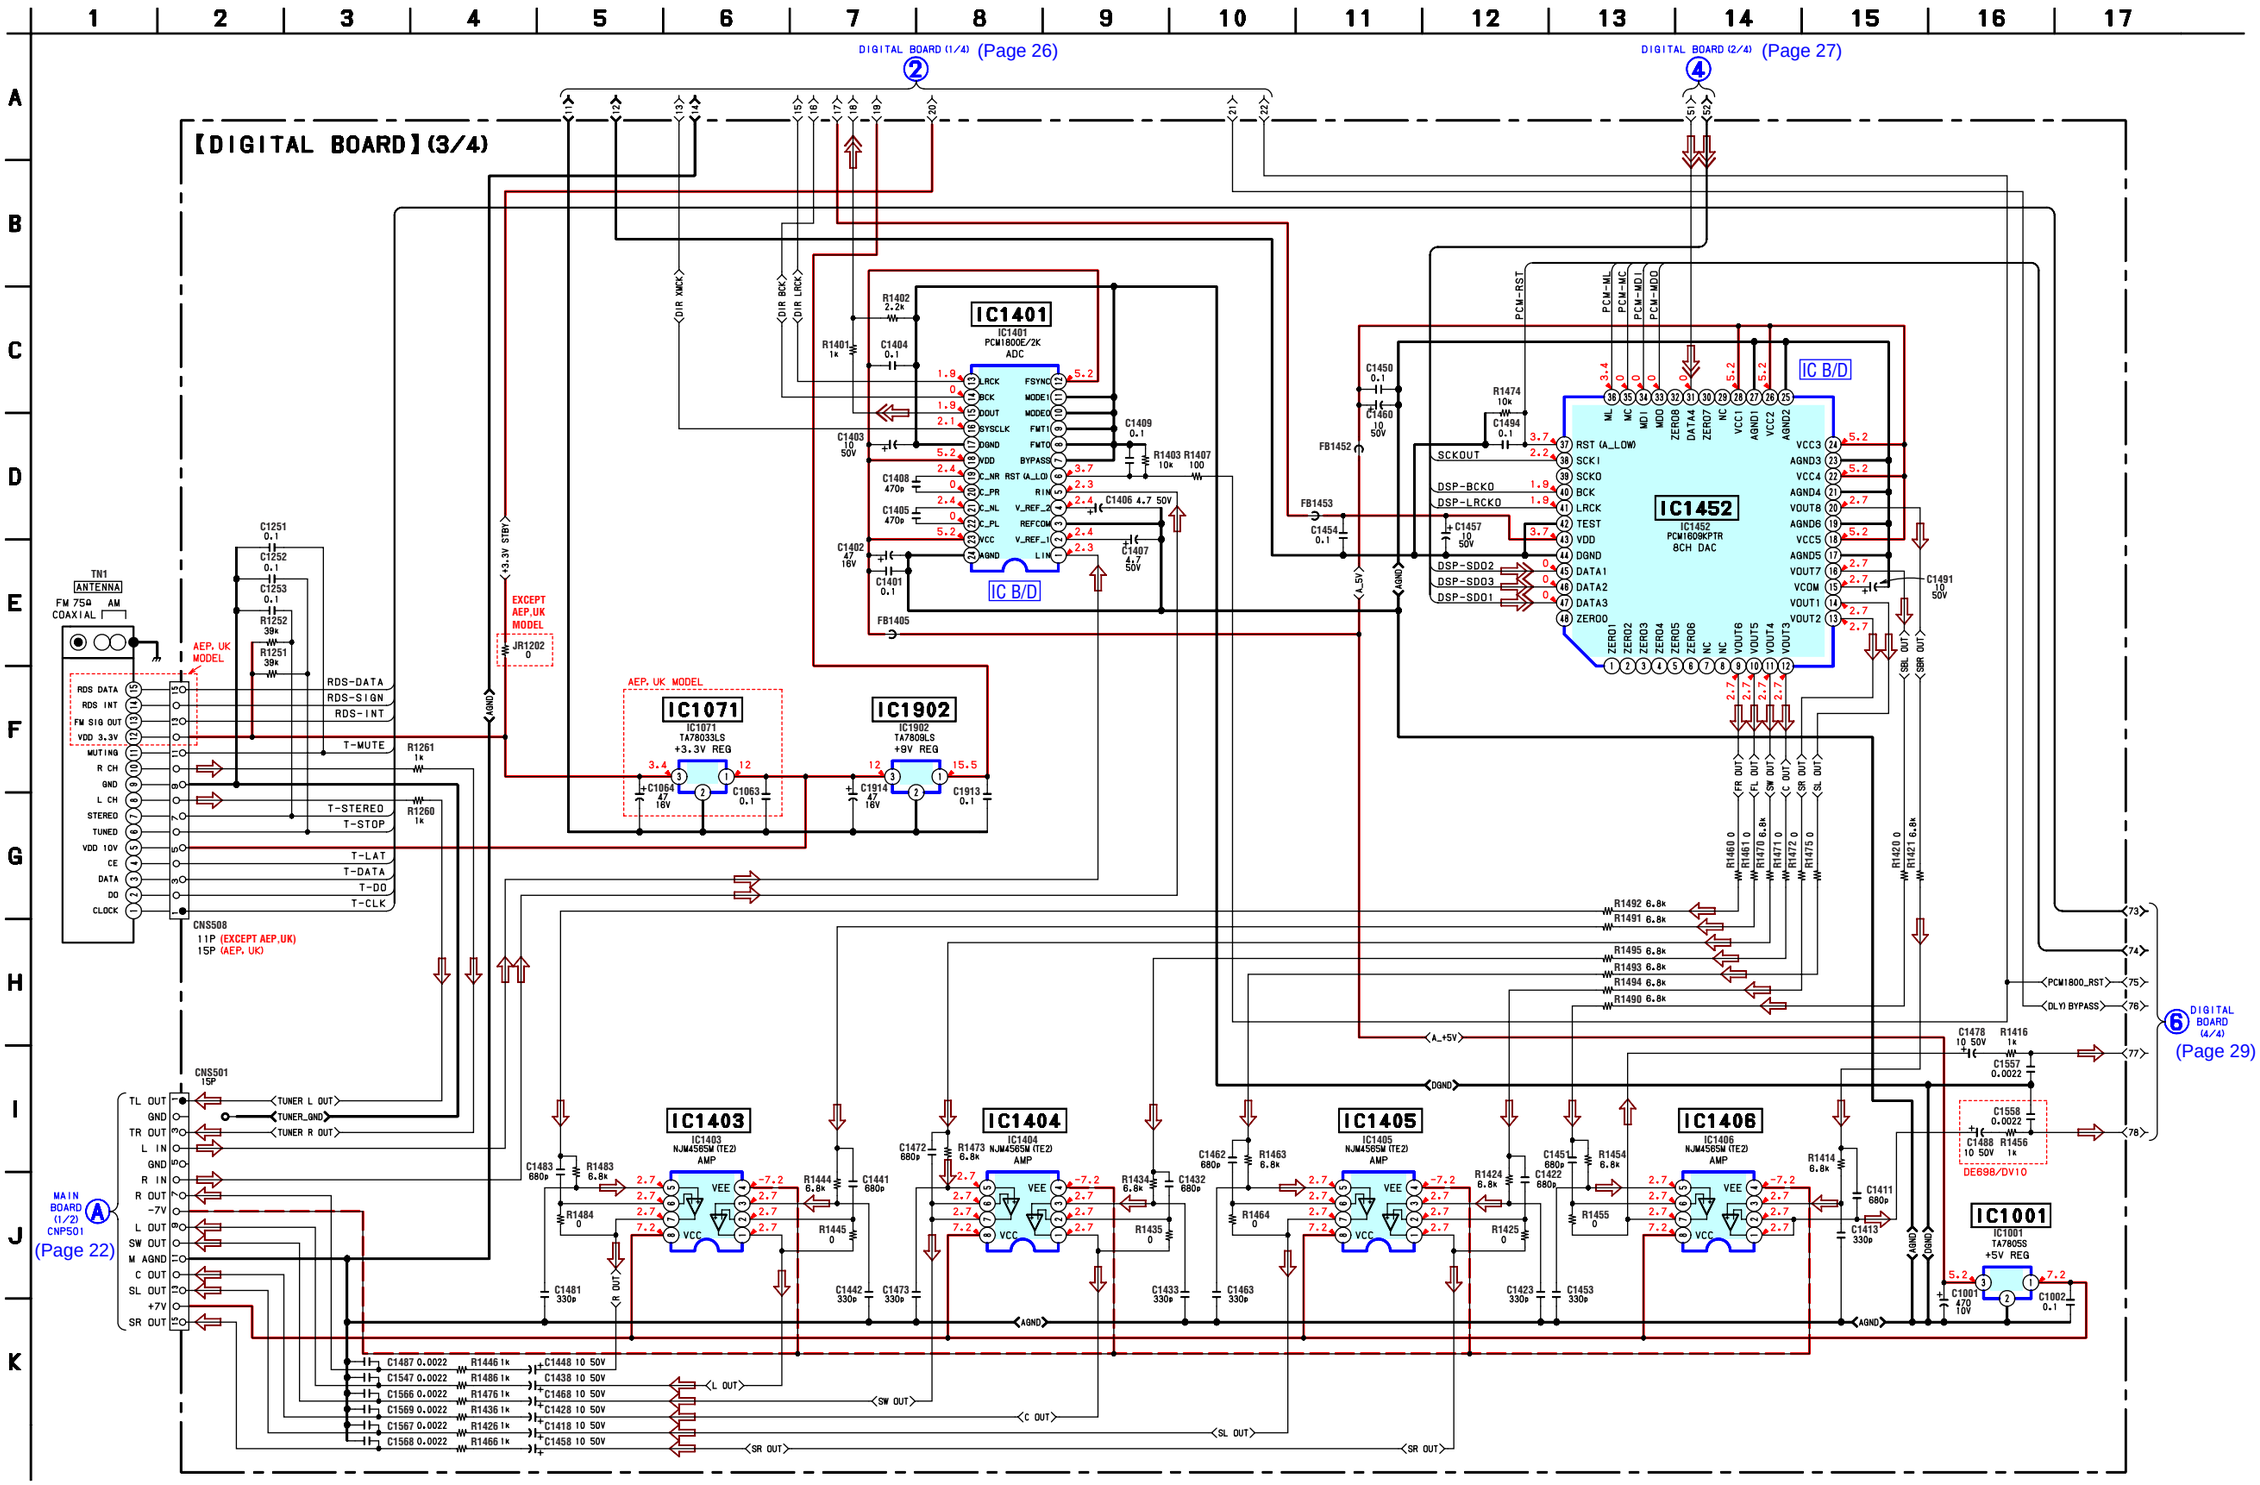

4-15. SCHEMATIC DIAGRAM — DIGITAL SECTION (4/4) — • Refer to page 20 for Waveforms. • Refer to page 44 for IC Pin Descriptions.

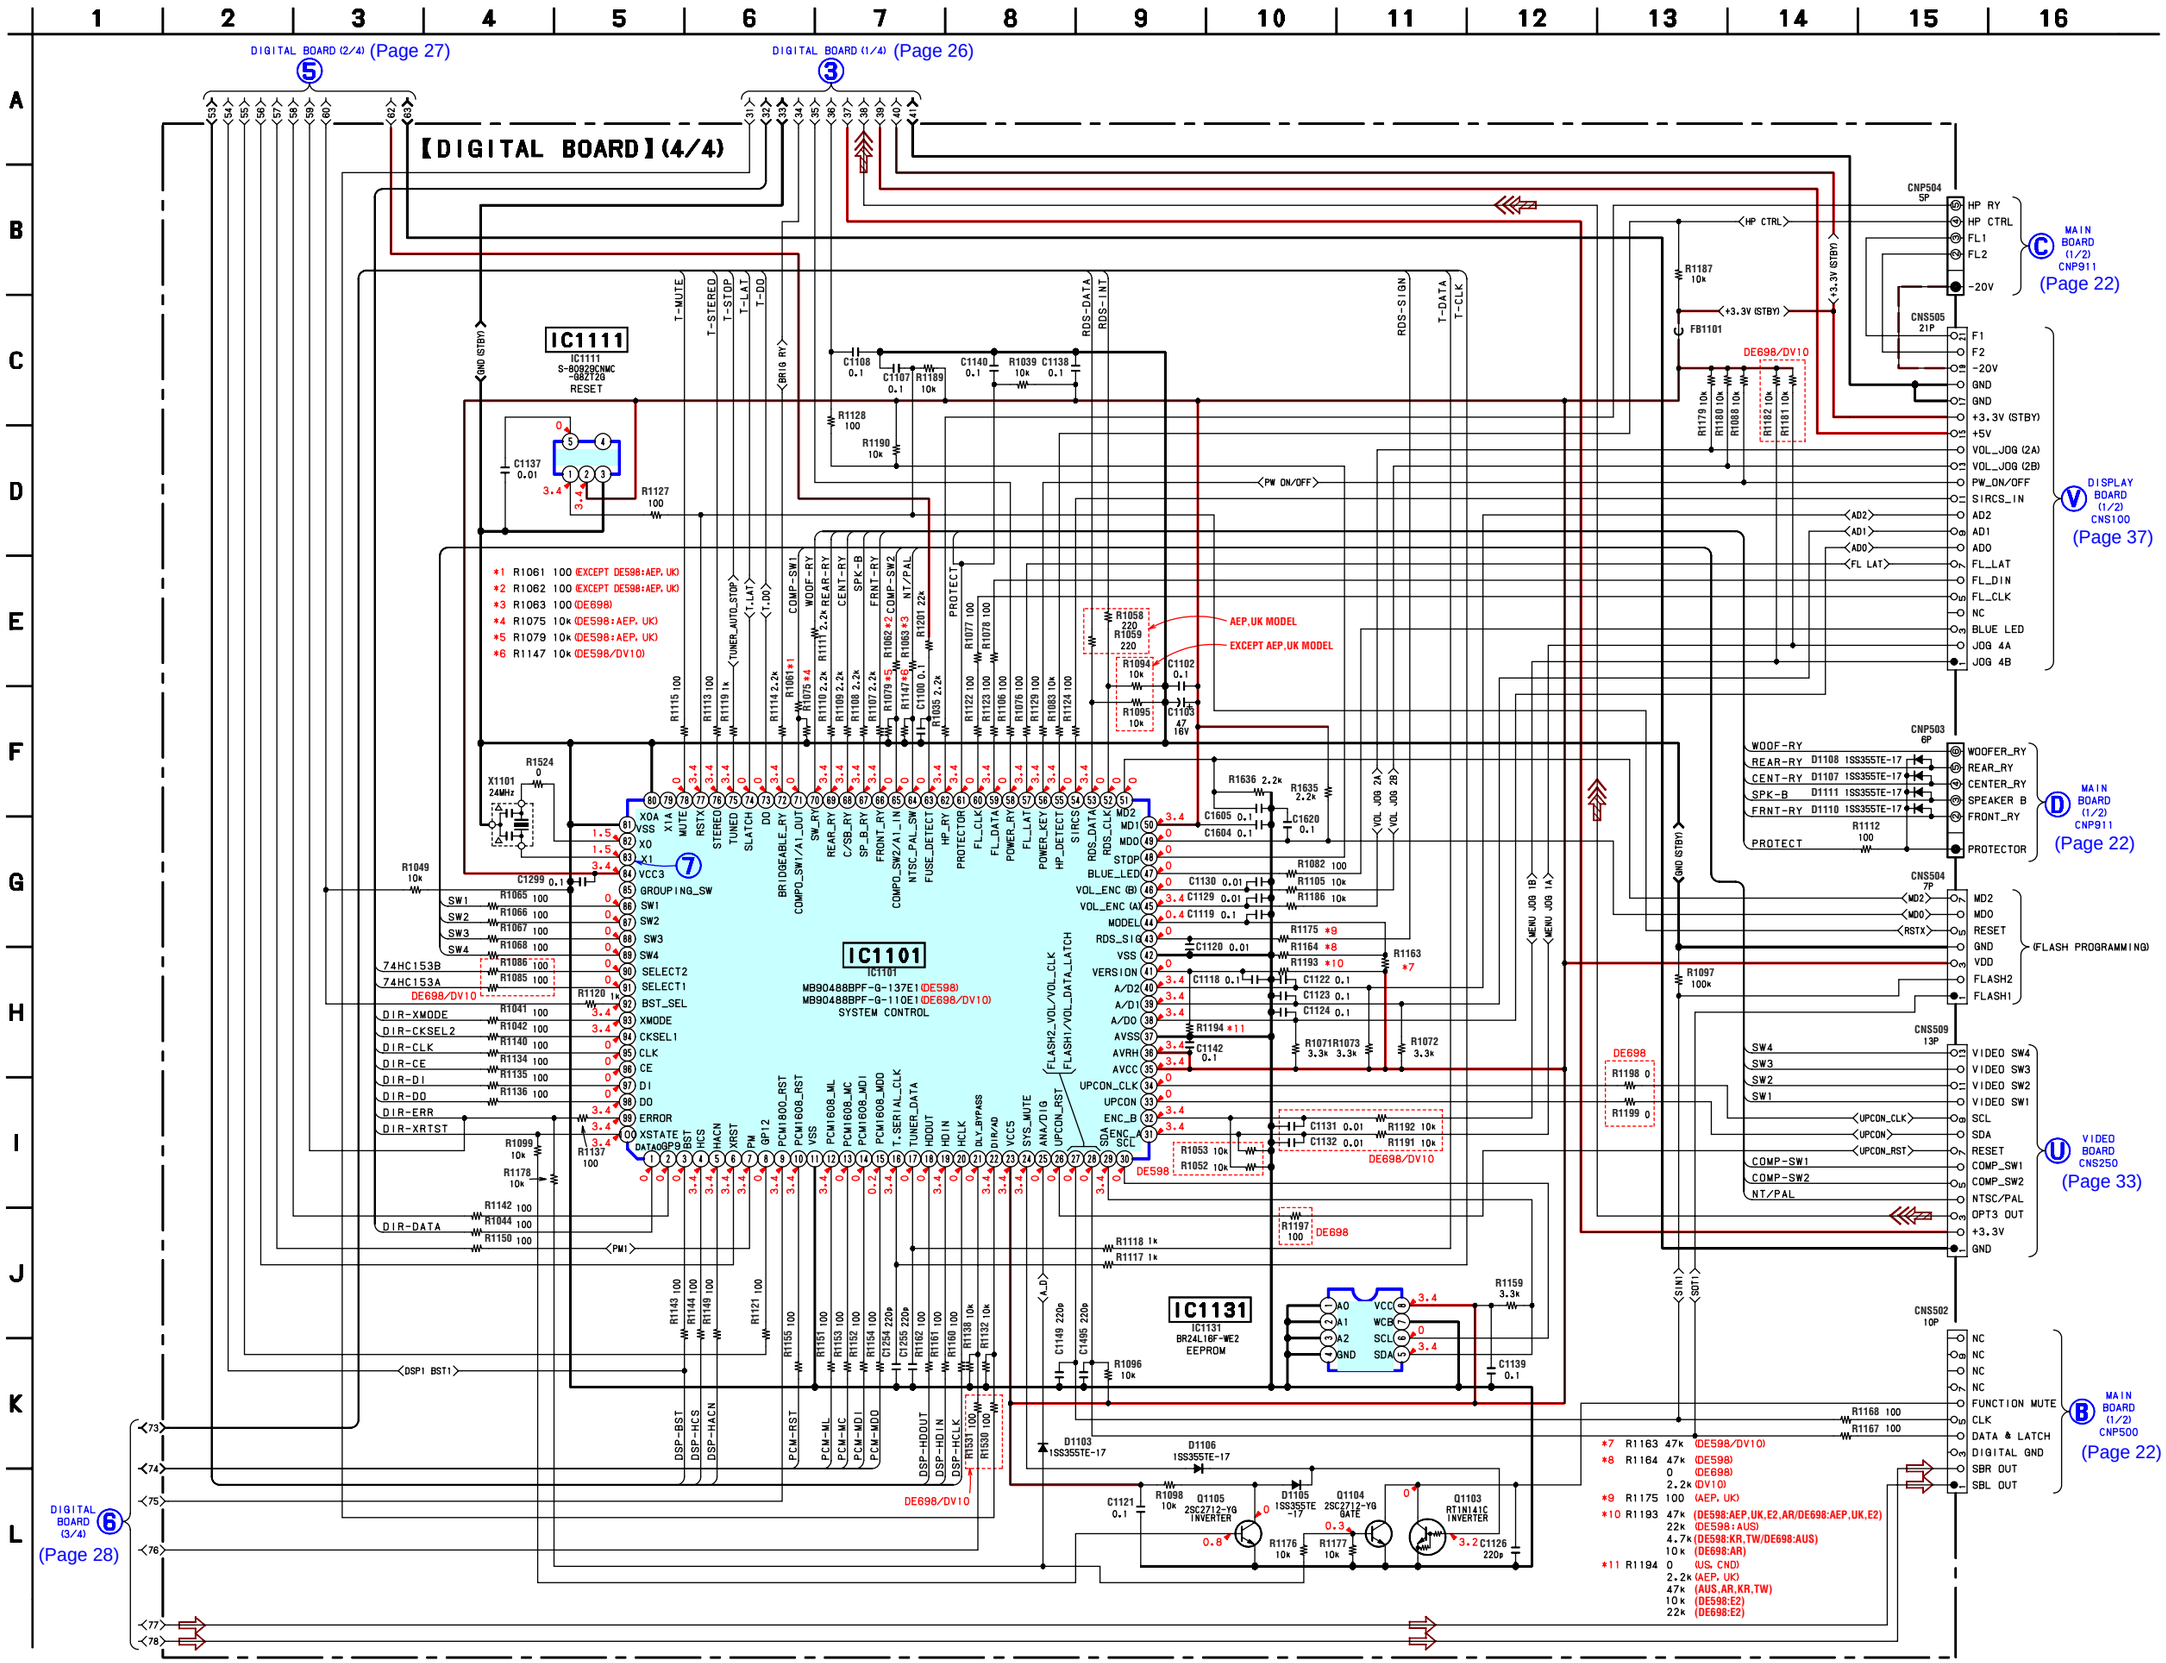

4-16. PRINTED WIRING BOARDS — SPEAKER SECTION — • Refer to page 14 for Circuit Boards Location.

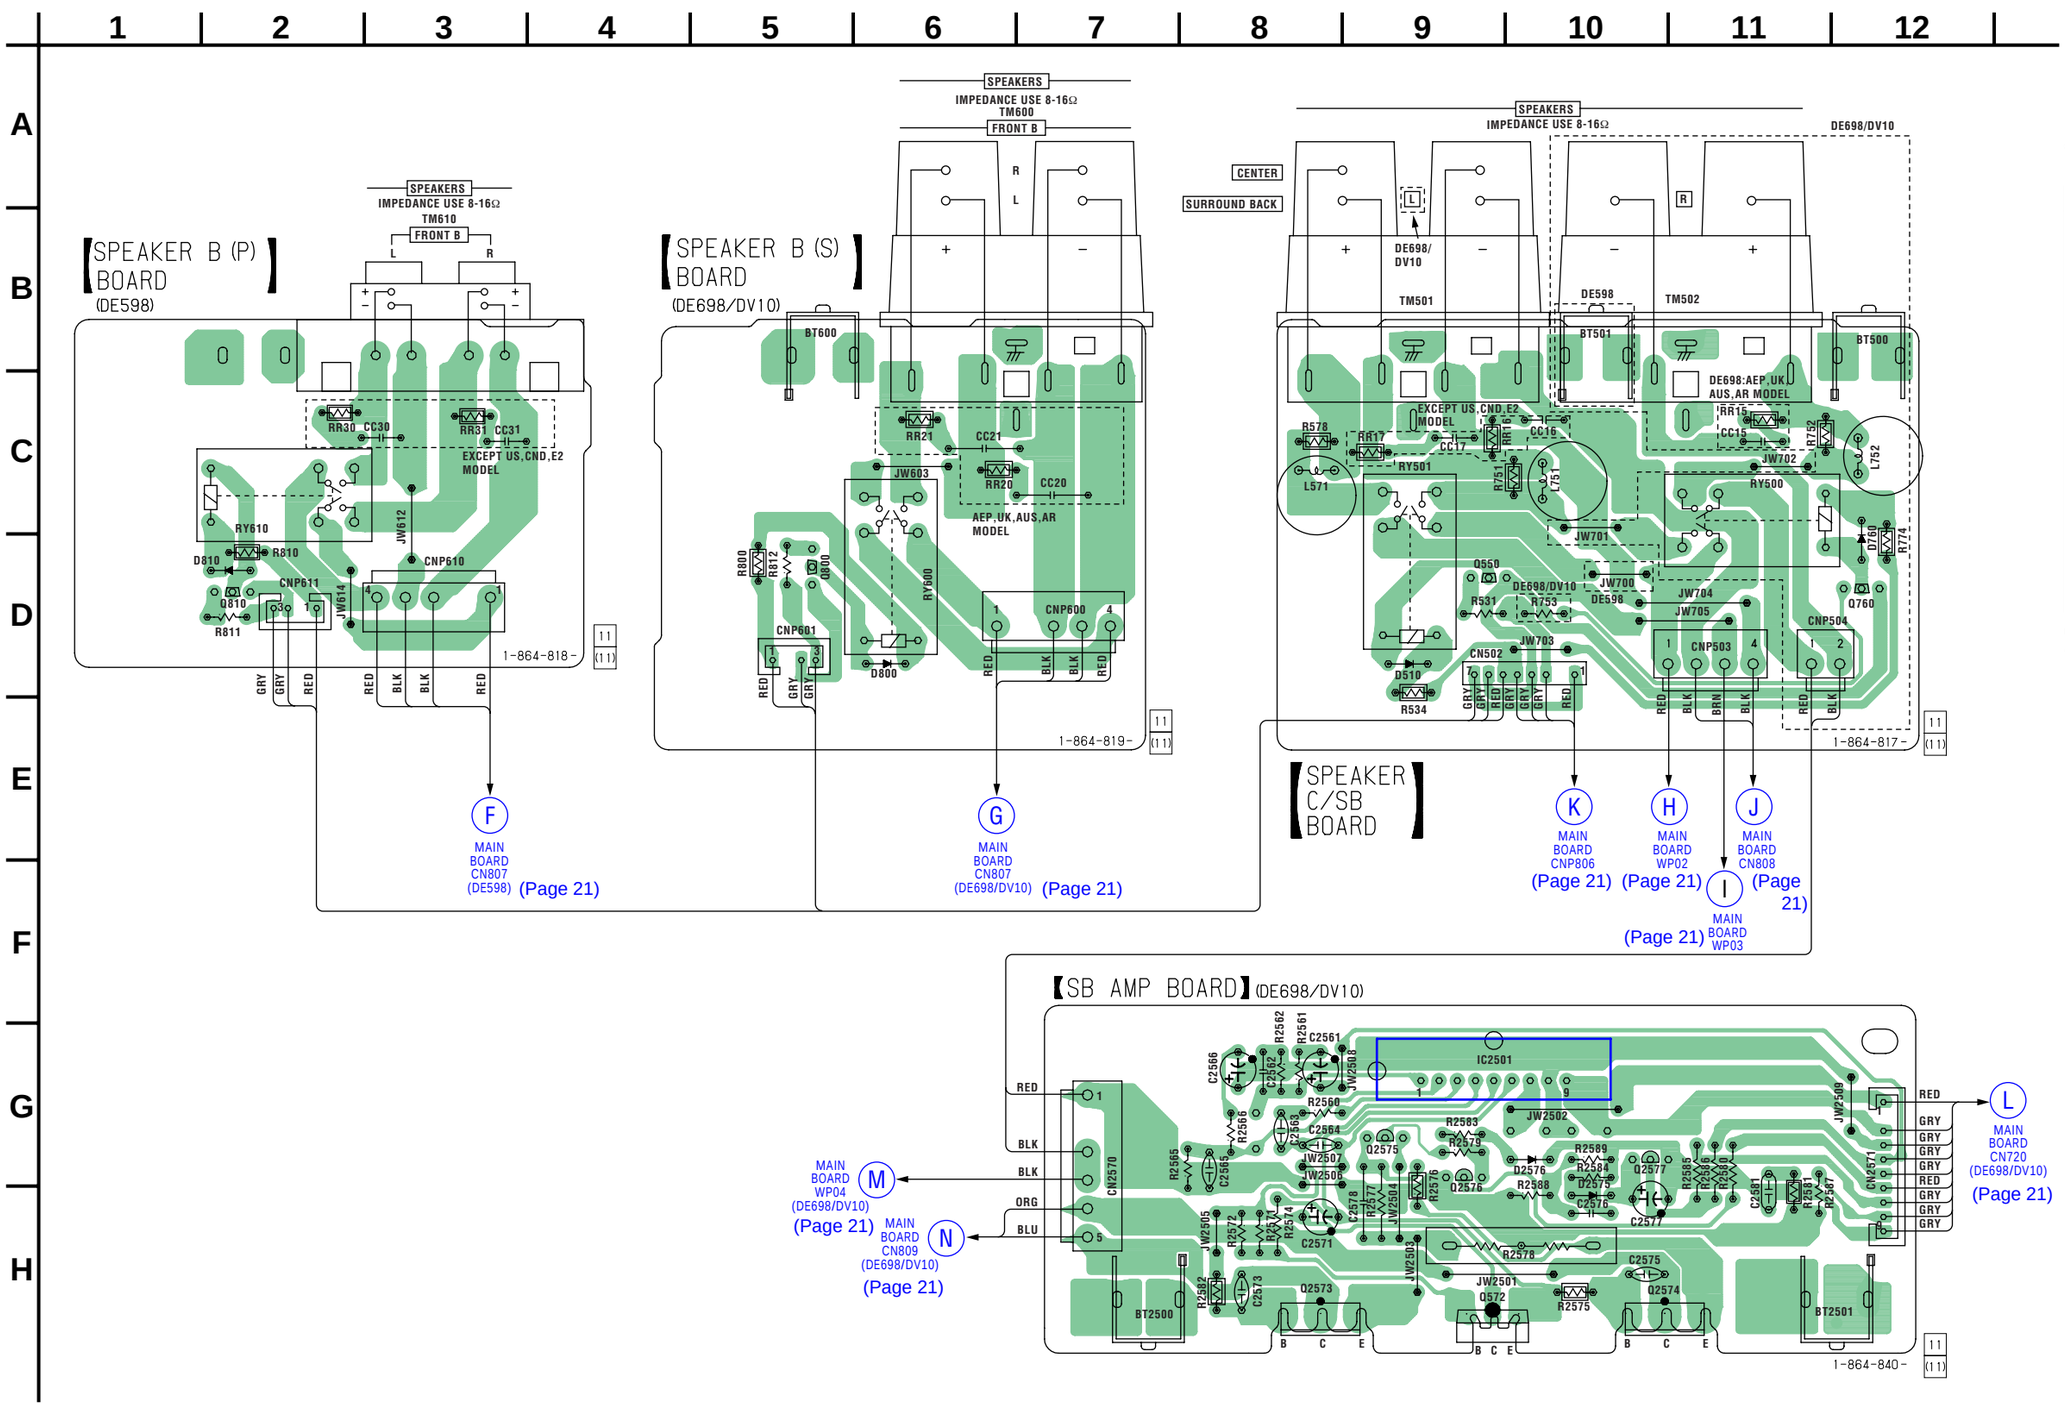

• **Semiconductor Location**

Ref. No.	Location
D510	D-9
(D760)	D-12
(D800)	D-6
<D810>	D-2
D2575	H-10
D2576	G-10
IC2501	G-9
Q550	D-9
(Q572)	H-9
(Q760)	D-12
(Q800)	D-5
<Q810>	D-2
(Q2573)	H-8
(Q2574)	H-11
Q2575	G-9
Q2576	G-9
Q2577	G-10

( ) : STR-DE698/DV10 only
< > : STR-DE598 only

4-17. SCHEMATIC DIAGRAM — SPEAKER SECTION — • Refer to page 40 for IC Block Diagrams.

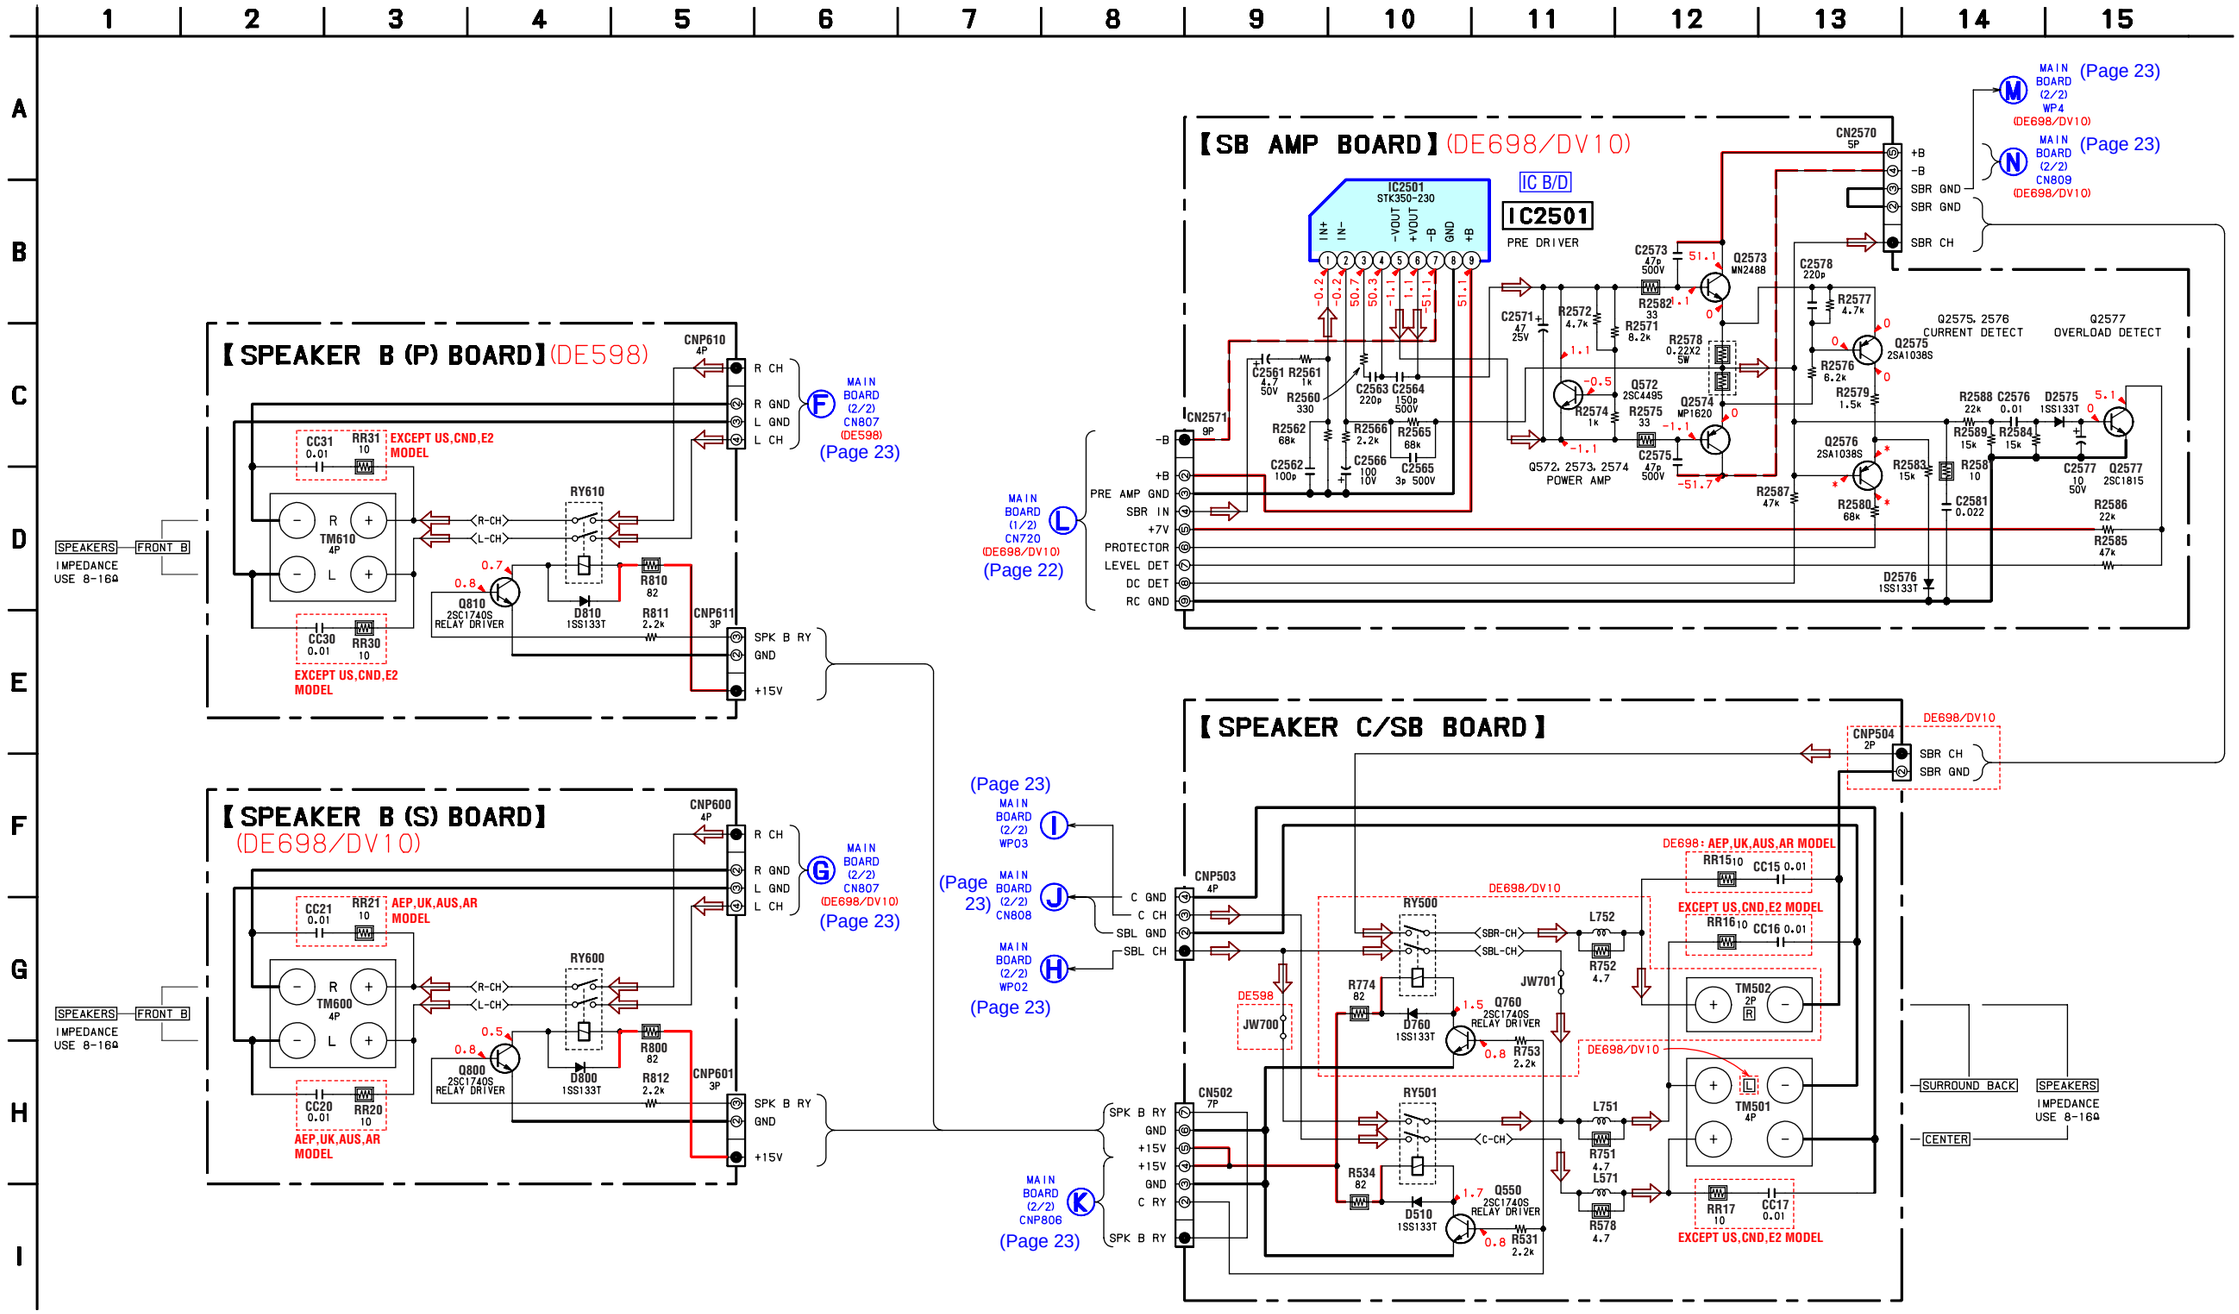

4-18. PRINTED WIRING BOARDS — VIDEO SECTION — • Refer to page 14 for Circuit Boards Location.

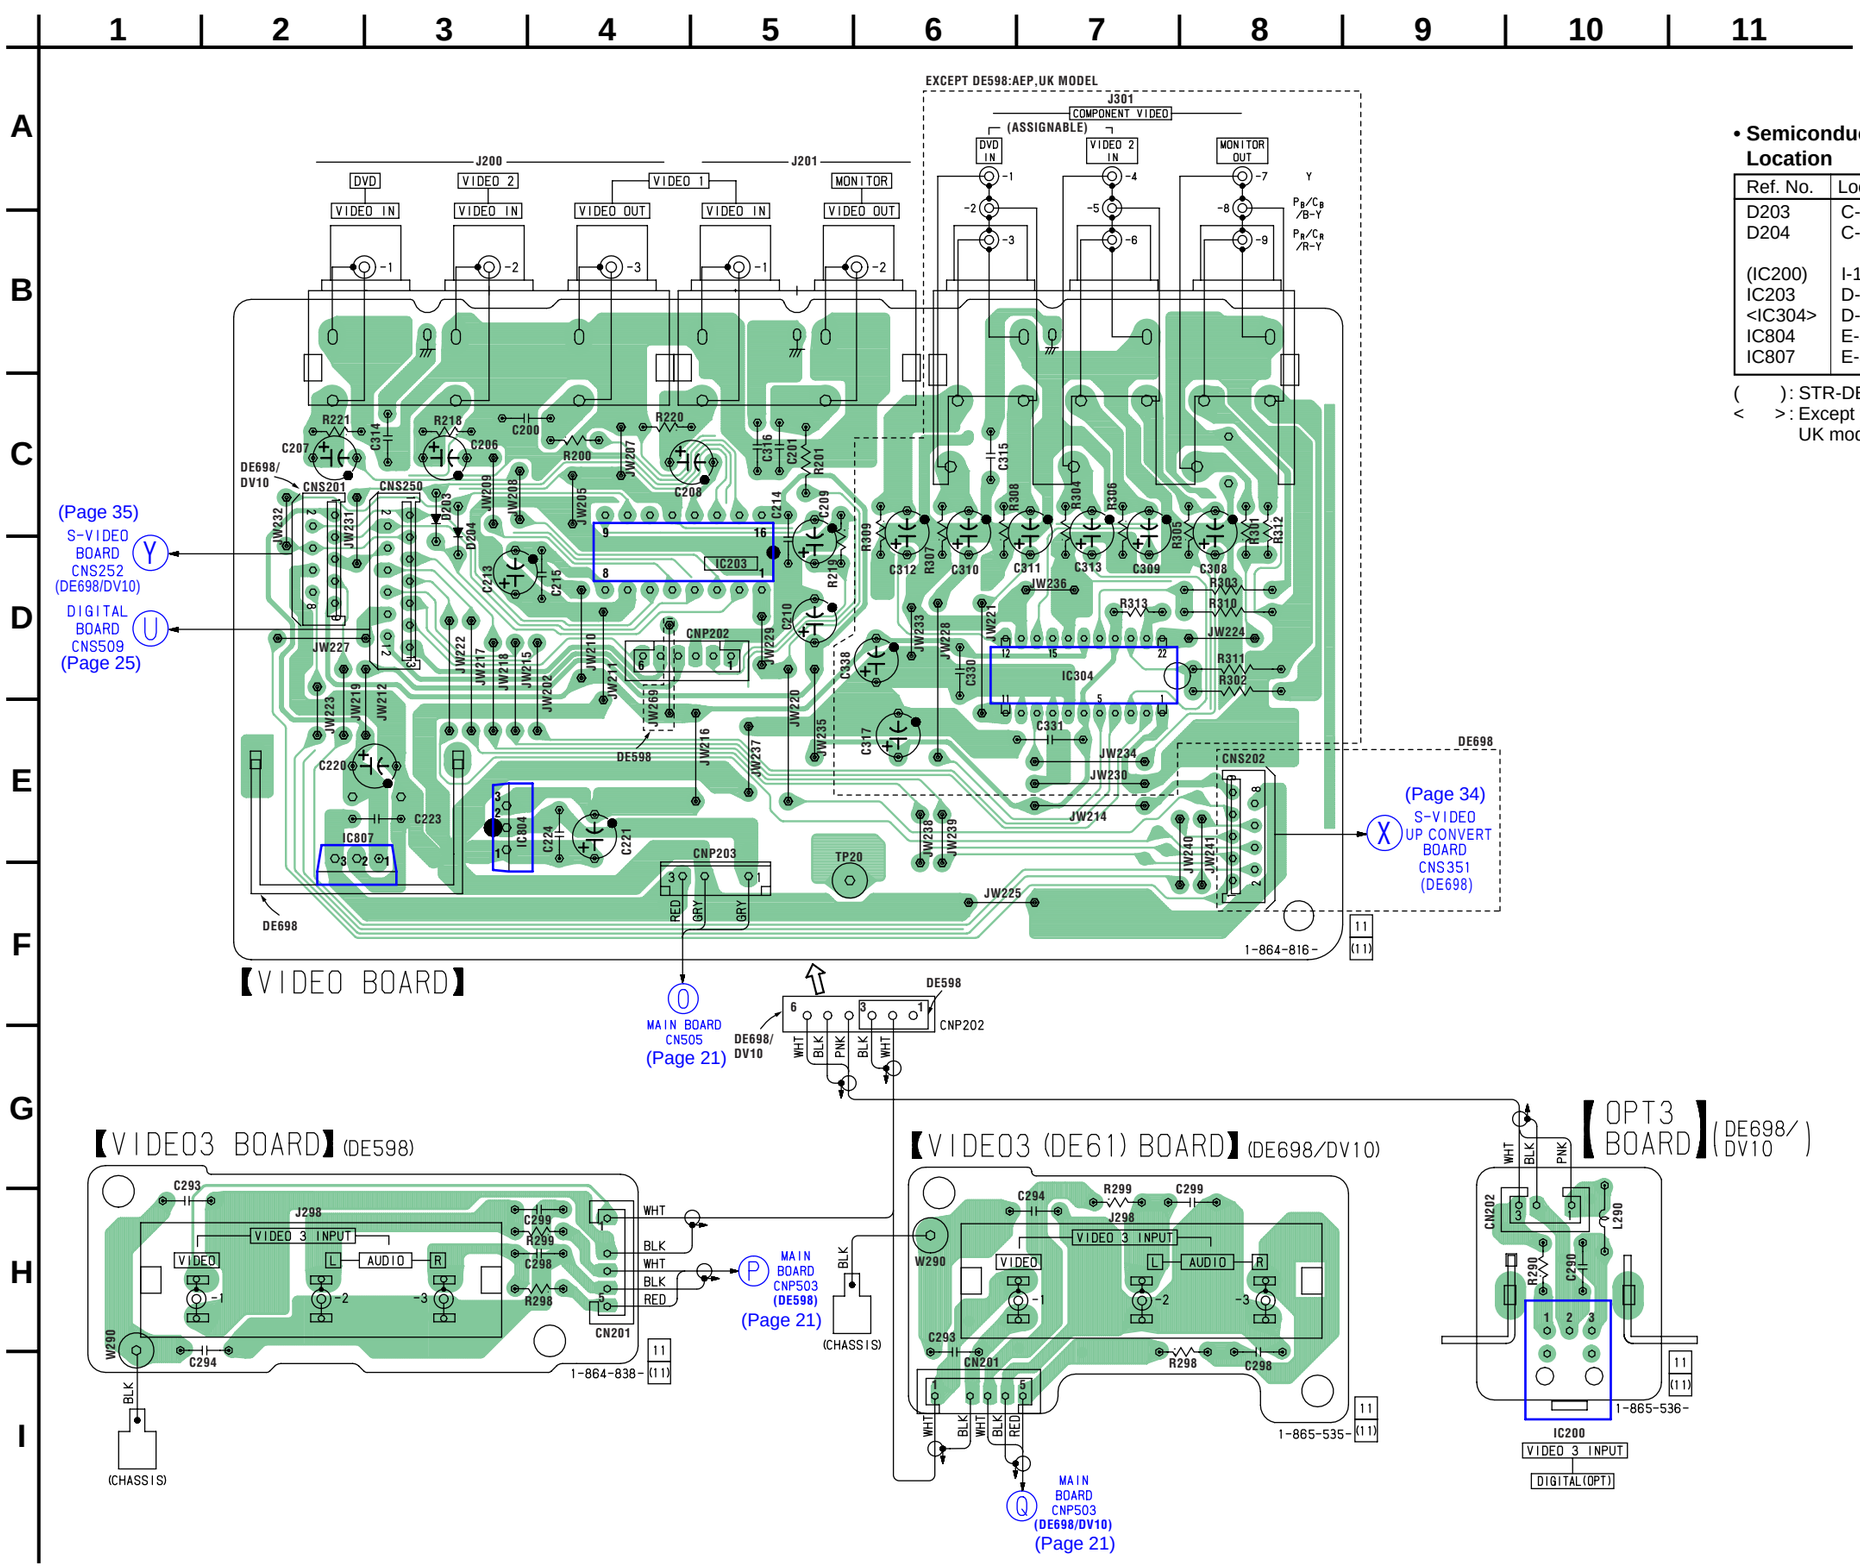

• Semiconductor Location

Ref. No.	Location
D203	C-3
D204	C-3
(IC200)	I-10
IC203	D-5
<IC304>	D-7
IC804	E-3
IC807	E-3

( ) : STR-DE698/DV10 only
< > : Except STR-DE598: AEP, UK model

4-19. SCHEMATIC DIAGRAM — VIDEO SECTION — • Refer to page 41 for IC Block Diagrams.

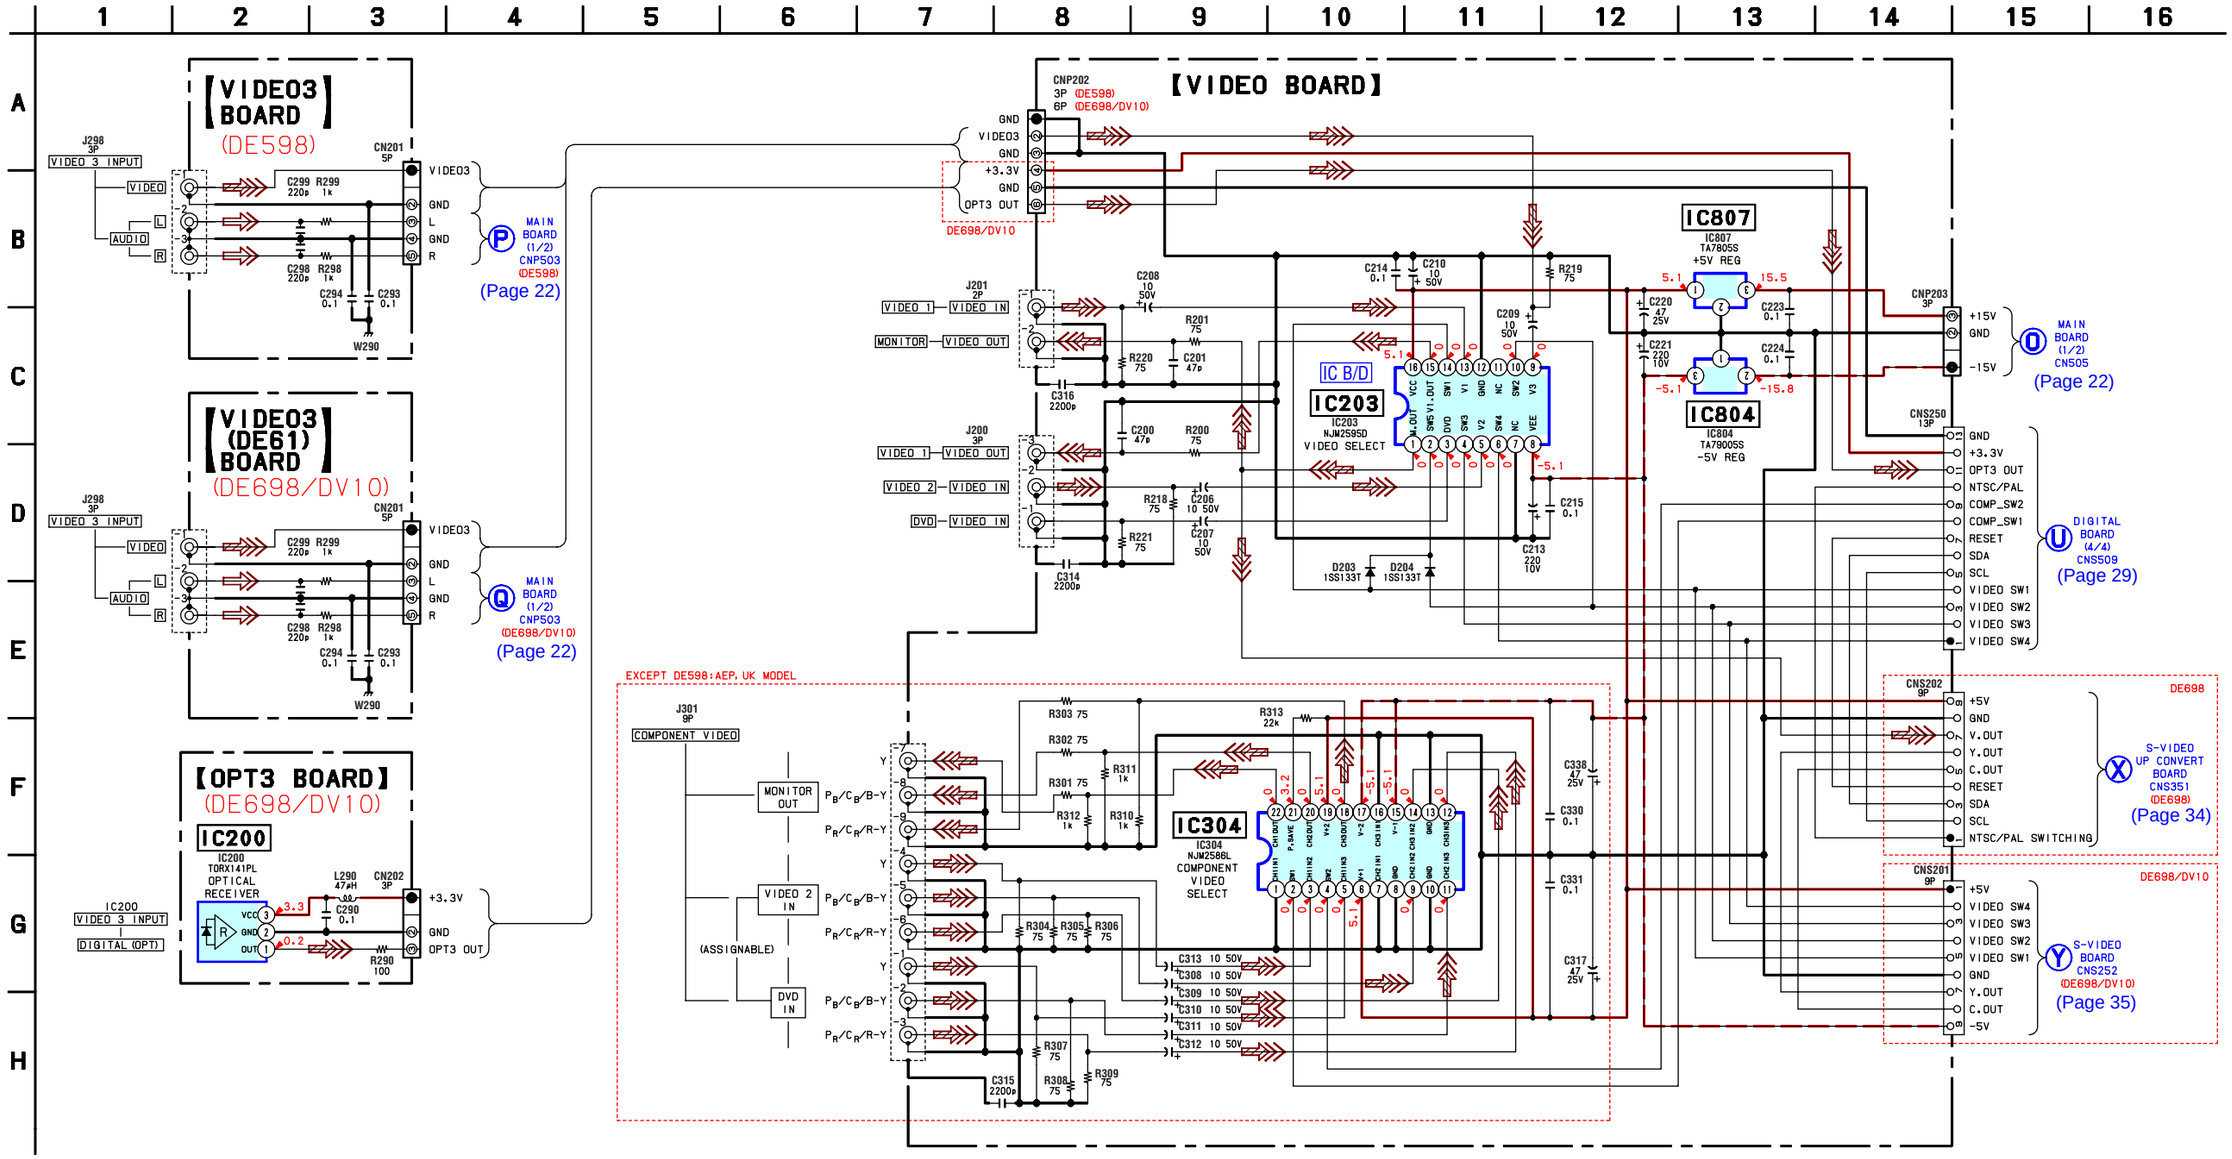

4-20. PRINTED WIRING BOARD — S-VIDEO UP CONVERT SECTION (STR-DE698) — • Refer to page 14 for Circuit Boards Location.

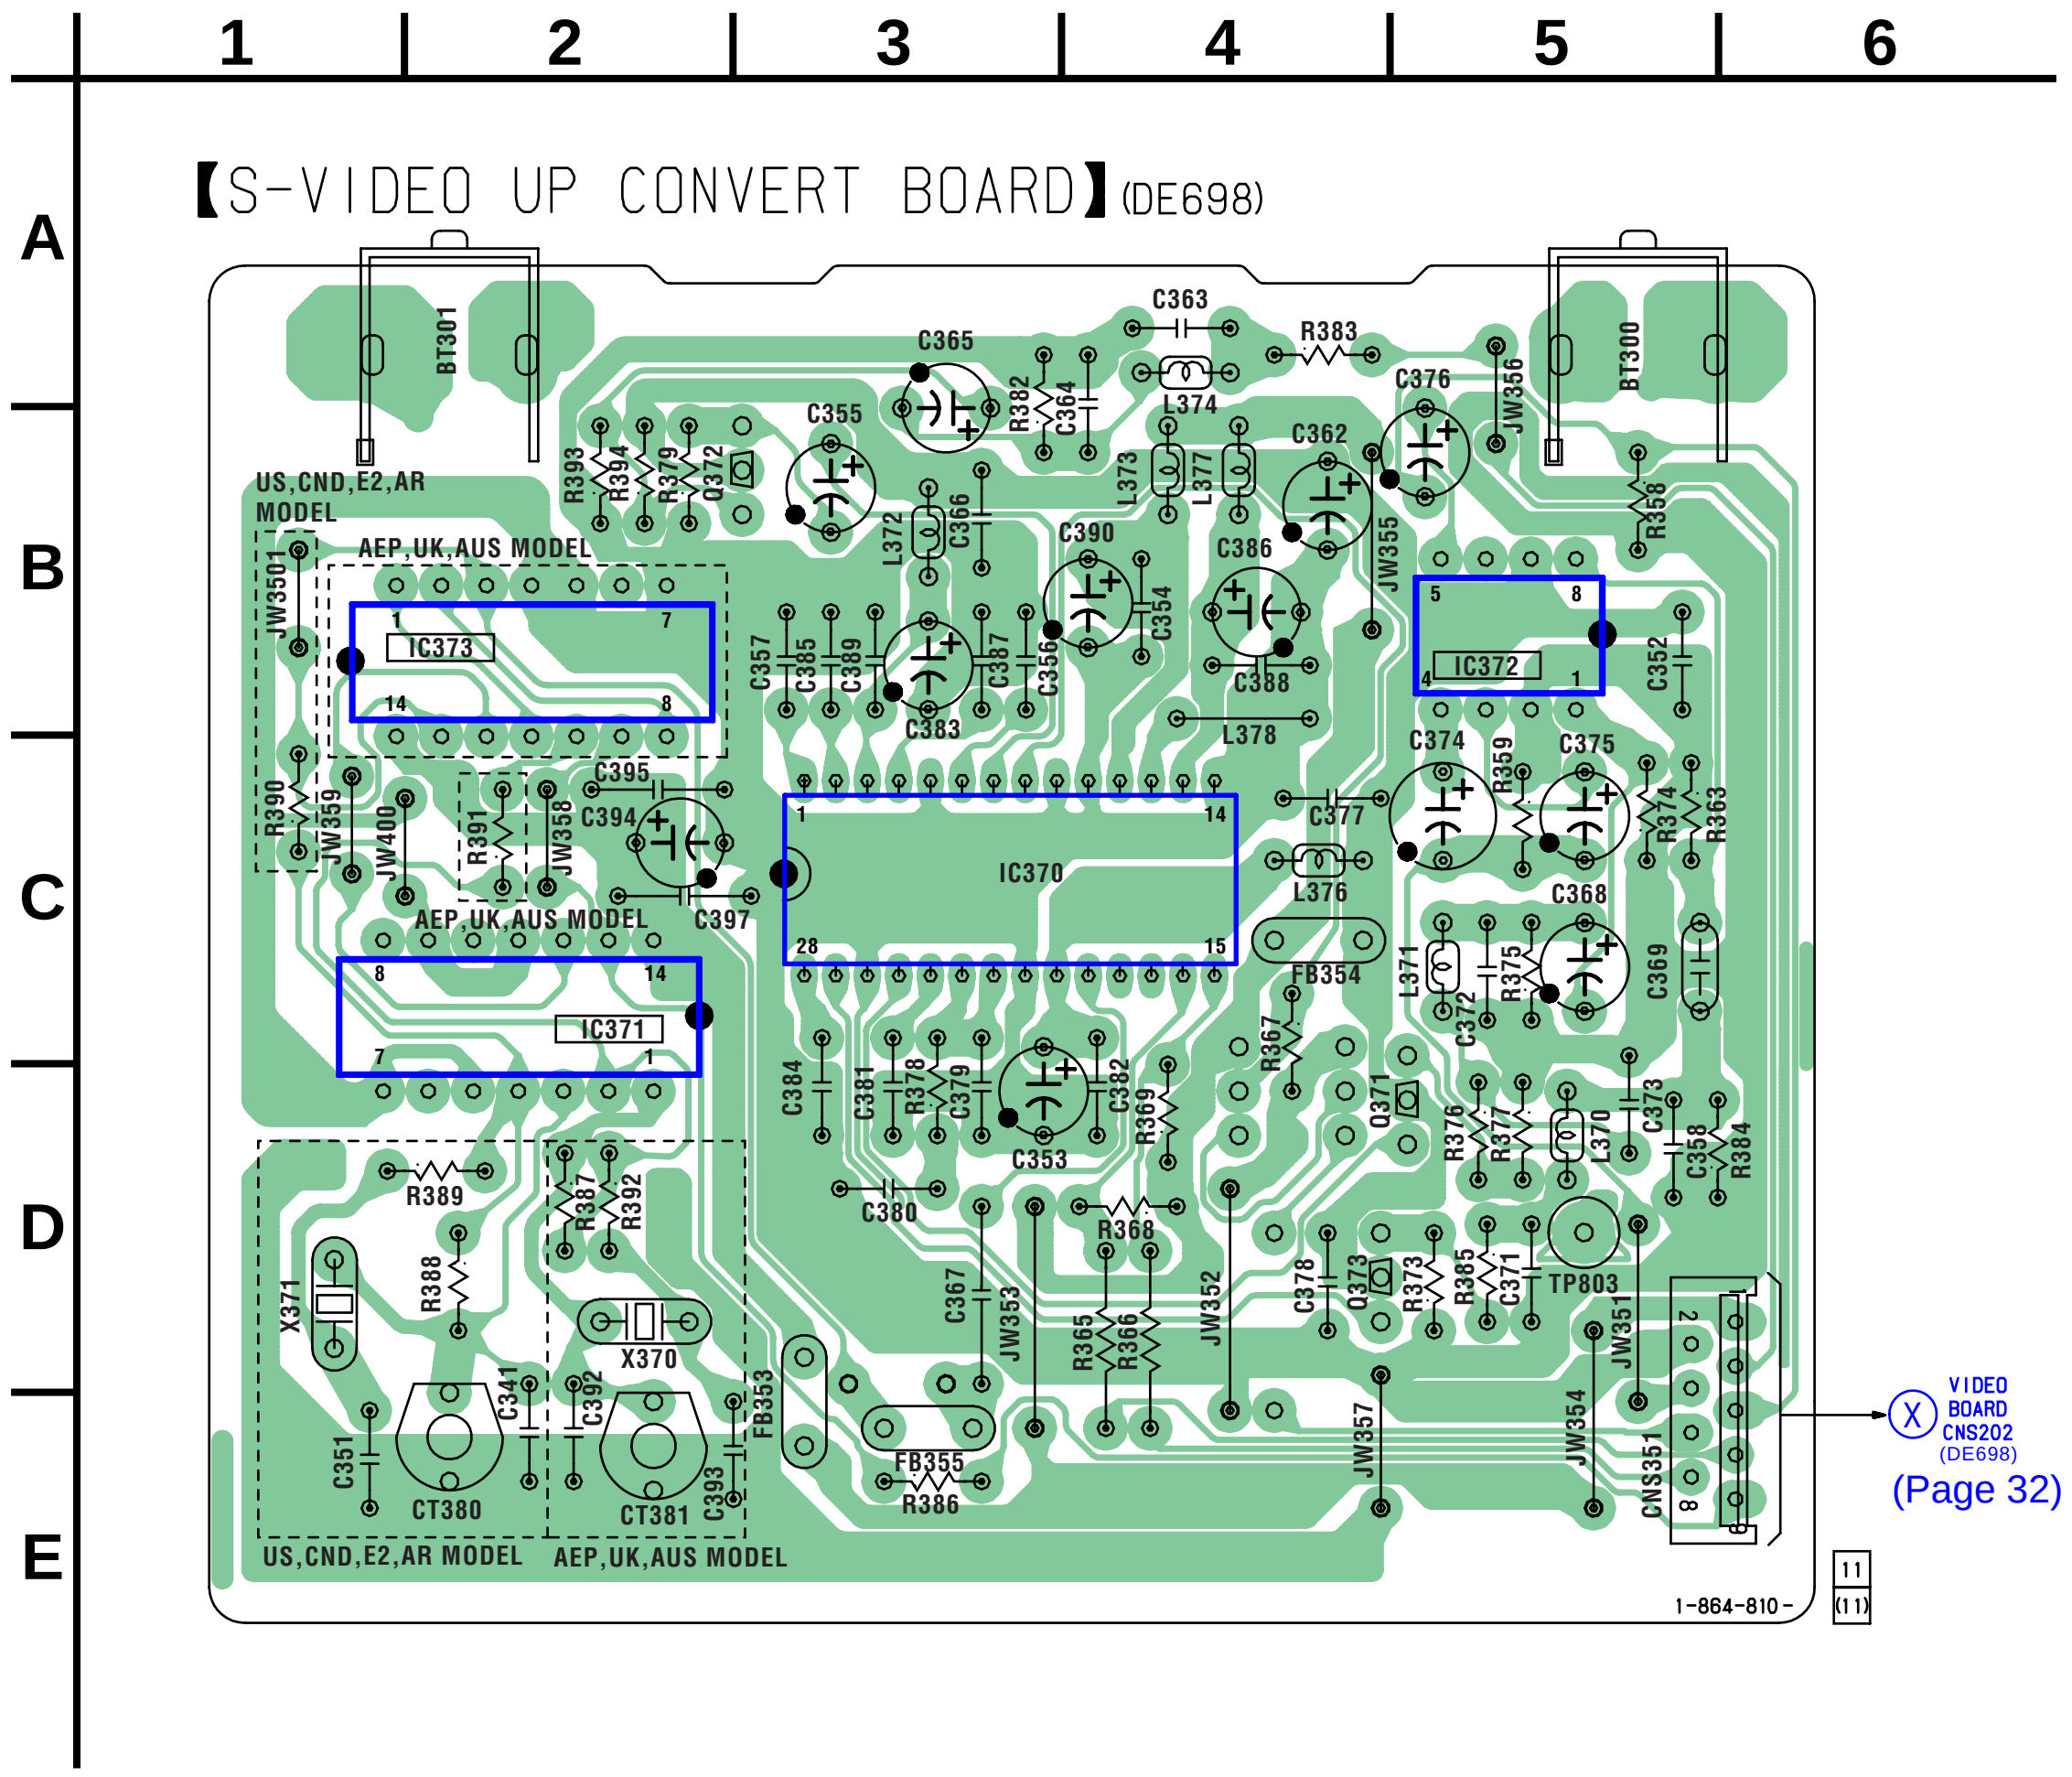

• Semiconductor Location (STR-DE698)

Ref. No.	Location
IC370	C-3
IC371	C-2
IC372	B-5
(IC373)	B-2
Q371	D-5
Q372	B-2
Q373	D-4

(   ): STR-DE698: AEP, UK, AUS model only

4-21. SCHEMATIC DIAGRAM — S-VIDEO UP CONVERT SECTION (STR-DE698) — • Refer to page 20 for Waveforms and page 41 for IC Block Diagrams.

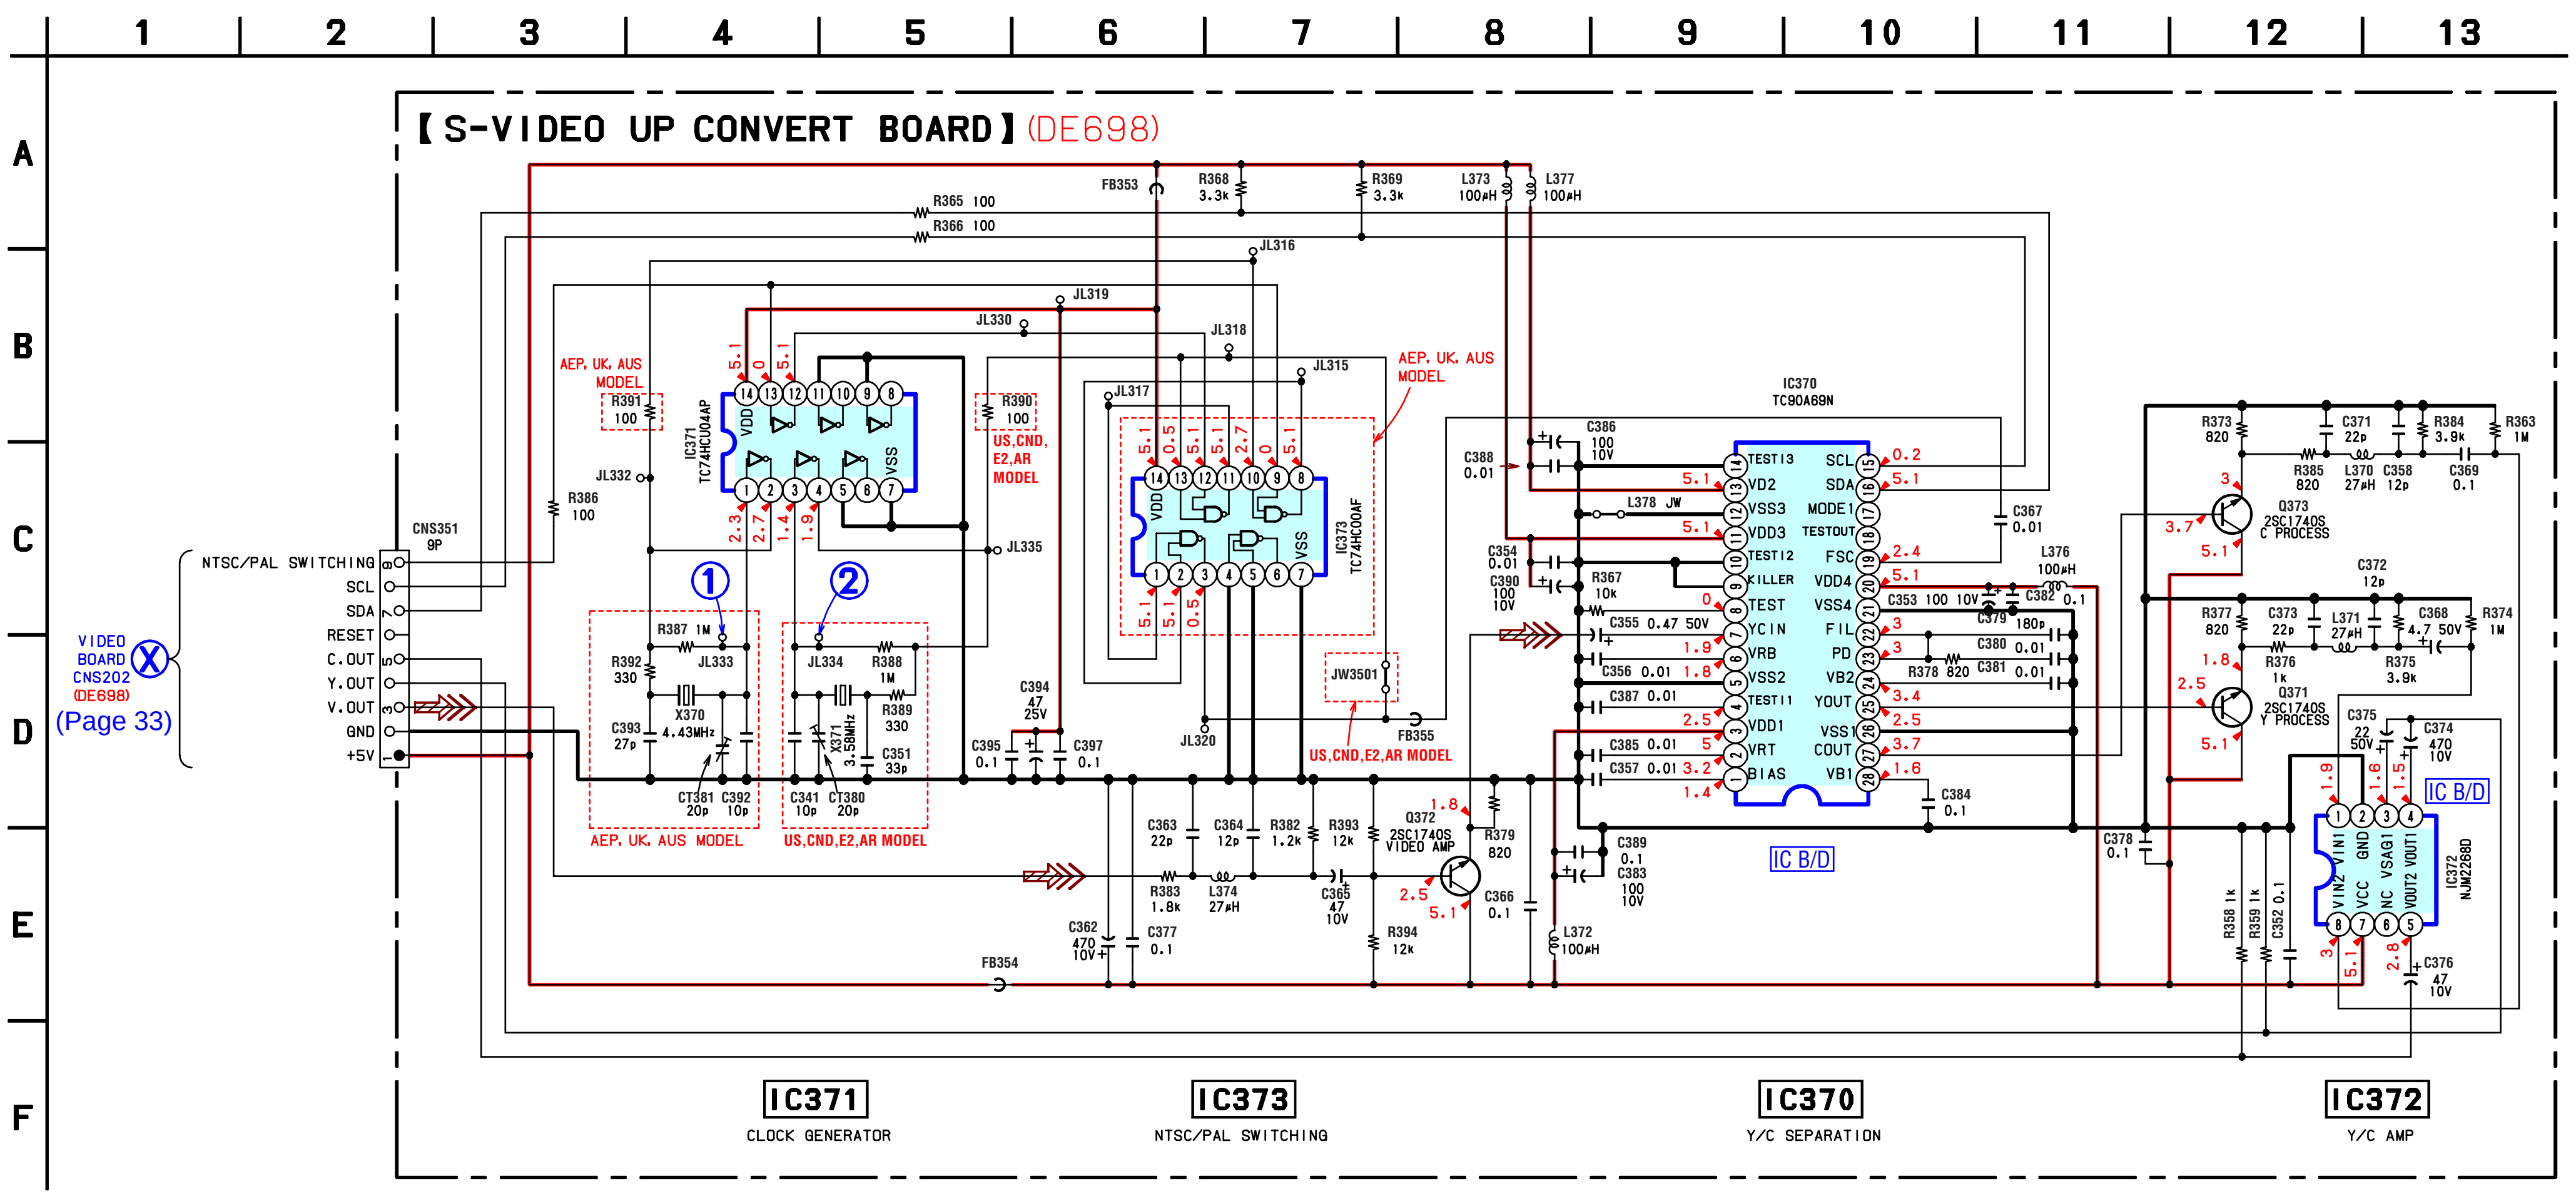
【S-VIDEO UP CONVERT BOARD】(DE698)
VIDEO BOARD CNS202 (DE698)
(Page 33)
NTSC/PAL SWITCHING
SCL
SDA
RESET
C.OUT
Y.OUT
V.OUT
GND
+5V
CNS351 9P
IC371 TC74HCU04AP
IC373 TC74HC00AF
IC370 TC90A69N
IC372 NJM2268D
Q372 2SC1740S VIDEO AMP
Q373 2SC1740S C PROCESS
Q371 2SC1740S Y PROCESS
AEP, UK, AUS MODEL
US,CND,E2,AR MODEL
IC B/D
IC371 CLOCK GENERATOR
IC373 NTSC/PAL SWITCHING
IC370 Y/C SEPARATION
IC372 Y/C AMP

4-22. PRINTED WIRING BOARD — S-VIDEO SECTION (STR-DE698/DV10) — • Refer to page 14 for Circuit Boards Location.

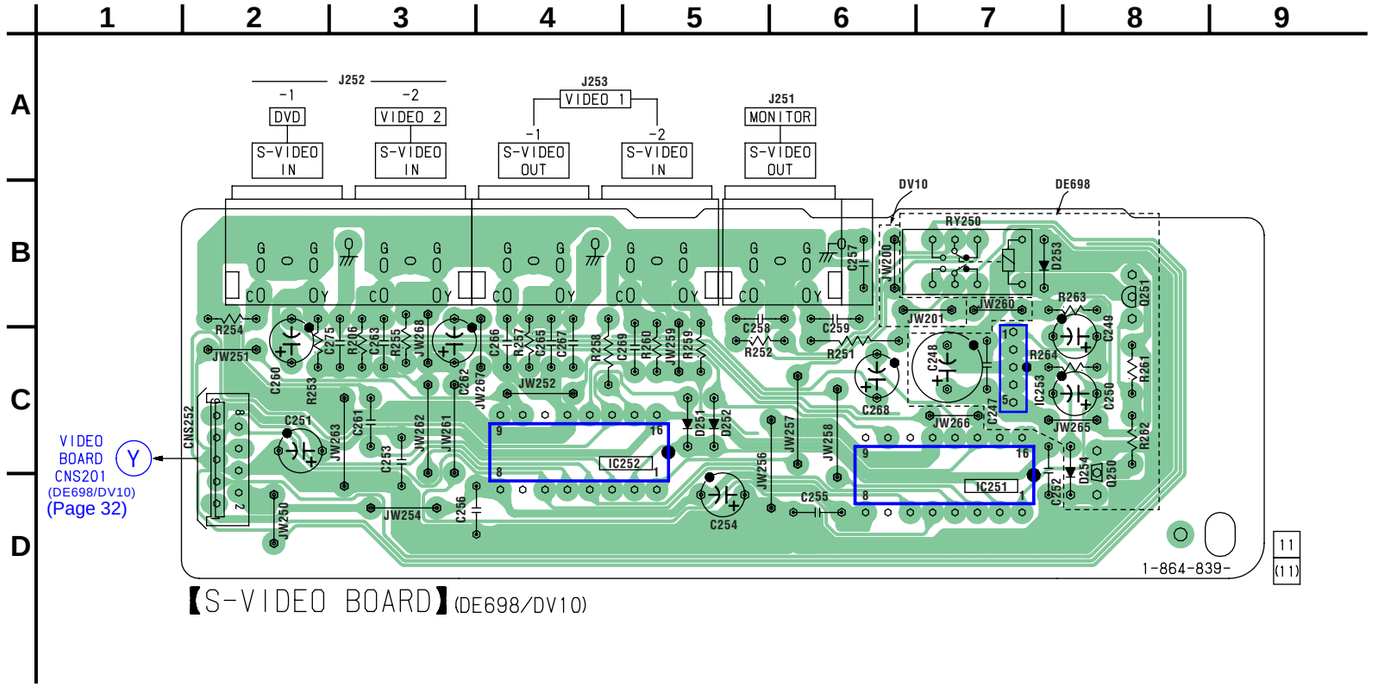

4-23. SCHEMATIC DIAGRAM — S-VIDEO SECTION (STR-DE698/DV10) — • Refer to page 41 for IC Block Diagrams.

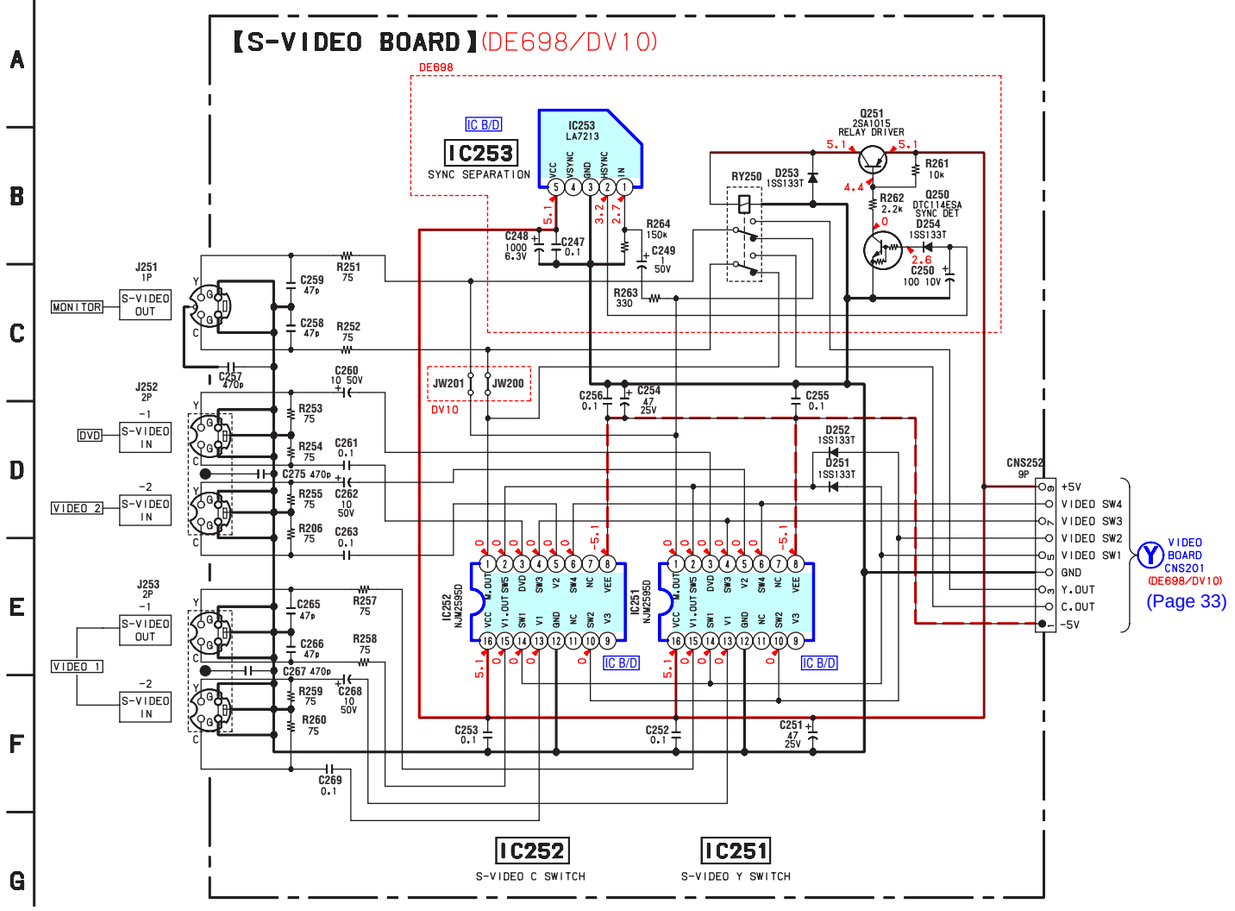

• **Semiconductor Location (STR-DE698/DV10)**

Ref. No.	Location
D251	C-5
D252	C-5
(D253)	B-7
(D254)	D-8
IC251	D-7
IC252	C-4
(IC253)	C-7
(Q250)	D-8
(Q251)	B-8

( ) : STR-DE698 only

4-24. PRINTED WIRING BOARDS — PANEL SECTION — • Refer to page 14 for Circuit Boards Location.

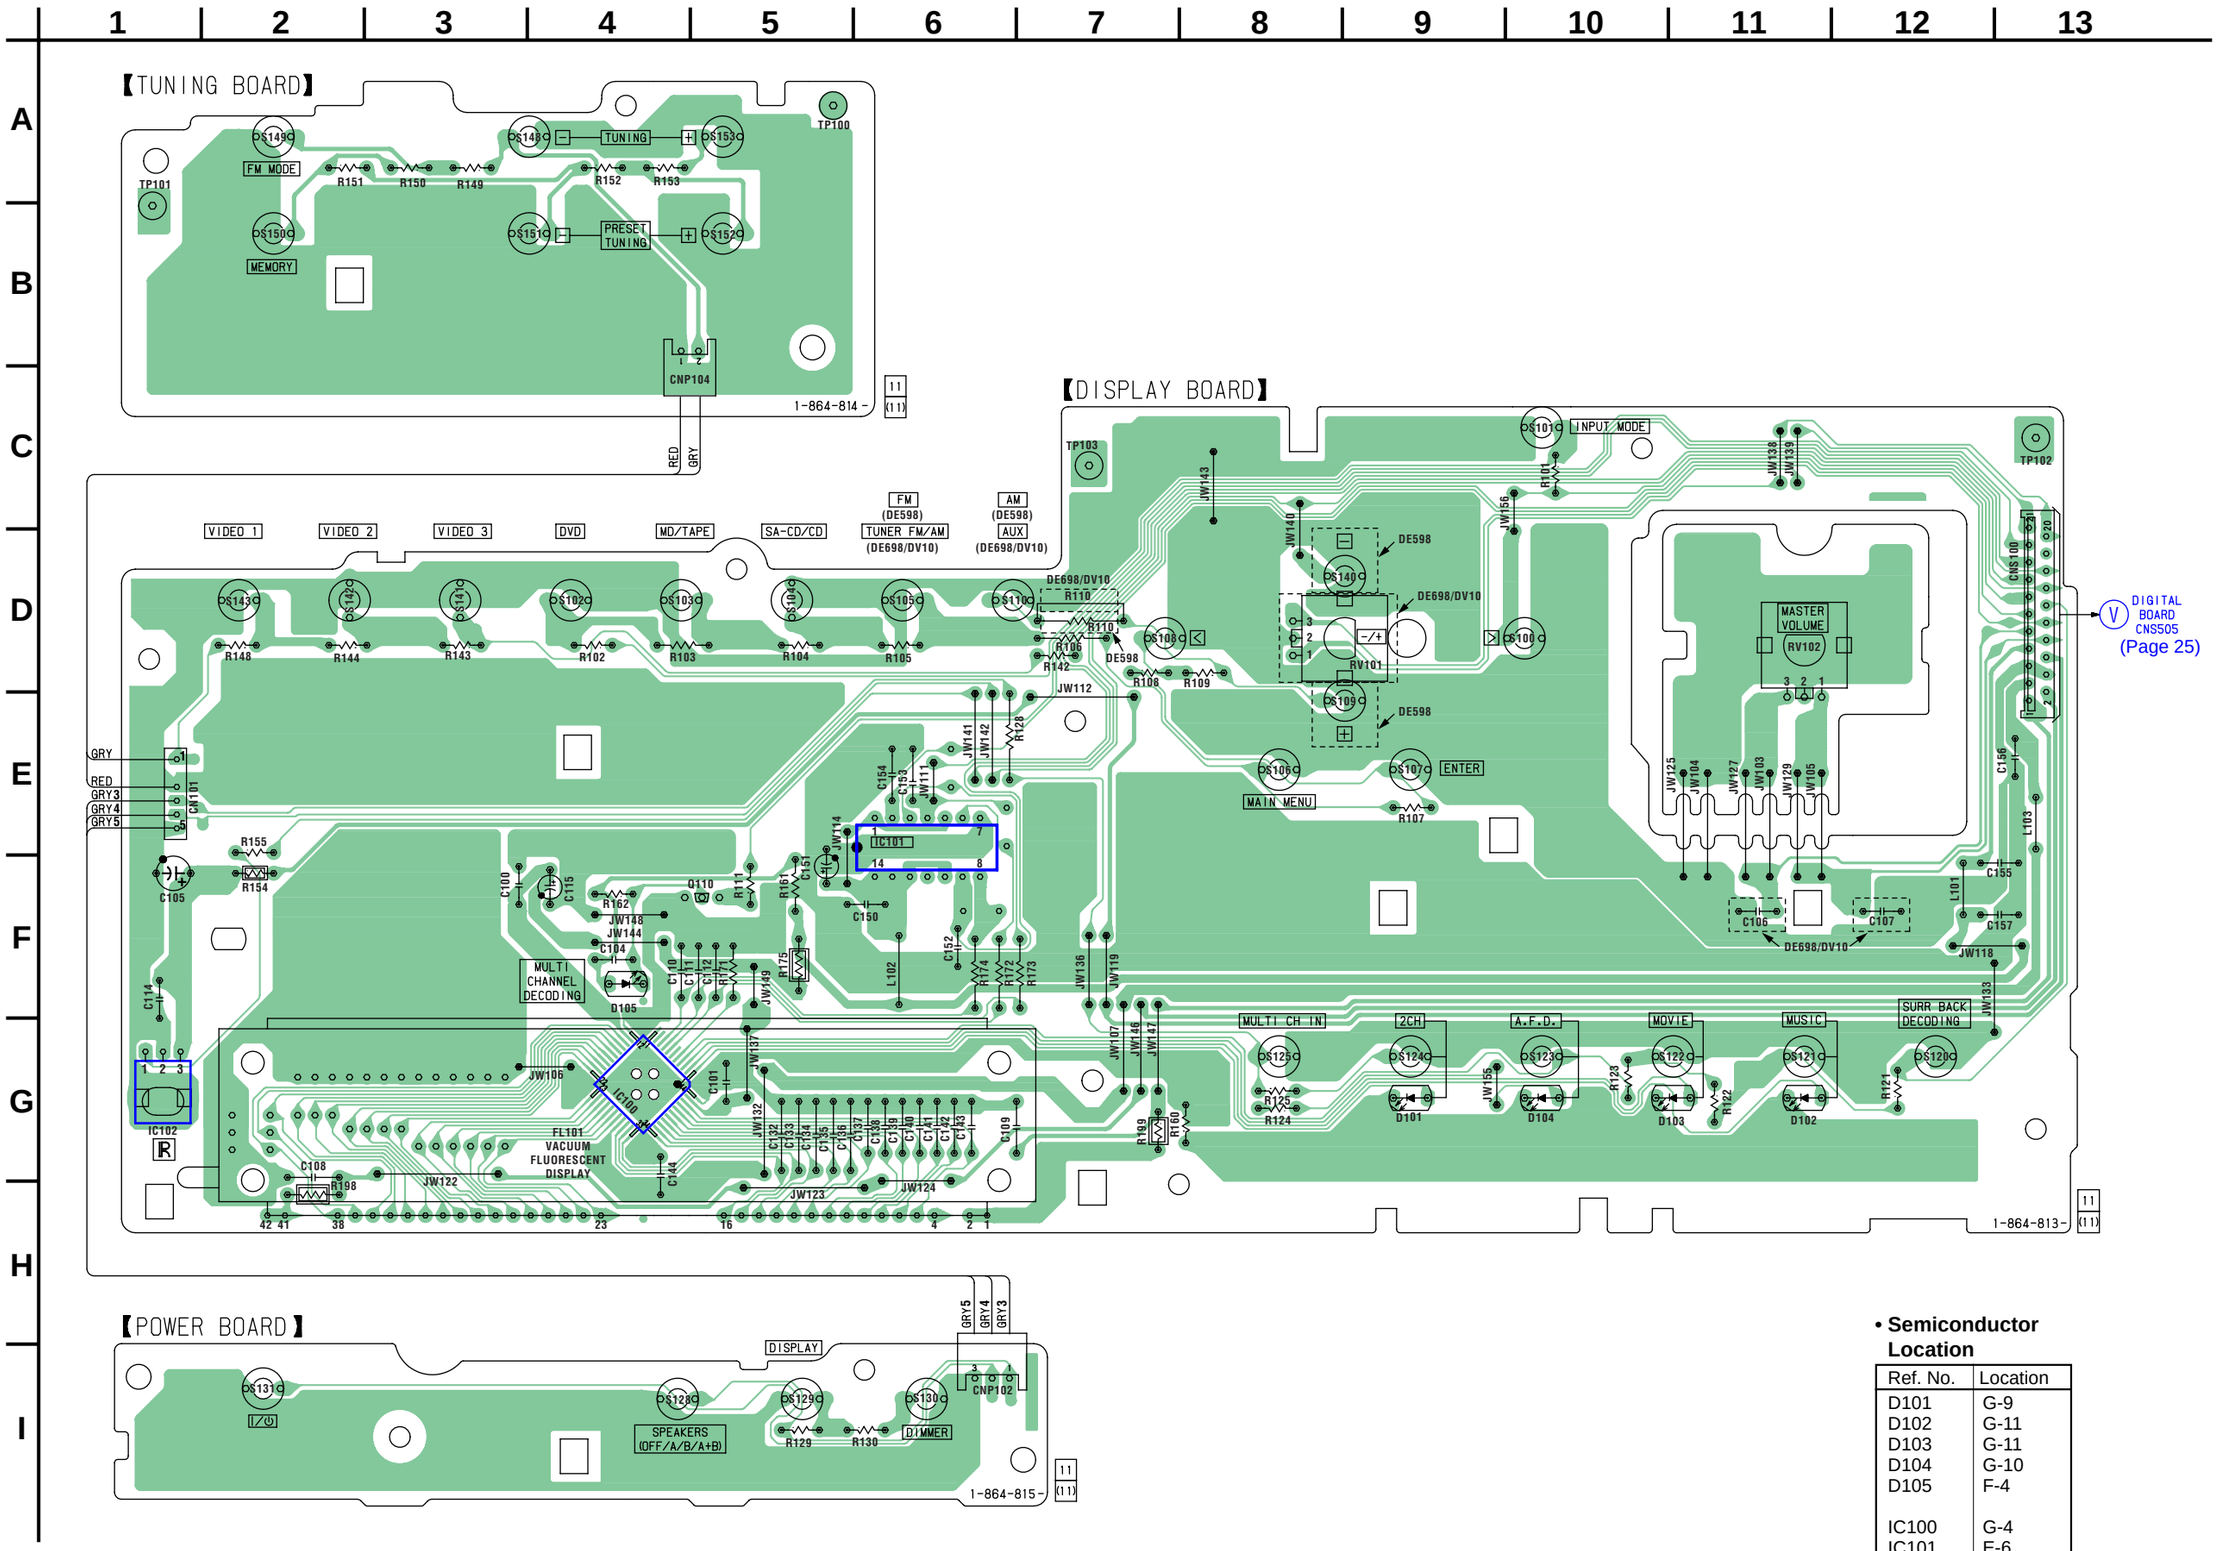

- **Semiconductor Location**

Ref. No.	Location
D101	G-9
D102	G-11
D103	G-11
D104	G-10
D105	F-4
IC100	G-4
IC101	E-6
IC102	G-1
Q110	F-5

4-25. SCHEMATIC DIAGRAM — PANEL SECTION —

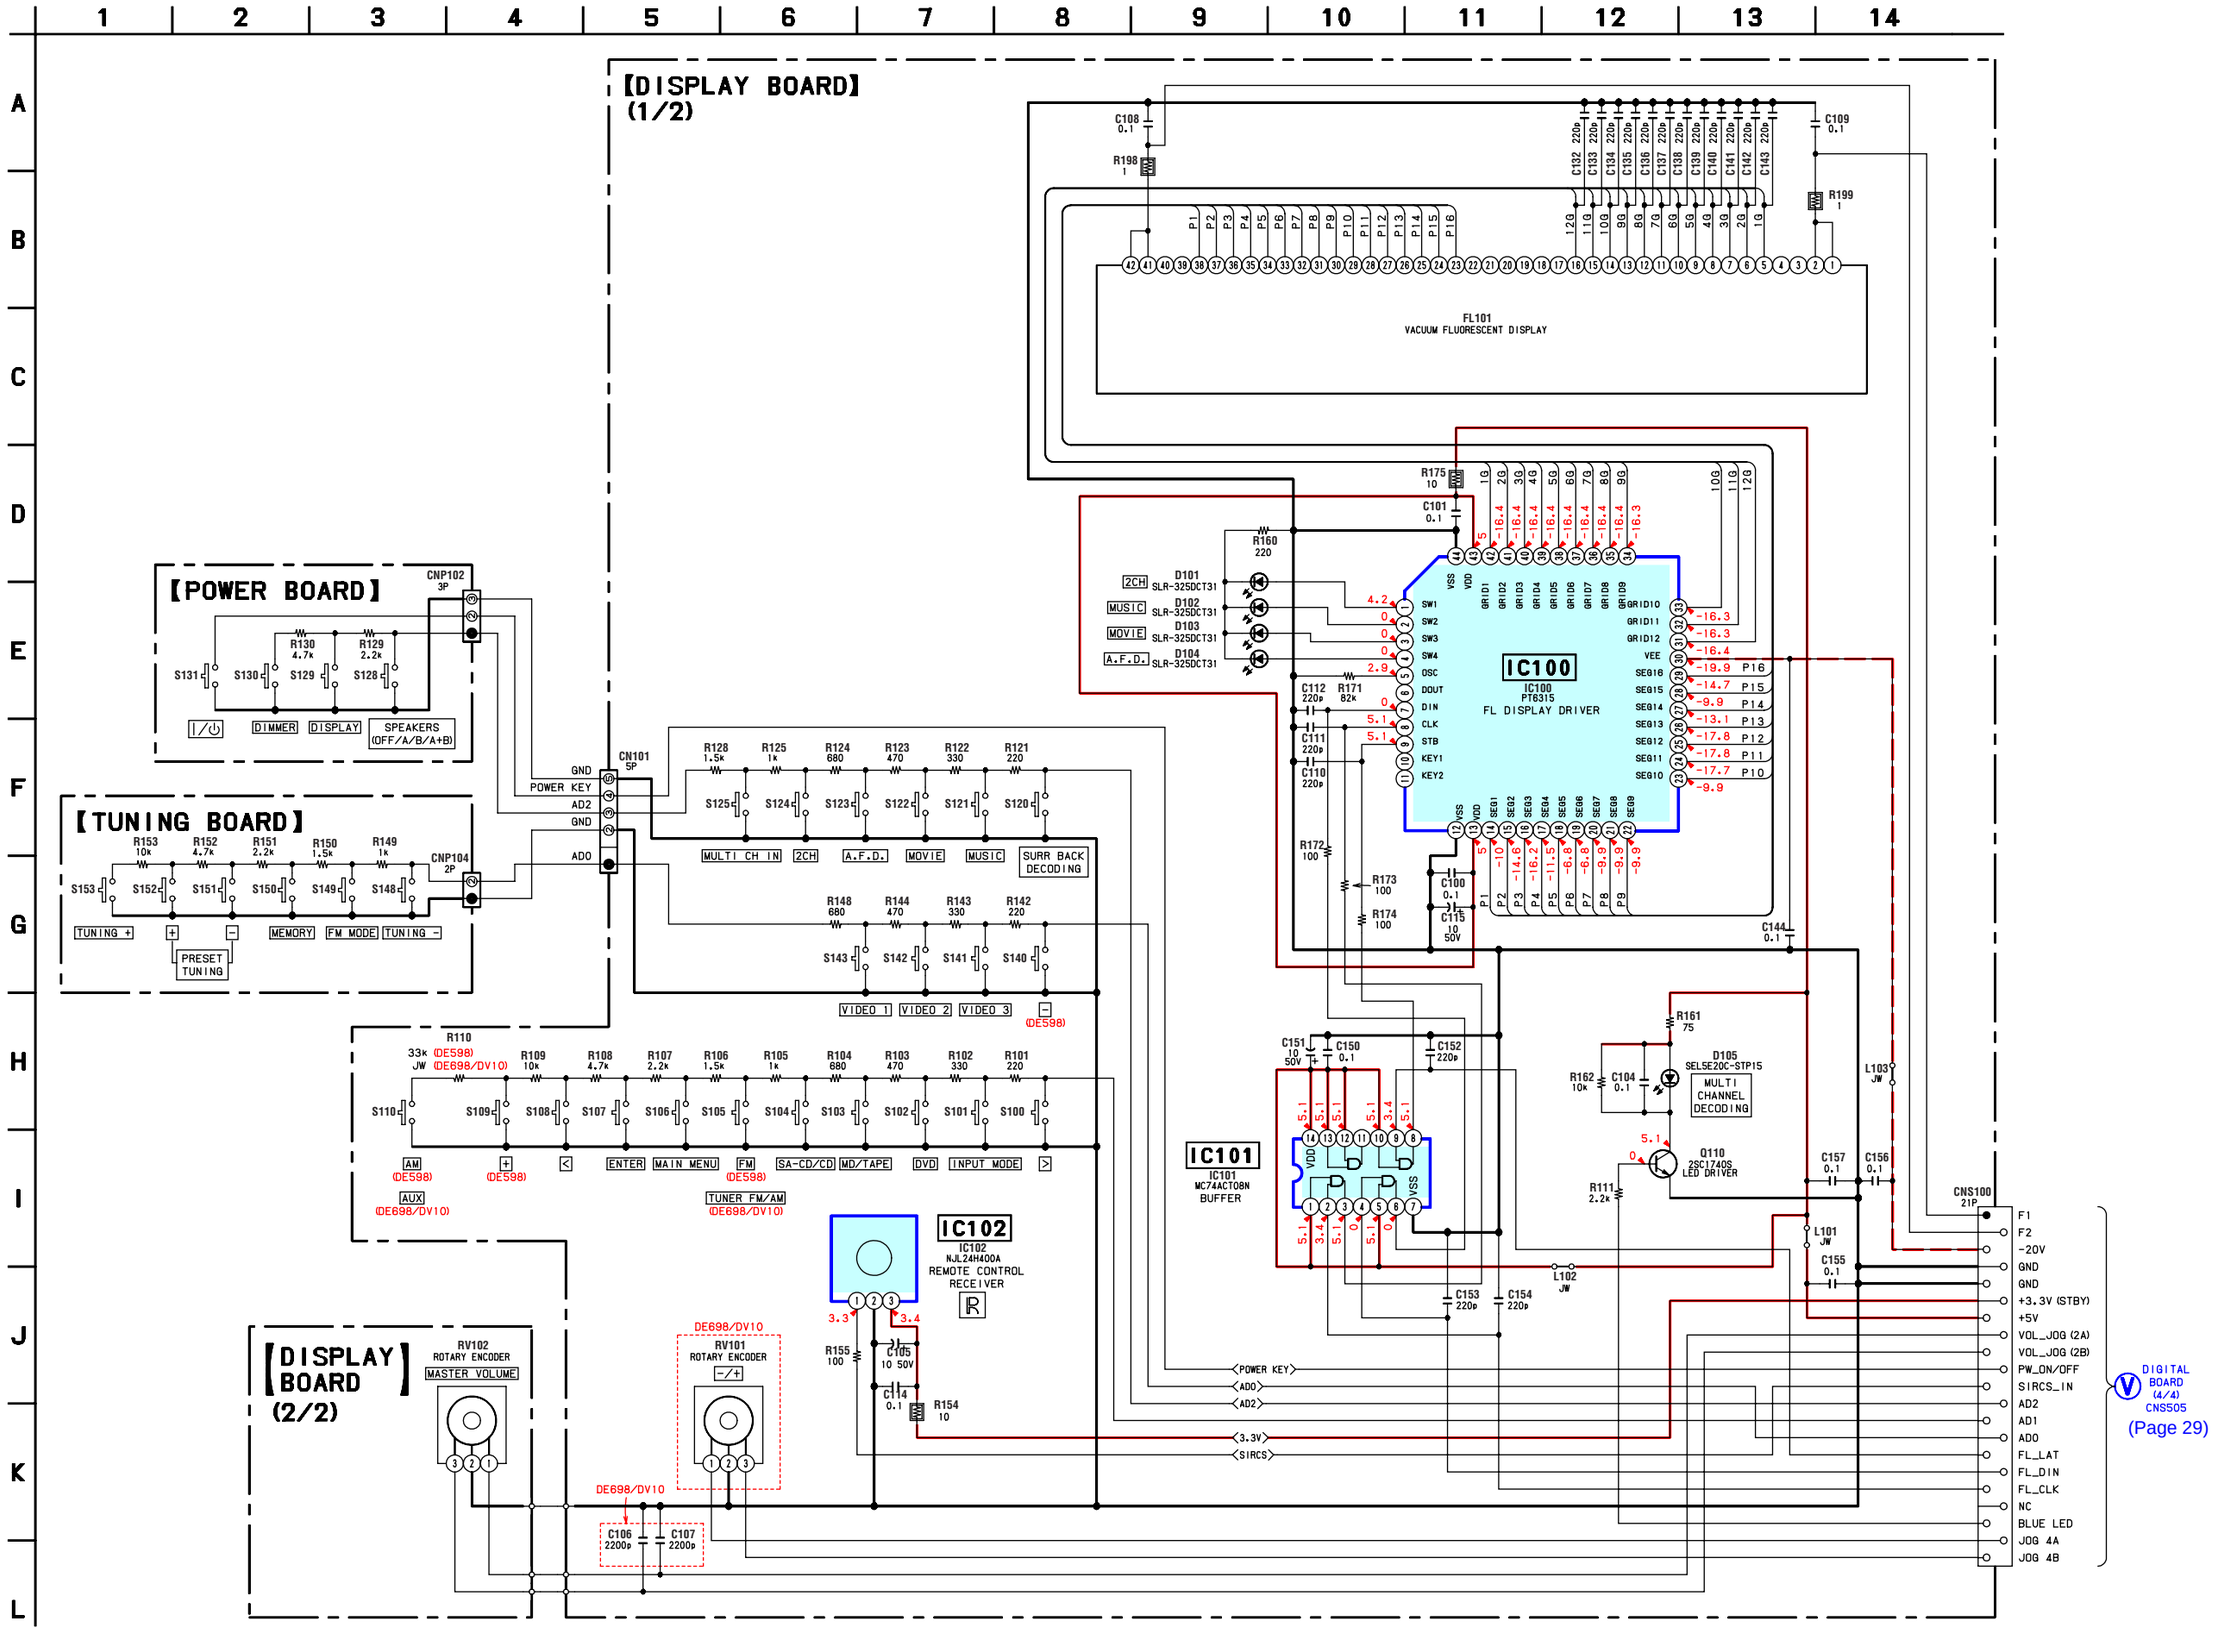

4-26. PRINTED WIRING BOARD — POWER SECTION — • Refer to page 14 for Circuit Boards Location.

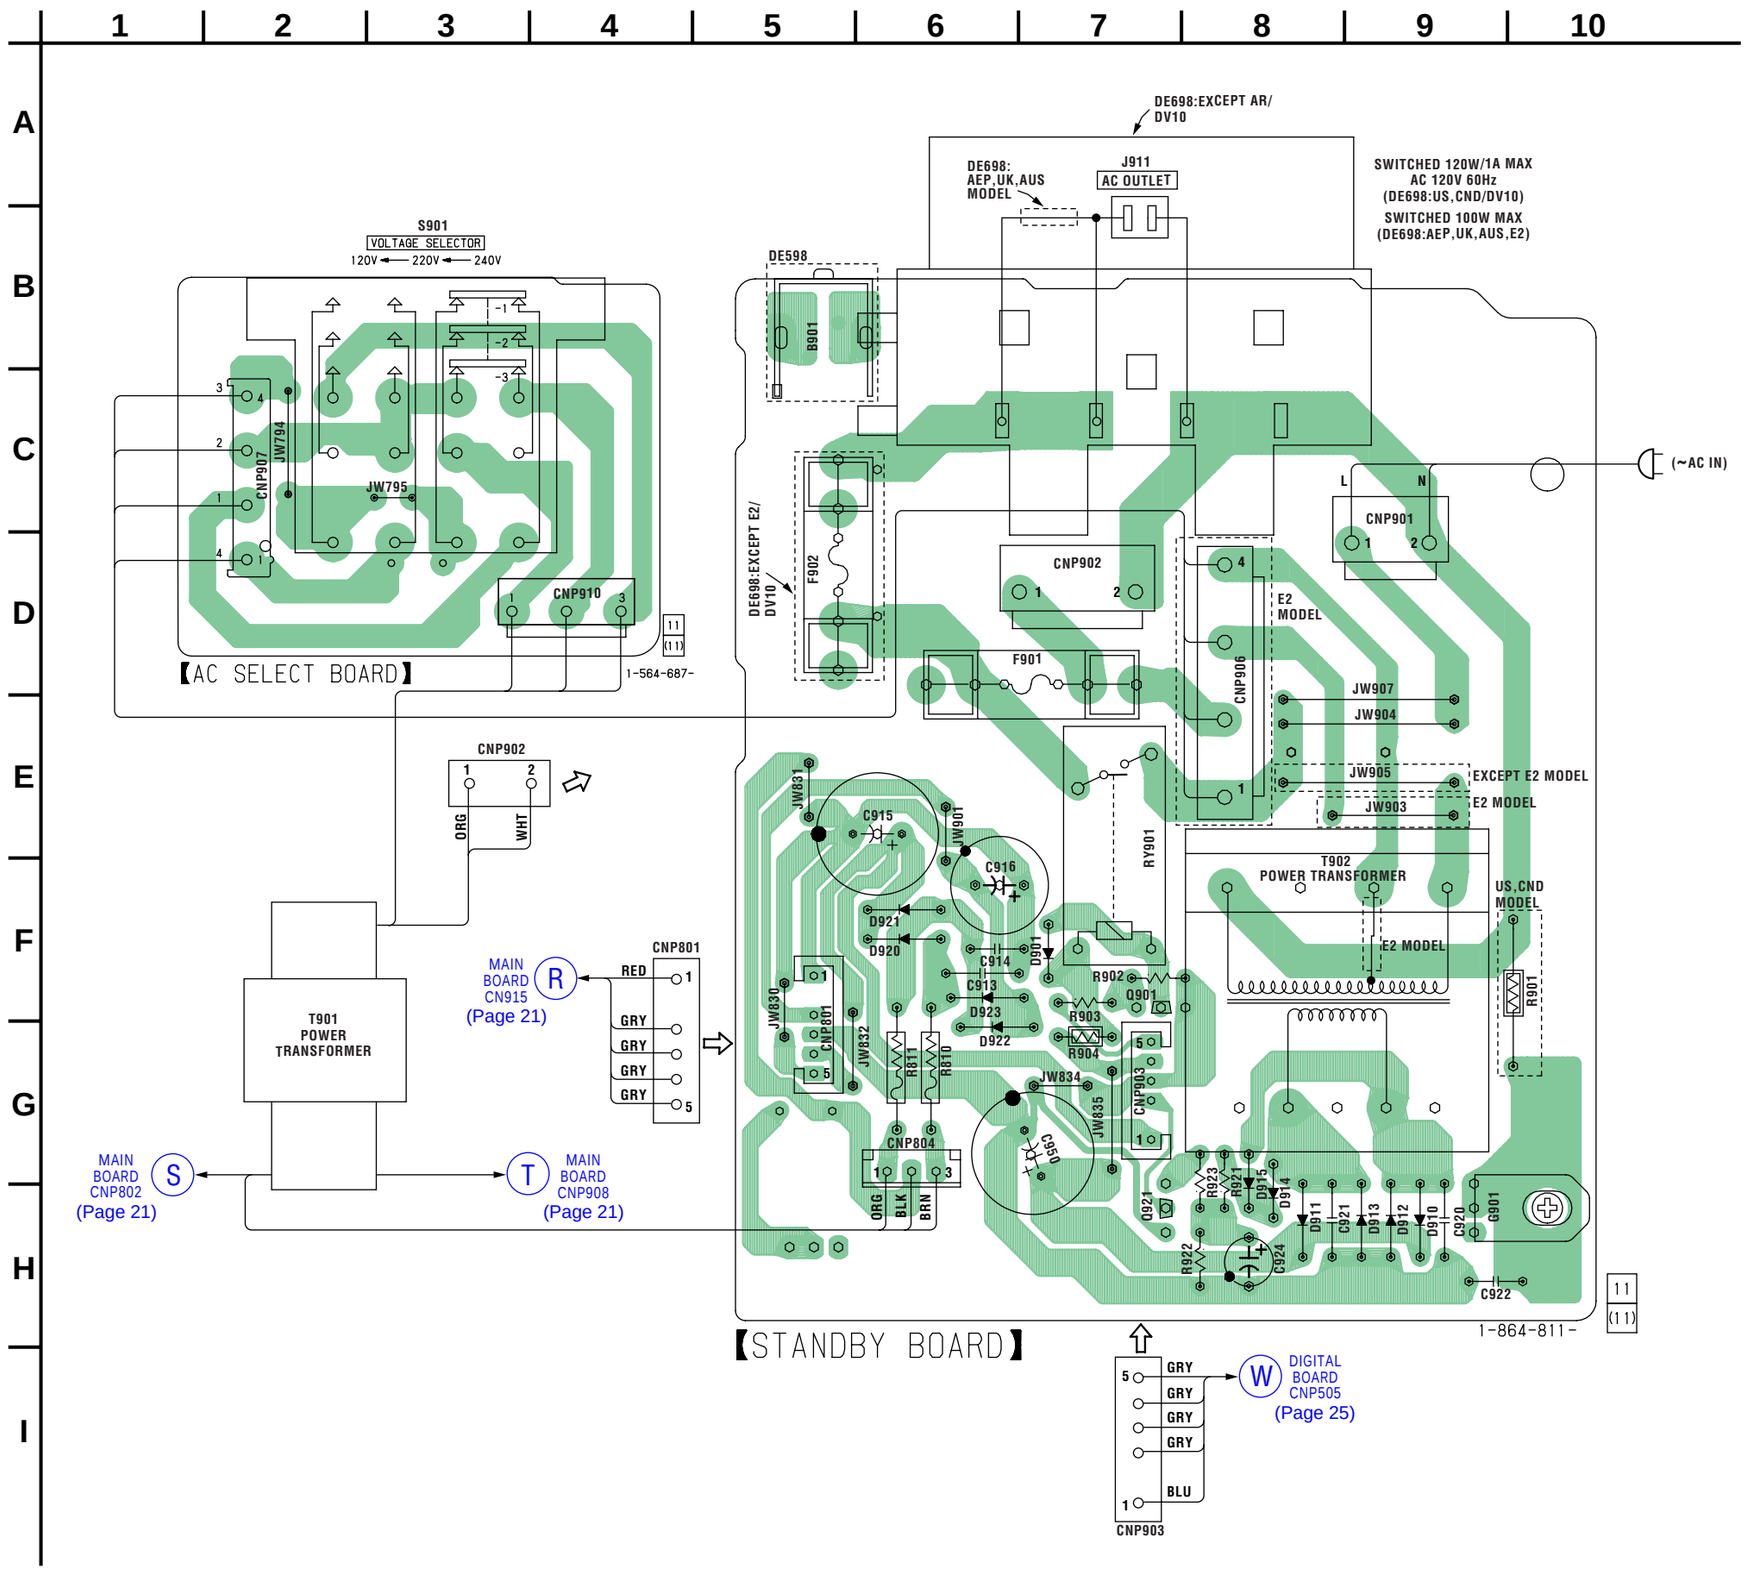

- **Semiconductor Location**

Ref. No.	Location
D901	F-7
D910	H-9
D911	H-8
D912	H-9
D913	H-9
D914	H-8
D915	H-8
D920	F-6
D921	F-6
D922	G-6
D923	F-6
Q901	F-7
Q921	H-7

4-27. SCHEMATIC DIAGRAM — POWER SECTION —

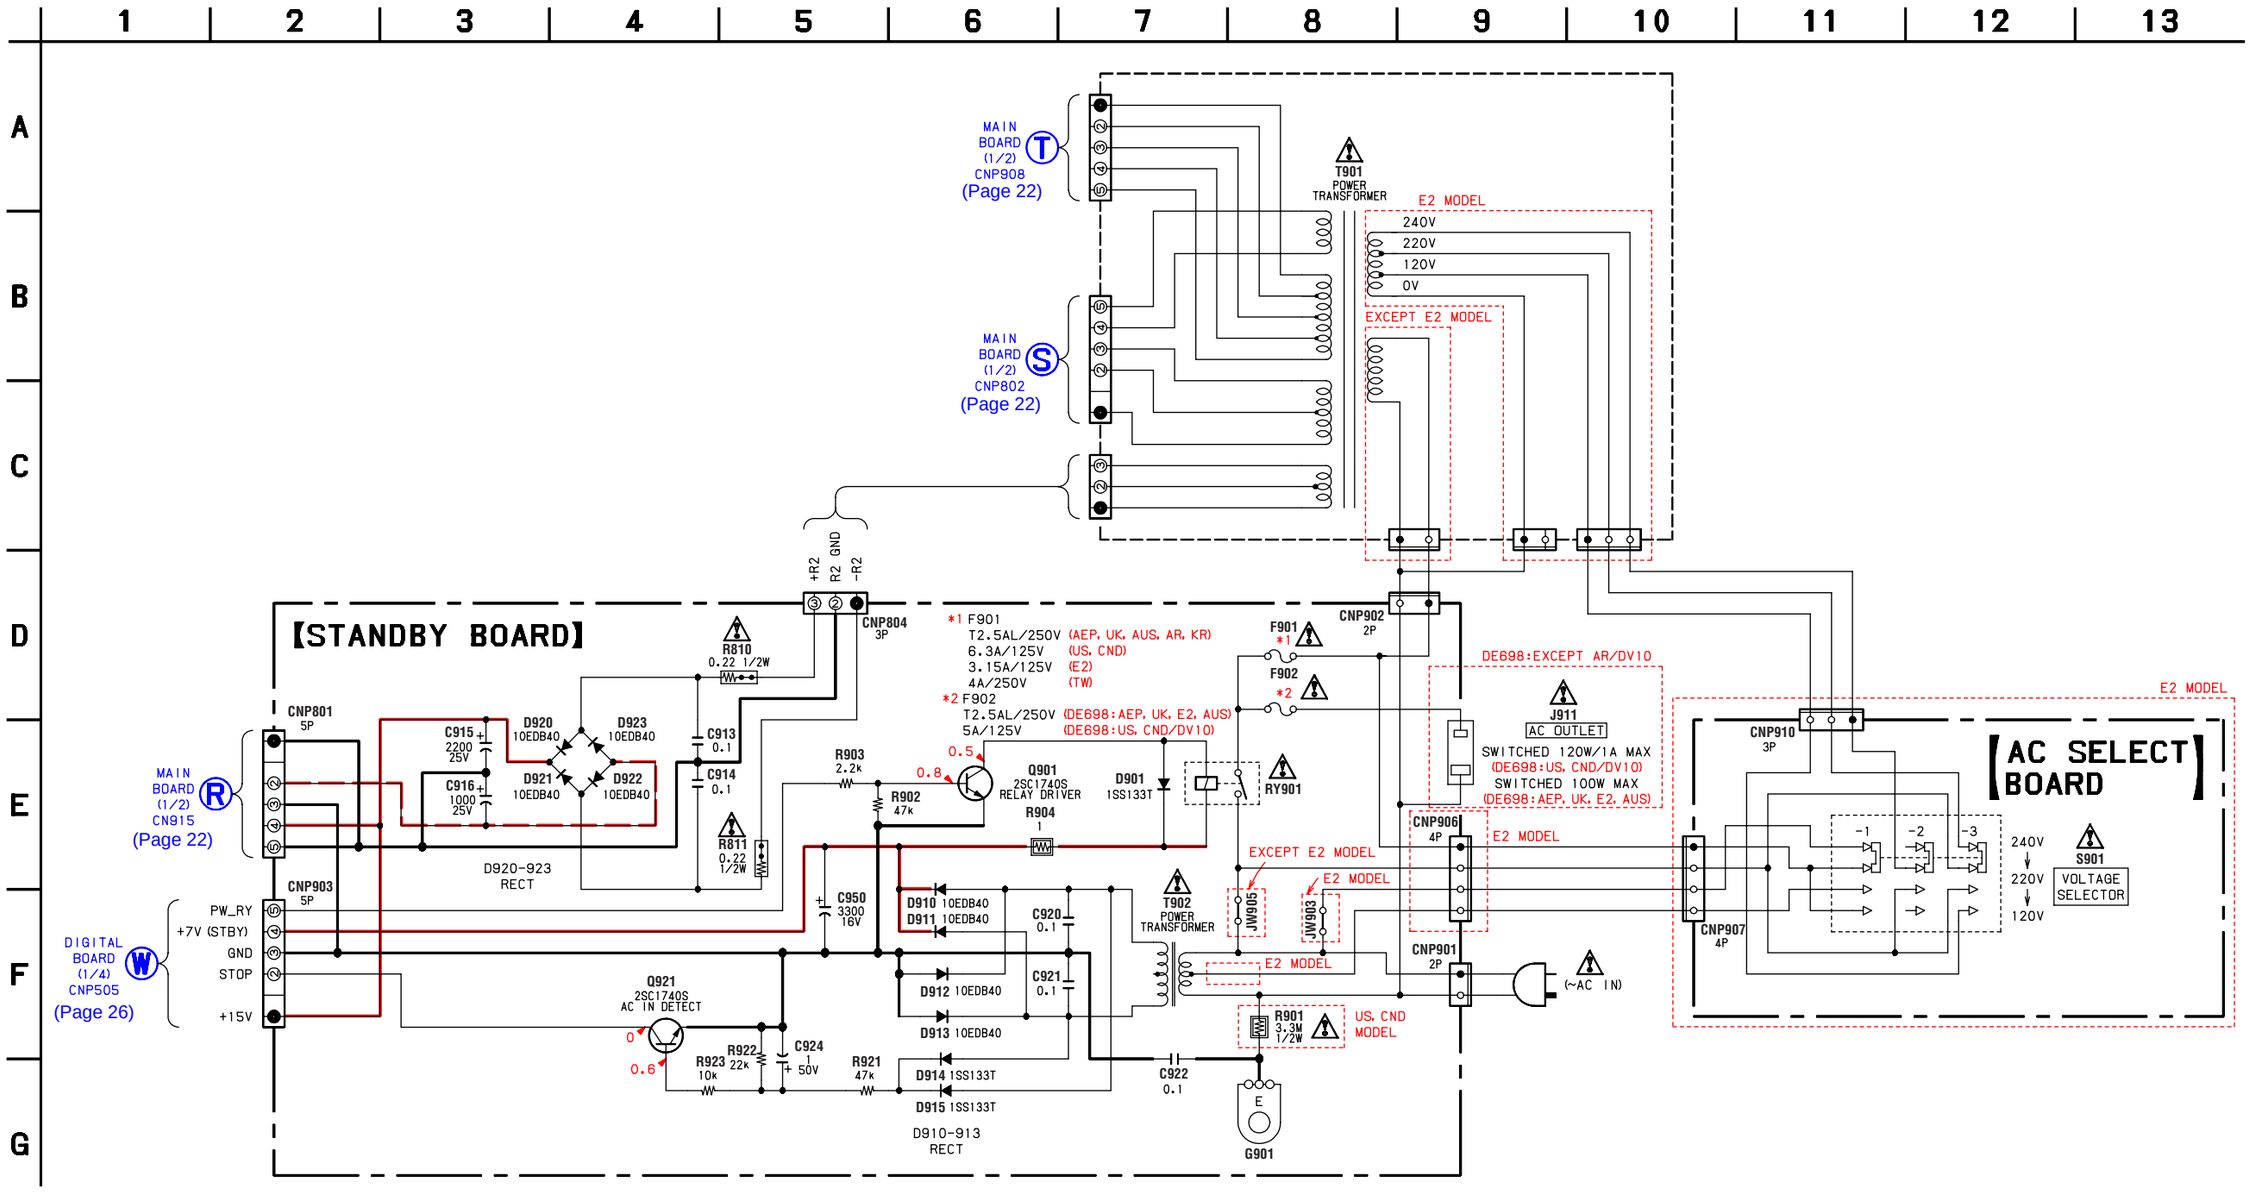

The components identified by mark ⚠ or dotted line with mark ⚠ are critical for safety.
Replace only with part number specified.

Les composants identifiés par une marque ⚠ sont critiques pour la sécurité.
Ne les remplacer que par une pièce portant le numéro spécifié.

• IC Block Diagrams

IC501 µPC2581V-S (MAIN BOARD (2/2))
IC601 µPC2581V-S (MAIN BOARD (2/2))
IC701 µPC2581V-S (MAIN BOARD (2/2))

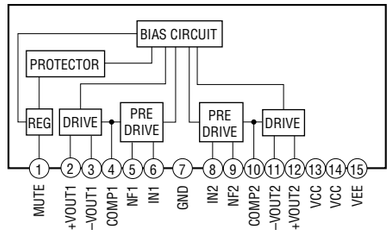

IC1301 LC89056W-E (DIGITAL BOARD (1/4))

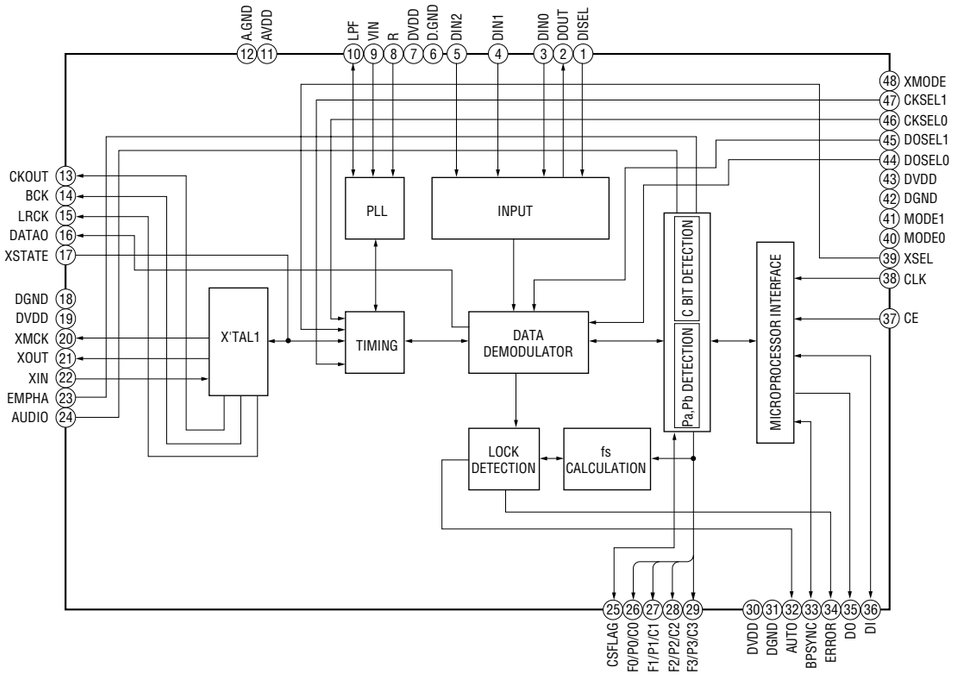

IC1302 TC74ACT153F(EL) (DIGITAL BOARD (1/4)) (STR-DE698/DV10)

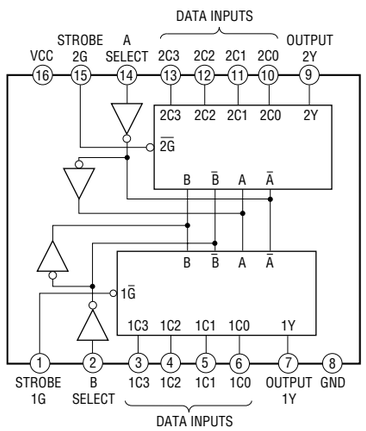

IC1401 PCM1800E/2K (DIGITAL BOARD (3/4))

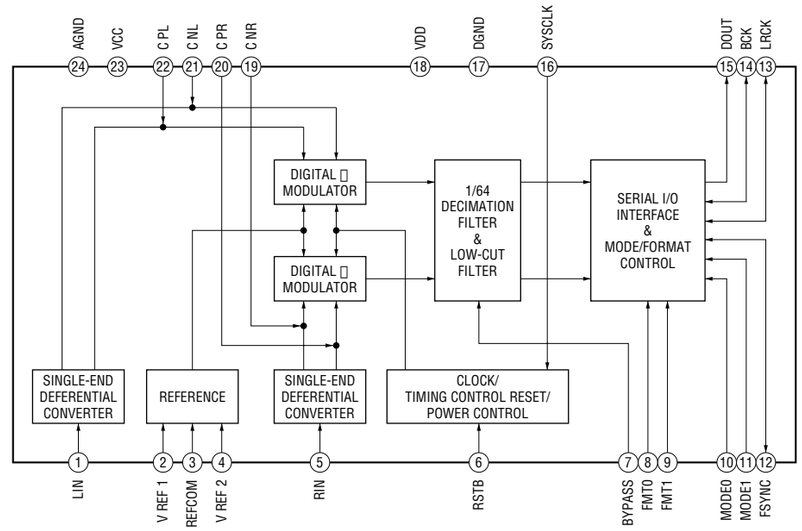

IC1452 PCM1609KPTR (DIGITAL BOARD (3/4))

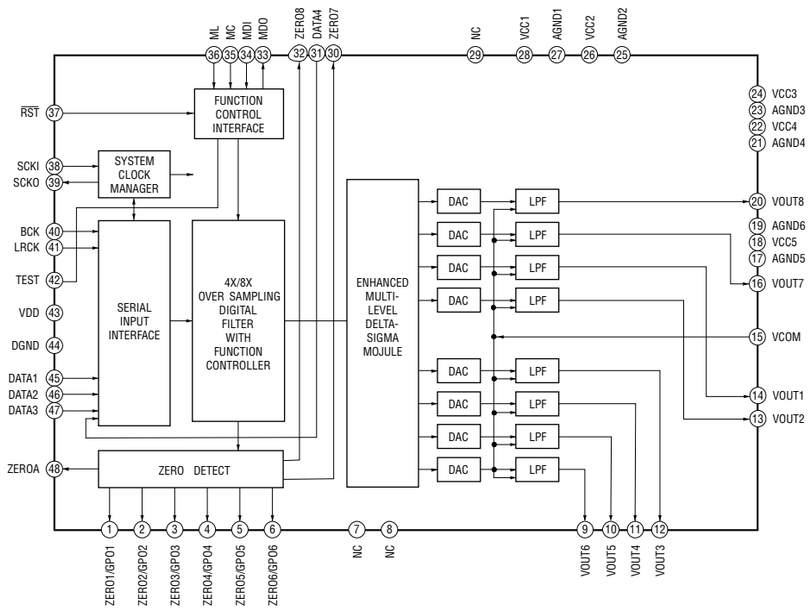

IC2501 STK350-230 (SB AMP BOARD) (STR-DE698/DV10)

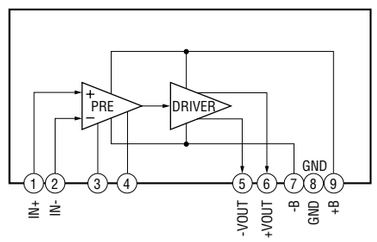

IC203 NJM2595D (VIDEO BOARD)
IC251 NJM2595D (S-VIDEO BOARD)
IC252 NJM2595D (S-VIDEO BOARD)

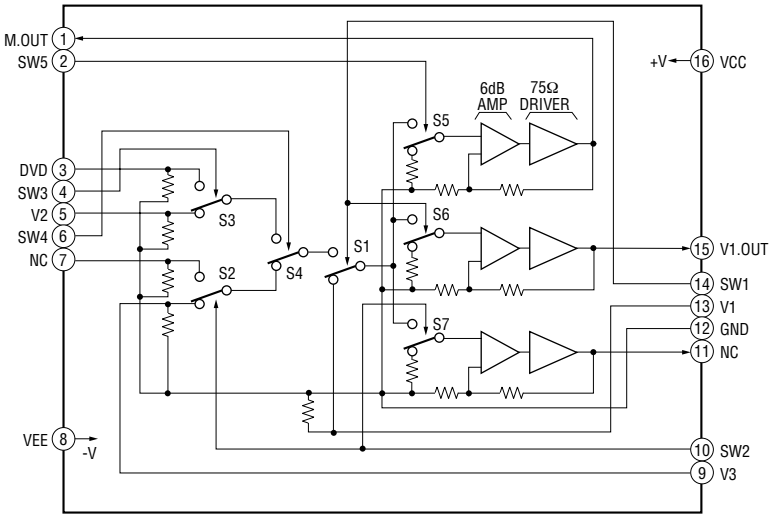

IC370 TC90A69N (S-VIDEO UP CONVERT BOARD) (STR-DE698)

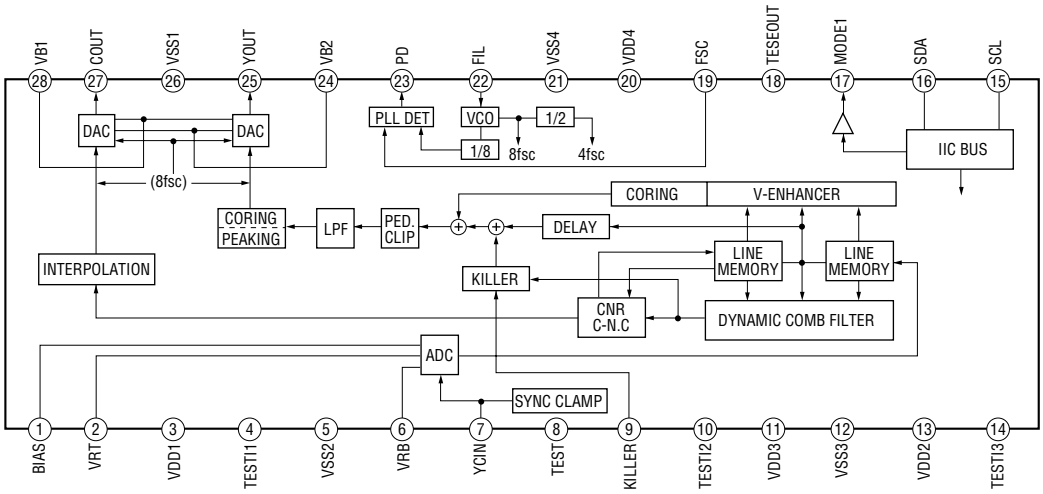

IC372 NJM2268D (S-VIDEO UP CONVERT BOARD) (STR-DE698)

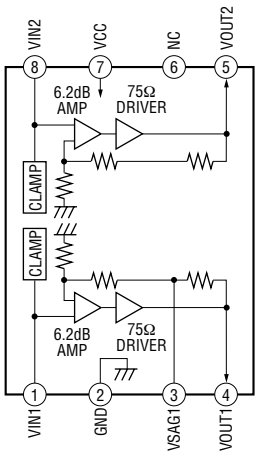

IC253 LA7213 (S-VIDEO BOARD) (STR-DE698)

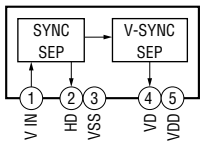

• IC Pin Descriptions

IC1501 CXD9718BQ (DSP) (DIGITAL Board (2/4))

Pin No.	Pin Name	I/O	Pin Description
1	VSS	—	Ground
2	XRST	I	Reset signal input from SYSTEM CONTROL IC
3	EXTIN	I	Not used (Connect to ground)
4	LRCKI3	I	Not used (Connect to ground)
5	VDDI	I	Power supply pin (+2.7 V)
6	BCKI3	I	Not used (Connect to ground)
7	PLOCK	O	Not used (Open)
8	VSS	—	Ground
9	MCLK1	I	Clock signal input (13.9 MHz)
10	VDDI	I	Power supply pin (+2.7 V)
11	VSS	—	Ground
12	MCLK2	O	Clock signal output (13.9 MHz)
13	MS	I	Not used (Fixed at L)
14	SCKOUT	O	Internal system clock signal output for 8CH DAC IC
15	LRCKI1	I	Sampling clock signal input from ADC IC
16	VDDE	I	Power supply pin (+3.4 V)
17	BCKI1	I	Bit clock signal input from ADC IC
18	SDI1	I	Audio IF data input from ADC IC
19	LRCKO	O	Sampling clock signal output for 8CH DAC IC
20	BCKO	O	Bit clock signal output for 8CH DAC IC
21	VSS	—	Ground
22	KFSIO	I/O	Audio clock signal (384fs/256fs) input/output for DIR IC
23 to 26	SDO1 to SDO4	O	Digital audio serial data output for 8CH DAC IC
27	SPDIF	O	Not used (Open)
28	LRCKI2	I	Sampling clock signal input from ADC IC
29	BCKI2	I	Bit clock signal input from ADC IC
30	SDI2	I	Digital audio serial data input from DIR IC
31	VSS	—	Ground
32	HACN	O	Acknowledge signal output for SYSTEM CONTROL IC
33	HDIN	I	Serial data input from SYSTEM CONTROL IC
34	HCLK	I	Clock signal input from SYSTEM CONTROL IC
35	HDOUT	O	Serial data output for SYSTEM CONTROL IC
36	HCS	I	Chip select signal input from SYSTEM CONTROL IC
37	GP12	I	GP12 signal input from SYSTEM CONTROL IC
38, 39	GP13, GP14	O	Not used (Open)
40	VDDI	I	Power supply pin (+2.7 V)
41	VSS	—	Ground
42	GP15	O	Not used (Open)
43	OE0	O	Not used (Open)
44	CS0	O	External memory chip select signal output for D/A converter IC (SDRAM)
45	WE0	O	SDRAM write enable signal output for D/A converter IC (SDRAM)
46	VDDE	I	Power supply pin (+3.4 V)
47	WMD1	I	Not used (Fixed at H)
48	VSS	—	Ground
49	WMD0	I	Not used (Fixed at H)
50	PAGE2	O	Not used (Open)
51	VSS	—	Ground
52, 53	PAGE1, PAGE0	O	Not used (Open)
54	BOOT	I	Not used (Connect to ground)
55	TST1	O	Not used (Open)
56	BST	I	Boot stop signal input from SYSTEM CONTROL IC

Pin No.	Pin Name	I/O	Pin Description
57	MOD1	I	Operation mode signal input (L: 386fs, H: 256fs) (Fixed at H)
58	MOD0	I	Operation mode signal input (L: single chip mode, H: use prohibited) (Fixed at L)
59	EXLOCK	I	Error detection signal input from DIR IC
60	VDDI	I	Power supply pin (+2.7 V)
61	VSS	—	Ground
62, 63	A17, A16	O	Not used (Open)
64 to 66	A15 to A13	O	External memory address signal output for D/A converter IC (SDRAM)
67	GP10	O	Not used (Open)
68	GP9	O	GP9 signal output for SYSTEM CONTROL IC
69	GP8	I	Audio signal input from DIR IC
70	VDDI	I	Power supply pin (+2.7 V)
71	VSS	—	Ground
72 to 75	D15/GP7 to D12/GP4	I/O	External memory data input/output for D/A converter IC (general port)
76	VDDE	I	Power supply pin (+3.4 V)
77 to 80	D11/GP3 to D8/GP0	I/O	External memory data input/output for D/A converter IC (general port)
81	VSS	—	Ground
82	A9	O	External memory address signal output for D/A converter IC (SDRAM)
83 to 85	A12 to A10	O	External memory address signal output for D/A converter IC (SDRAM)
86	TDO	O	Not used (Fixed at H)
87	TMS	I	Not used (Fixed at H)
88	XTRST	I	Not used (Fixed at H)
89	TCK	I	Not used (Fixed at H)
90	TDI	I	Not used (Fixed at H)
91	VSS	—	Ground
92 to 97	A8 to A3	O	External memory address signal output for D/A converter IC (SDRAM)
98, 99	D7, D6	I/O	External memory data input/output for D/A converter IC (SDRAM)
100	VDDI	I	Power supply pin (+2.7 V)
101	VSS	—	Ground
102 to 105	D5 to D2	I/O	External memory data input/output for D/A converter IC (SDRAM)
106	VDDE	I	Power supply pin (+3.4 V)
107, 108	D1, D0	I/O	External memory data input/output for D/A converter IC (SDRAM)
109, 110	A2, A1	O	External memory address signal output for D/A converter IC (SDRAM)
111	VSS	—	Ground
112	A0	O	External memory address signal output for D/A converter IC (SDRAM)
113	PM	I	PLL initialization signal input from SYSTEM CONTROL IC
114, 115	SDI3, SDI4	I	Not used (Open)
116	SYNC	I	Sync/async select signal input (L: sync, H: async) (Fixed at H)
117	TST2	I	Not used (Connect to ground)
118	GP11	I	Not used (Connect to ground)
119	TST3	I	Not used (Connect to ground)
120	VDDI	I	Power supply pin (+2.7 V)

IC1101 MB90488BPF-G-137E1 (SYSTEM CONTROL) (DIGITAL Board (4/4)) (STR-DE598)
IC1101 MB90488BPF-G-110E1 (SYSTEM CONTROL) (DIGITAL Board (4/4)) (STR-DE698/DV10)

Pin No.	Pin Name	I/O	Pin Description
1	DATAO	I	Serial data line signal input from DIR IC
2	GP9	I	GP9 signal input from DSP IC
3	BST	O	Boot stop control signal output for DSP IC
4	HCS	O	Chip select signal output for DSP IC
5	HACN	I	Acknowledge signal input from DSP IC
6	XRST	O	Reset signal output for DSP IC
7	PM	O	PLL control signal output for DSP IC
8	GP12	O	GP12 signal output for DSP IC
9	PCM1800_RST	O	Reset signal output for ADC IC
10	PCM1608_RST	O	Reset signal output for 8CH DAC IC
11	VSS	—	Ground
12	PCM1608_ML	O	Serial latch signal output for 8CH DAC IC
13	PCM1608_MC	O	Serial clock signal output for 8CH DAC IC
14	PCM1608_MDI	O	Serial data output for 8CH DAC IC
15	PCM1608_MDO	I	Serial data input from 8CH DAC IC
16	T.SERIAL_CLK	O	Serial clock signal output for tuner pack
17	TUNER_DATA	O	Serial data output for tuner pack
18	HDOUT	I	Serial data input from DSP IC
19	HDIN	O	Serial data output for DSP IC
20	HCLK	O	Serial data clock signal output for DSP IC
21	DLY_BYPASS	O	Bypass signal output for DAC IC (STR-DE698/DV10 only)
22	DIR/AD	O	A/D port signal output for DIR IC (STR-DE698/DV10 only)
23	VCC5	—	Power supply pin (+3.4 V)
24	SYS_MUTE	O	System mute control signal output
25	ANA/DIG	O	Analog/Digital port signal output
26	UPCON_RST	O	Not used (Open)
27	FLASH2_VOL/VOL_CLK	O	Flash programming signal output 2/Volume clock signal output
28	FLASH1/VOL_DATA_LATCH	O	Flash programming signal output 1/Volume data latch signal output
29	SDA	I/O	Serial data input/output for EEPROM IC
30	SCL	O	Clock signal output for EEPROM IC
31	ENC_A	O	Menu encoder (A) signal output (STR-DE698/DV10 only)
32	ENC_B	O	Menu encoder (B) signal output (STR-DE698/DV10 only)
33	UPCON	O	Serial data output for Y/C separation IC (STR-DE698 only)
34	UPCON_CLK	O	Clock signal output for Y/C separation IC (STR-DE698 only)
35	AVCC	—	Power supply pin (+3.4 V)
36	AVRH	—	Power supply pin (+3.4 V)
37	AVSS	—	Ground
38 to 40	A/D0 to A/D2	I	Key signal input (A/D port)
41	VERSION	I	Destination detection signal input (Fixed at L: US, Canadian model, H: Except US, Canadian model)
42	VSS	—	Ground
43	RDS_SIG	I	RDS signal level input (AEP, UK model only)
44	MODEL	I	Model detection signal input (Fixed at L: STR-DE698, H: STR-DE598/DV10)
45	VOL_ENC (A)	I	Volume encoder (A) signal input
46	VOL_ENC (B)	I	Volume encoder (B) signal input
47	BLUE_LED	O	LED (MULTI CHANNEL DECODING) driver signal output
48	STOP	I	AC off detection signal input
49	MOD0	—	Selection of micon operation mode
50	MOD1	—	Not used (Connect to AVCC)
51	MOD2	—	Selection of micon operation mode
52	RDS_CLK	I	RDS data clock signal input (AEP, UK model only)

Pin No.	Pin Name	I/O	Pin Description
53	RDS_DATA	I	RDS data input (AEP, UK model only)
54	SIRCS	I	SIRCS signal input
55	HP_DETECT	I	Headphones detection signal input
56	POWER_KEY	I	Power key detection signal input
57	FL_LAT	O	Latch signal output for FL driver IC
58	POWER_RY	O	Power relay driver control signal output
59	FL_DATA	O	Serial data output for FL driver IC
60	FL_CLK	O	Clock signal output for FL driver IC
61	PROTECTOR	I	Protector detection signal input
62	HP_RY	O	Headphones relay driver control signal output
63	FUSE_DETECT	I	Fuse open detection signal input
64	NTSC_PAL_SW	O	NTSC/PAL switch signal output (STR-DE698 only)
65	COMPO_SW2/A1_IN	O	COMPONENT VIDEO switch 2 signal output (Except STR-DE598: AEP, UK model only)
66	FRONT_RY	O	Front speaker A relay driver control signal output
67	SP_B_RY	O	Front speaker B relay driver control signal output
68	C/SB_RY	O	Center speaker relay driver control signal output
69	REAR_RY	O	Surround speaker relay driver control signal output
70	SW_RY	O	Sub woofer relay driver control signal output
71	COMPO_SW1/A1_OUT	O	COMPONENT VIDEO switch 1 signal output (Except STR-DE598: AEP, UK model only)
72	BRIDGEABLE_RY	O	Bridgeable relay driver control signal output
73	DO	I	Tuner serial data input
74	SLATCH	O	Tuner latch signal output
75	TUNED	I	Tuned signal detection input
76	STEREO	I	Stereo signal detection input
77	RSTX	I	Reset signal input
78	MUTE	O	Tuner mute signal output
79	X1A	—	Not used (Open)
80	X0A	—	Not used (Connect to VSS)
81	VSS	—	Ground
82	X0	—	Clock signal input (24 MHz)
83	X1	—	Clock signal output (24 MHz)
84	VCC3	—	Power supply pin (+3.4 V)
85	GROUPING_SW	O	Not used (Open)
86 to 89	SW1 to SW4	O	Video select signal output
90	SELECT2	O	Digital input select 2 signal output (STR-DE698/DV10 only)
91	SELECT1	O	Digital input select 1 signal output (STR-DE698/DV10 only)
92	BST_SEL	O	96/24 signal output for DSP IC
93	XMODE	O	Xmode signal output for DIR IC
94	CKSEL1	O	Clock select signal output for DIR IC
95	CLK	O	Data clock signal output for DIR IC
96	CE	O	Latch signal output for DIR IC
97	DI	O	Data output for DIR IC
98	DO	I	Data input from DIR IC
99	ERROR	I	Error detection signal input from DIR IC
100	XSTATE	I	Xstate signal input from DIR IC

SECTION 5
EXPLODED VIEWS

NOTE:
- The mechanical parts with no reference number in the exploded views are not supplied.
- Items marked "*" are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- Abbreviation
  CND : Canadian model
  E2 : AC 120 V area in E model
  AUS : Australian model
  AR : Argentina model
  KR : Korean model
  TW : Taiwan model
- -XX and -X mean standardized parts, so they may have some difference from the original one.
- Color Indication of Appearance Parts
  Example :
  KNOB, BALANCE (WHITE) ... (RED)
  ↑ ↑
  Parts Color Cabinet's Color
- Accessories are given in the last of this parts list.

The components identified by mark ⚠ or dotted line with mark ⚠ are critical for safety.
Replace only with part number specified.

Les composants identifiés par une marque ⚠ sont critiques pour la sécurité.
Ne les remplacer que par une piéce portant le numéro spécifié.

5-1. CASE SECTION

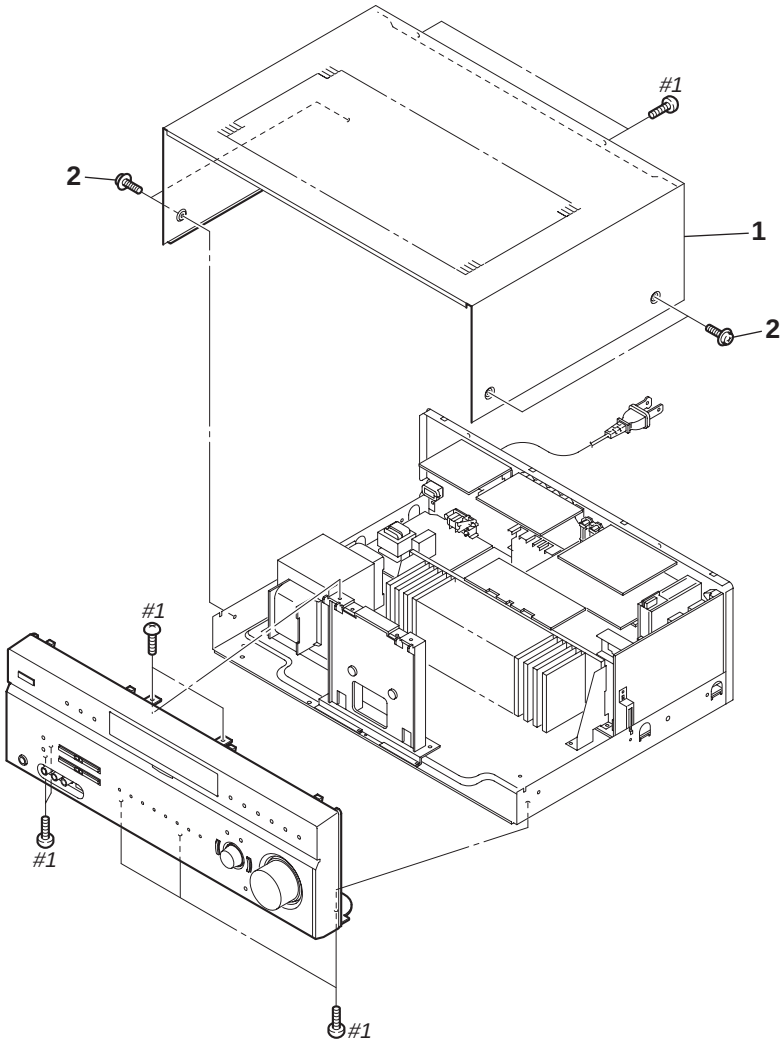

Ref. No.	Part No.	Description	Remark
1	4-232-418-02	CASE (BLACK)...(BLACK) (DE598)	
1	4-232-418-61	CASE (SILVER)...(SILVER) (DE598)	
1	4-246-009-02	CASE (DE9) (BLACK)...(BLACK) (DE698)	
1	4-246-009-61	CASE (DE9) (SILVER)...(SILVER) (DE698/DV10)	
2	3-363-099-02	SCREW (CASE 3 TP2) (BLACK)...(BLACK)	
2	3-363-099-11	SCREW (CASE 3 TP2) (SILVER)...(SILVER)	
#1	7-685-646-79	SCREW +BVTP 3X8 TYPE2 IT-3	

5-2. FRONT PANEL SECTION

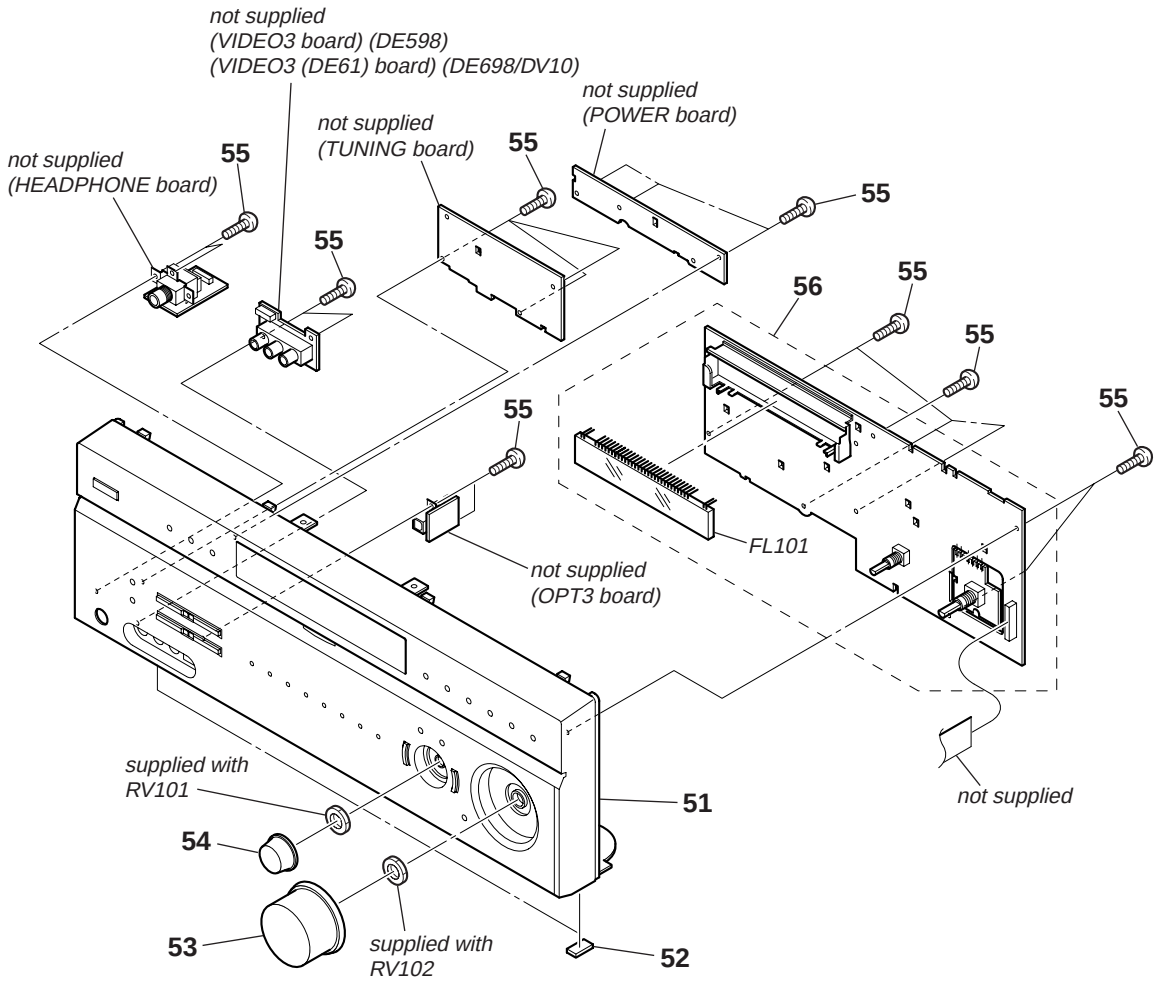

Ref. No.	Part No.	Description	Remark
51	X-2024-656-1	FRONT PANEL ASSY (BLACK)...(BLACK)	(DE598:US)
51	X-2024-658-1	FRONT PANEL ASSY (SILVER)...(SILVER)	(DE598:US)
51	X-2024-659-1	FRONT PANEL ASSY (BLACK)...(BLACK)	(DE598:CND,AUS)
51	X-2024-661-1	FRONT PANEL ASSY (BLACK)...(BLACK)	(DE598:AEP,UK)
51	X-2024-662-1	FRONT PANEL ASSY (SILVER)...(SILVER)	(DE598:AEP,UK)
51	X-2024-700-1	FRONT PANEL ASSY (SILVER)...(SILVER)	(DE598:E2,AUS,AR,KR,TW)
51	X-2024-728-1	FRONT PANEL ASSY (BLACK)...(BLACK)	(DE698:US)
51	X-2024-729-1	FRONT PANEL ASSY (BLACK)...(BLACK)	(DE698:AUS)
51	X-2024-730-1	FRONT PANEL ASSY (BLACK)...(BLACK)	(DE698:AEP,UK)
51	X-2024-743-1	FRONT PANEL ASSY (SILVER)...(SILVER)	(DE698:AEP,UK)
51	X-2024-755-1	FRONT PANEL ASSY (SILVER)...(SILVER)	(DE698:CND,E2,AUS,AR)
51	X-2025-424-1	FRONT PANEL ASSY (SILVER)...(SILVER)	(DV10)

Ref. No.	Part No.	Description	Remark
52	4-977-358-01	CUSHION	
53	4-232-113-01	KNOB (VOL) (BLACK)...(BLACK)	
53	4-232-113-31	KNOB (VOL) (SILVER)...(SILVER)	
54	4-252-389-01	KNOB (MENU) (BLACK)...(BLACK)	(DE698)
54	4-252-389-31	KNOB (MENU) (SILVER)...(SILVER)	(DE698/DV10)
55	3-087-053-01	+BVTP 2.6 (3CR)	
56	A-1084-338-A	DISPLAY BOARD, COMPLETE (DE598)	
56	A-1084-994-A	DISPLAY BOARD, COMPLETE (DE698/DV10)	
FL101	1-518-966-11	VACUUM FLUORESCENT DISPLAY	

5-3. BACK PANEL SECTION

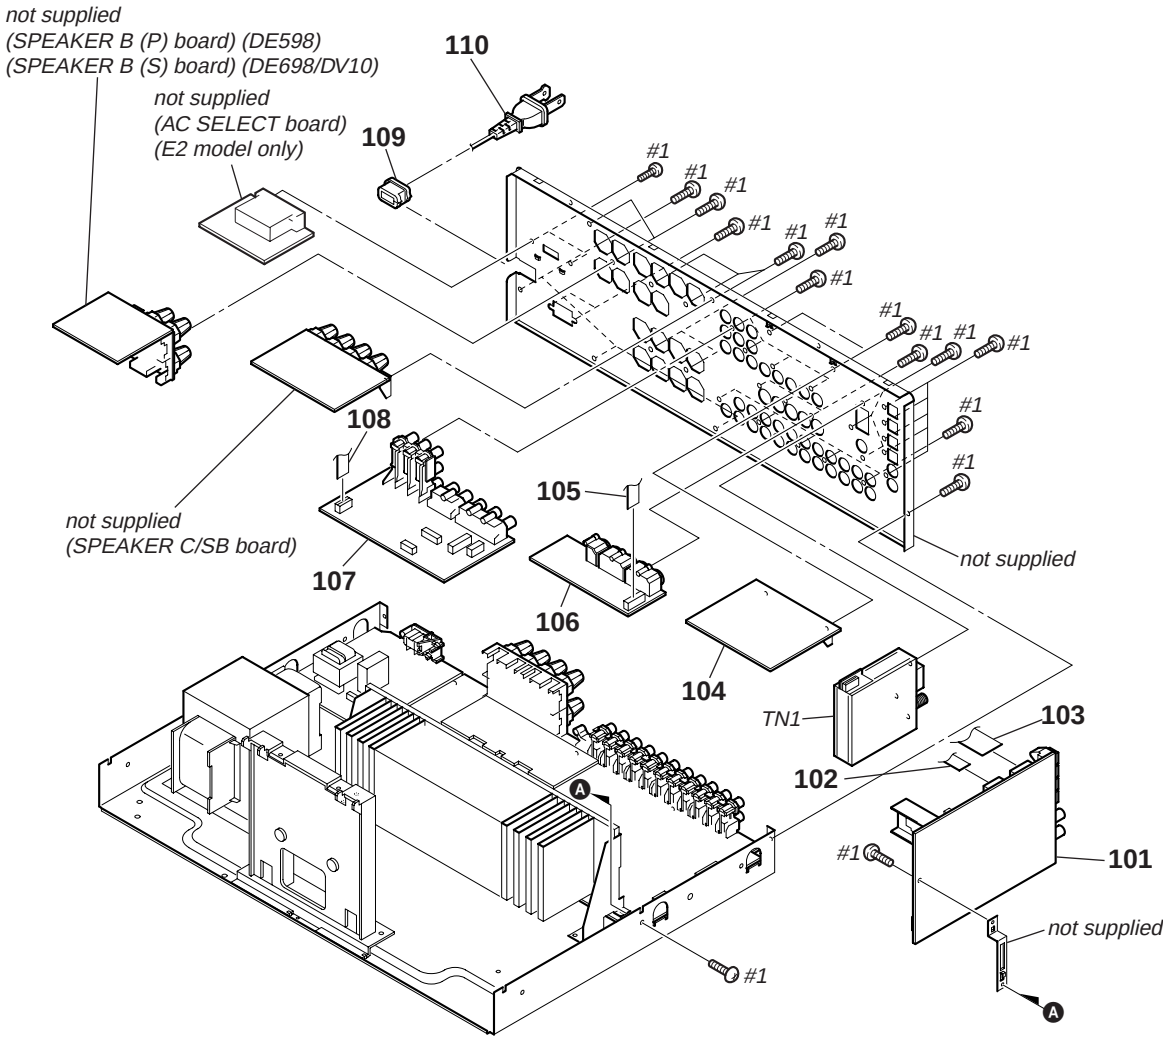

Ref. No.	Part No.	Description	Remark
101	A-1084-347-A	DIGITAL BOARD, COMPLETE (DE598:US,CND)	
101	A-1084-409-A	DIGITAL BOARD, COMPLETE (DE598:AEP,UK)	
101	A-1084-603-A	DIGITAL BOARD, COMPLETE (DE598:AUS)	
101	A-1084-706-A	DIGITAL BOARD, COMPLETE (DE598:KR,TW)	
101	A-1084-981-A	DIGITAL BOARD, COMPLETE (DE598:E2)	
101	A-1084-989-A	DIGITAL BOARD, COMPLETE (DE598:AR)	
101	A-1084-997-A	DIGITAL BOARD, COMPLETE (DE698:US,CND)	
101	A-1085-103-A	DIGITAL BOARD, COMPLETE (DE698:AEP,UK)	
101	A-1085-213-A	DIGITAL BOARD, COMPLETE (DE698:AUS)	
101	A-1085-252-A	DIGITAL BOARD, COMPLETE (DE698:E2)	
101	A-1089-520-A	DIGITAL BOARD, COMPLETE (DV10)	
101	A-1091-920-A	DIGITAL BOARD, COMPLETE (DE698:AR)	
102	1-828-963-11	WIRE (FLAT TYPE) (11 CORE) (EXCEPT AEP,UK)	
102	1-828-980-11	WIRE (FLAT TYPE) (15 CORE) (AEP,UK)	
103	1-828-972-11	WIRE (FLAT TYPE) (13 CORE)	
104	A-1084-974-A	S-VIDEO UP CONVERT BOARD, COMPLETE (DE698:US,CND)	
104	A-1085-099-A	S-VIDEO UP CONVERT BOARD, COMPLETE (DE698:AEP,UK,AUS)	
104	A-1097-712-A	S-VIDEO UP CONVERT BOARD, COMPLETE (DE698:E2,AR)	
105	1-828-954-11	WIRE (FLAT TYPE) (9 CORE) (DE698)	
106	A-1084-978-A	S-VIDEO BOARD, COMPLETE (DE698)	
106	A-1098-467-A	S-VIDEO BOARD, COMPLETE (DV10)	
107	A-1084-344-A	VIDEO BOARD, COMPLETE (DE598:EXCEPT AEP,UK)	
107	A-1084-408-A	VIDEO BOARD, COMPLETE (DE598:AEP,UK)	
107	A-1084-442-A	VIDEO BOARD, COMPLETE (DE698)	
107	A-1097-367-A	VIDEO BOARD, COMPLETE (DV10)	
108	1-828-954-11	WIRE (FLAT TYPE) (9 CORE) (DE698/DV10)	
* 109	3-703-244-00	BUSHING (2104), CORD	
⚠110	1-769-079-23	CORD, POWER (KR)	
⚠110	1-777-071-23	CORD, POWER (E2)	
⚠110	1-777-071-83	CORD, POWER (AEP,UK)	
⚠110	1-783-820-11	CORD, POWER (US,CND)	
⚠110	1-783-941-12	CORD, POWER (AR)	
⚠110	1-827-295-22	CORD, POWER (AUS)	
⚠110	1-827-597-41	CORD, POWER (TW)	
TN1	1-693-675-11	TUNER PACK (ANTENNA) (DE598:US,CND,E2)	
TN1	1-693-675-21	TUNER PACK (ANTENNA) (DE698:US,CND,E2/DV10)	
TN1	1-693-676-11	TUNER PACK (ANTENNA) (DE698:AEP,UK)	
TN1	1-693-676-21	TUNER PACK (ANTENNA) (DE598:AEP,UK)	
TN1	1-693-678-11	TUNER PACK (ANTENNA) (AUS,AR,KR,TW)	
#1	7-685-646-79	SCREW +BVTP 3X8 TYPE2 IT-3	

5-4. CHASSIS SECTION

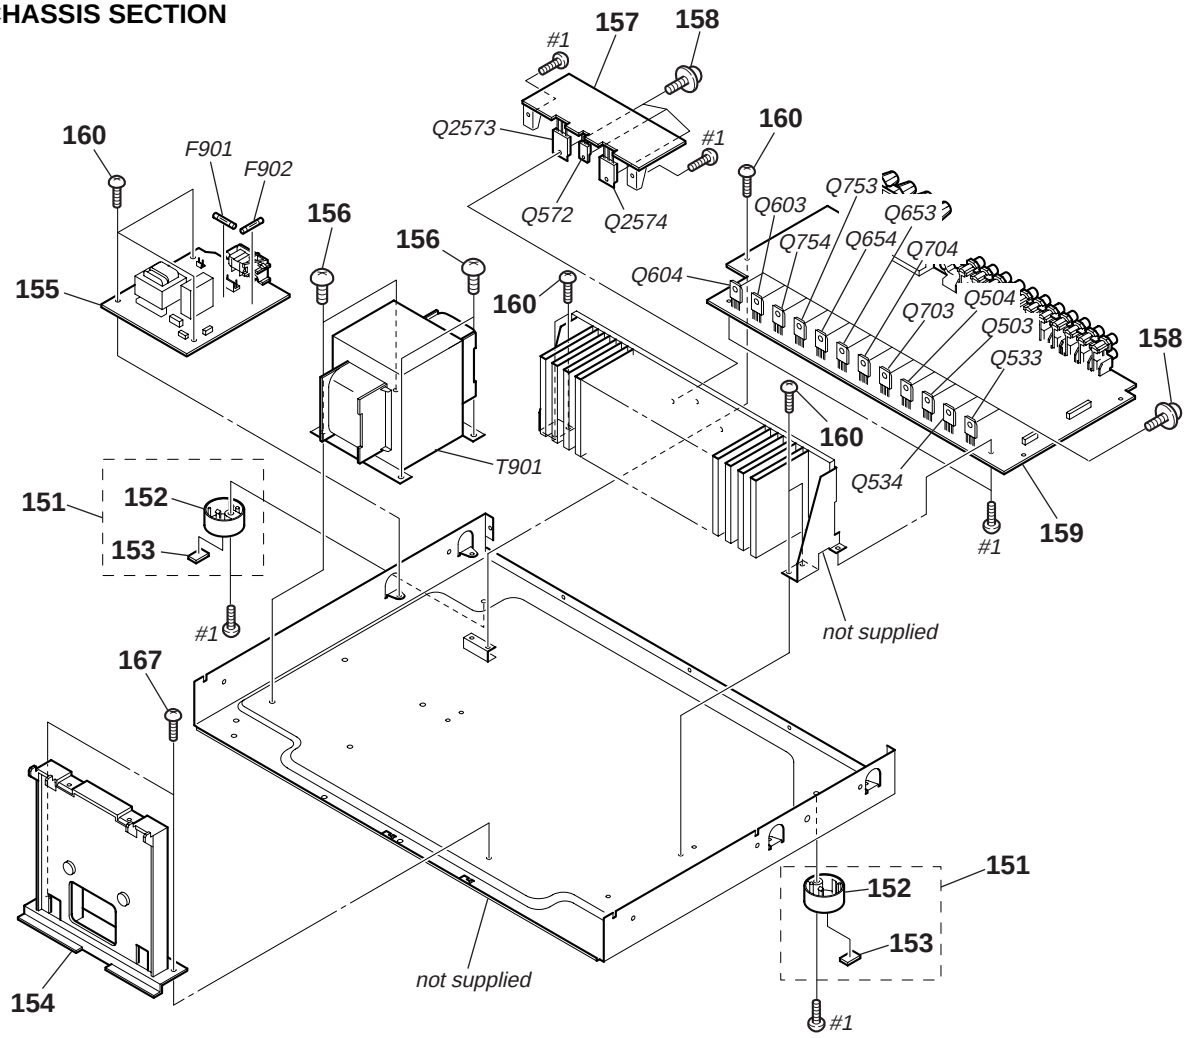

Ref. No.	Part No.	Description	Remark
151	X-4953-448-1	FOOT ASSY	
152	4-232-237-01	FOOT (DIA. 30)	
153	4-977-358-01	CUSHION	
154	4-233-263-01	SUB MOLD (DE9)	
155	A-1084-334-A	STANDBY BOARD, COMPLETE (DE598:US,CND)	
155	A-1084-405-A	STANDBY BOARD, COMPLETE (DE598:AEP,UK,AUS,AR,KR/DE698:AR)	
155	A-1084-703-A	STANDBY BOARD, COMPLETE (DE598:TW)	
155	A-1084-969-A	STANDBY BOARD, COMPLETE (DE698:US,CND/DV10)	
155	A-1084-975-A	STANDBY BOARD, COMPLETE (DE598:E2)	
155	A-1085-098-A	STANDBY BOARD, COMPLETE (DE698:AEP,UK)	
155	A-1085-210-A	STANDBY BOARD, COMPLETE (DE698:AUS)	
155	A-1085-251-A	STANDBY BOARD, COMPLETE (DE698:E2)	
156	4-249-675-01	+BV SUMITITE S 4X6 ROUND	
157	A-1084-980-A	SB AMP BOARD, COMPLETE (DE698/DV10)	
158	3-905-609-01	SCREW (TRANSISTOR)	
159	A-1084-332-A	MAIN BOARD, COMPLETE (DE598:US,E2)	
159	A-1084-399-A	MAIN BOARD, COMPLETE (DE598:CND)	
159	A-1084-404-A	MAIN BOARD, COMPLETE (DE598:AEP,UK)	
159	A-1084-563-A	MAIN BOARD, COMPLETE (DE698:US,E2/DV10)	
159	A-1084-705-A	MAIN BOARD, COMPLETE (DE698:CND)	
159	A-1085-097-A	MAIN BOARD, COMPLETE (DE698:AEP,UK)	
159	A-1097-809-A	MAIN BOARD, COMPLETE (DE598:AUS,AR,KR,TW)	
159	A-1097-810-A	MAIN BOARD, COMPLETE (DE698:AUS,AR)	
160	3-077-331-21	+BV3 (3-CR)	
⚠F901	1-532-464-33	FUSE (T2.5AL/250V) (AEP,UK,AUS,AR,KR)	
⚠F901	1-532-465-33	FUSE (3.15A/125V) (E2)	
⚠F901	1-532-504-33	FUSE (4A/250V) (TW)	
⚠F901	1-533-454-12	FUSE, GLASS TUBE (DIA. 5) (6.3A/125V) (US,CND)	

Ref. No.	Part No.	Description	Remark
⚠F902	1-532-464-33	FUSE (T2.5AL/250V) (DE698:AEP,UK,E2,AUS)	
⚠F902	1-533-453-12	FUSE, GLASS TUBE (DIA. 5) (5A/125V) (DE698:US,CND/DV10)	
Q503	6-702-390-01	TRANSISTOR MN2488-OPY-MK	
Q504	6-702-391-01	TRANSISTOR MP1620-OPY-MK	
Q533	6-702-390-01	TRANSISTOR MN2488-OPY-MK	
Q534	6-702-391-01	TRANSISTOR MP1620-OPY-MK	
Q572	8-729-026-08	TRANSISTOR 2SC4495 (DE698/DV10)	
Q603	6-702-390-01	TRANSISTOR MN2488-OPY-MK	
Q604	6-702-391-01	TRANSISTOR MP1620-OPY-MK	
Q653	6-702-390-01	TRANSISTOR MN2488-OPY-MK	
Q654	6-702-391-01	TRANSISTOR MP1620-OPY-MK	
Q703	6-702-390-01	TRANSISTOR MN2488-OPY-MK	
Q704	6-702-391-01	TRANSISTOR MP1620-OPY-MK	
Q753	6-702-390-01	TRANSISTOR MN2488-OPY-MK	
Q754	6-702-391-01	TRANSISTOR MP1620-OPY-MK	
Q2573	6-702-390-01	TRANSISTOR MN2488-OPY-MK (DE698/DV10)	
Q2754	6-702-391-01	TRANSISTOR MP1620-OPY-MK (DE698/DV10)	
⚠T901	1-439-550-21	TRANSFORMER, POWER (AEP,UK,AUS,AR,KR)	
⚠T901	1-439-552-21	TRANSFORMER, POWER (TW)	
⚠T901	1-439-553-21	TRANSFORMER, POWER (E2)	
⚠T901	1-439-611-11	TRANSFORMER, POWER (US,CND)	
#1	7-685-646-79	SCREW +BVTP 3X8 TYPE2 IT-3	

SECTION 6
ELECTRICAL PARTS LIST

NOTE:
- Due to standardization, replacements in the parts list may be different from the parts specified in the diagrams or the components used on the set.
- -XX and -X mean standardized parts, so they may have some difference from the original one.
- RESISTORS
  All resistors are in ohms.
  METAL:Metal-film resistor.
  METAL OXIDE: Metal oxide-film resistor.
  F:nonflammable
- Items marked "*" are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- SEMICONDUCTORS
  In each case, u : µ, for example:
  uA.. : µA.. uPA.. : µPA..
  uPB.. : µPB.. uPC.. : µPC.. uPD.. : µPD..
- CAPACITORS
  uF : µF
- COILS
  uH : µH
- Abbreviation
  CND : Canadian model
  E2 : AC 120 V area in E model
  AUS : Australian model
  AR : Argentina model
  KR : Korean model
  TW : Taiwan model

The components identified by mark ⚠ or dotted line with mark ⚠ are critical for safety.
Replace only with part number specified.

Les composants identifiés par une marque ⚠ sont critiques pour la sécurité.
Ne les remplacer que par une piéce portant le numéro spécifié.

When indicating parts by reference number, please include the board.

Ref. No.	Part No.	Description			Remark
		AC SELECT BOARD (E2)			
		**********			
		< CONNECTOR >			
* CNP910	1-564-687-11	PIN, CONNECTOR (3.96mm PITCH) 3P			
		< SWITCH >			
⚠S901	1-571-437-21	SWITCH, POWER VOLTAGE			(VOLTAGE SELECTOR)
**********					
	A-1084-347-A	DIGITAL BOARD, COMPLETE (DE598:US,CND)			
	A-1084-409-A	DIGITAL BOARD, COMPLETE (DE598:AEP,UK)			
	A-1084-603-A	DIGITAL BOARD, COMPLETE (DE598:AUS)			
	A-1084-706-A	DIGITAL BOARD, COMPLETE (DE598:KR,TW)			
	A-1084-981-A	DIGITAL BOARD, COMPLETE (DE598:E2)			
	A-1084-989-A	DIGITAL BOARD, COMPLETE (DE598:AR)			
	A-1084-997-A	DIGITAL BOARD, COMPLETE (DE698:US,CND)			
	A-1085-103-A	DIGITAL BOARD, COMPLETE (DE698:AEP,UK)			
	A-1085-213-A	DIGITAL BOARD, COMPLETE (DE698:AUS)			
	A-1085-252-A	DIGITAL BOARD, COMPLETE (DE698:E2)			
	A-1089-520-A	DIGITAL BOARD, COMPLETE (DV10)			
	A-1091-920-A	DIGITAL BOARD, COMPLETE (DE698:AR)			
		**********			
	7-685-646-79	SCREW +BVTP 3X8 TYPE2 IT-3			
		< CAPACITOR >			
C1001	1-126-925-11	ELECT	470uF	20% 10V	
C1002	1-100-566-11	CERAMIC CHIP	0.1uF	10% 25V	
C1004	1-164-227-11	CERAMIC CHIP	0.022uF	10% 25V	
C1021	1-100-566-11	CERAMIC CHIP	0.1uF	10% 25V	
C1022	1-126-925-11	ELECT	470uF	20% 10V	
C1031	1-100-566-11	CERAMIC CHIP	0.1uF	10% 25V	
C1032	1-126-925-11	ELECT	470uF	20% 10V	
C1045	1-162-905-11	CERAMIC CHIP	1PF	0.25PF 50V	(DE698/DV10)
C1046	1-100-566-11	CERAMIC CHIP	0.1uF	10% 25V	(DE698/DV10)
C1047	1-104-662-11	ELECT	22uF	20% 25V	(DE698/DV10)
C1063	1-100-566-11	CERAMIC CHIP	0.1uF	10% 25V	(AEP,UK)
C1064	1-126-947-11	ELECT	47uF	20% 35V	(AEP,UK)
C1100	1-100-566-11	CERAMIC CHIP	0.1uF	10% 25V	
C1102	1-100-566-11	CERAMIC CHIP	0.1uF	10% 25V	
C1103	1-126-947-11	ELECT	47uF	20% 35V	
C1107	1-100-566-11	CERAMIC CHIP	0.1uF	10% 25V	
C1108	1-100-566-11	CERAMIC CHIP	0.1uF	10% 25V	
C1118	1-100-566-11	CERAMIC CHIP	0.1uF	10% 25V	
C1119	1-100-566-11	CERAMIC CHIP	0.1uF	10% 25V	
C1120	1-162-974-11	CERAMIC CHIP	0.01uF	50V	
C1121	1-100-566-11	CERAMIC CHIP	0.1uF	10% 25V	
C1122	1-100-566-11	CERAMIC CHIP	0.1uF	10% 25V	
C1123	1-100-566-11	CERAMIC CHIP	0.1uF	10% 25V	
C1124	1-100-566-11	CERAMIC CHIP	0.1uF	10% 25V	
C1125	1-162-923-11	CERAMIC CHIP	47PF	5% 50V	(DE698/DV10)
C1126	1-162-960-11	CERAMIC CHIP	220PF	10% 50V	
C1128	1-100-566-11	CERAMIC CHIP	0.1uF	10% 25V	(DE698/DV10)
C1129	1-162-974-11	CERAMIC CHIP	0.01uF	50V	
C1130	1-162-974-11	CERAMIC CHIP	0.01uF	50V	
C1131	1-162-974-11	CERAMIC CHIP	0.01uF	50V	(DE698/DV10)
C1132	1-162-974-11	CERAMIC CHIP	0.01uF	50V	(DE698/DV10)
C1137	1-162-970-11	CERAMIC CHIP	0.01uF	10% 25V	
C1138	1-100-566-11	CERAMIC CHIP	0.1uF	10% 25V	
C1139	1-100-566-11	CERAMIC CHIP	0.1uF	10% 25V	
C1140	1-100-566-11	CERAMIC CHIP	0.1uF	10% 25V	
C1141	1-100-566-11	CERAMIC CHIP	0.1uF	10% 25V	(DE698/DV10)
C1142	1-100-566-11	CERAMIC CHIP	0.1uF	10% 25V	
C1149	1-162-960-11	CERAMIC CHIP	220PF	10% 50V	
C1251	1-100-566-11	CERAMIC CHIP	0.1uF	10% 25V	
C1252	1-100-566-11	CERAMIC CHIP	0.1uF	10% 25V	
C1253	1-100-566-11	CERAMIC CHIP	0.1uF	10% 25V	
C1254	1-162-960-11	CERAMIC CHIP	220PF	10% 50V	
C1255	1-162-960-11	CERAMIC CHIP	220PF	10% 50V	
C1299	1-100-566-11	CERAMIC CHIP	0.1uF	10% 25V	
C1301	1-100-566-11	CERAMIC CHIP	0.1uF	10% 25V	
C1302	1-162-974-11	CERAMIC CHIP	0.01uF	50V	
C1303	1-100-566-11	CERAMIC CHIP	0.1uF	10% 25V	
C1304	1-162-974-11	CERAMIC CHIP	0.01uF	50V	
C1305	1-100-566-11	CERAMIC CHIP	0.1uF	10% 25V	
C1306	1-126-947-11	ELECT	47uF	20% 35V	
C1308	1-100-566-11	CERAMIC CHIP	0.1uF	10% 25V	
C1309	1-162-918-11	CERAMIC CHIP	18PF	5% 50V	
C1310	1-162-918-11	CERAMIC CHIP	18PF	5% 50V	

Ref. No.	Part No.	Description			Remark
C1312	1-100-566-11	CERAMIC CHIP	0.1uF	10%	25V
C1313	1-162-927-11	CERAMIC CHIP	100PF	5%	50V
C1314	1-100-566-11	CERAMIC CHIP	0.1uF	10%	25V
C1315	1-100-566-11	CERAMIC CHIP	0.1uF	10%	25V
C1316	1-100-566-11	CERAMIC CHIP	0.1uF	10%	25V (DE698/DV10)
C1317	1-126-925-11	ELECT	470uF	20%	10V (DE698/DV10)
C1351	1-100-566-11	CERAMIC CHIP	0.1uF	10%	25V
C1352	1-100-566-11	CERAMIC CHIP	0.1uF	10%	25V (DE698/DV10)
C1353	1-100-566-11	CERAMIC CHIP	0.1uF	10%	25V (DE698/DV10)
C1354	1-100-566-11	CERAMIC CHIP	0.1uF	10%	25V
C1355	1-104-662-11	ELECT	22uF	20%	25V
C1356	1-162-974-11	CERAMIC CHIP	0.01uF		50V
C1357	1-162-905-11	CERAMIC CHIP	1PF	0.25PF	50V
C1358	1-100-566-11	CERAMIC CHIP	0.1uF	10%	25V
C1359	1-126-916-11	ELECT	1000uF	20%	6.3V
C1360	1-162-923-11	CERAMIC CHIP	47PF	5%	50V
C1361	1-100-566-11	CERAMIC CHIP	0.1uF	10%	25V
C1362	1-100-566-11	CERAMIC CHIP	0.1uF	10%	25V
C1401	1-100-566-11	CERAMIC CHIP	0.1uF	10%	25V
C1402	1-126-947-11	ELECT	47uF	20%	35V
C1403	1-126-964-11	ELECT	10uF	20%	50V
C1404	1-100-566-11	CERAMIC CHIP	0.1uF	10%	25V
C1405	1-162-962-11	CERAMIC CHIP	470PF	10%	50V
C1406	1-126-963-11	ELECT	4.7uF	20%	50V
C1407	1-126-963-11	ELECT	4.7uF	20%	50V
C1408	1-162-962-11	CERAMIC CHIP	470PF	10%	50V
C1409	1-100-566-11	CERAMIC CHIP	0.1uF	10%	25V
C1411	1-162-963-11	CERAMIC CHIP	680PF	10%	50V
C1413	1-162-961-11	CERAMIC CHIP	330PF	10%	50V
C1418	1-126-964-11	ELECT	10uF	20%	50V
C1422	1-162-963-11	CERAMIC CHIP	680PF	10%	50V
C1423	1-162-961-11	CERAMIC CHIP	330PF	10%	50V
C1428	1-126-964-11	ELECT	10uF	20%	50V
C1432	1-162-963-11	CERAMIC CHIP	680PF	10%	50V
C1433	1-162-961-11	CERAMIC CHIP	330PF	10%	50V
C1438	1-126-964-11	ELECT	10uF	20%	50V
C1441	1-162-963-11	CERAMIC CHIP	680PF	10%	50V
C1442	1-162-961-11	CERAMIC CHIP	330PF	10%	50V
C1448	1-126-964-11	ELECT	10uF	20%	50V
C1450	1-100-566-11	CERAMIC CHIP	0.1uF	10%	25V
C1451	1-162-963-11	CERAMIC CHIP	680PF	10%	50V
C1453	1-162-961-11	CERAMIC CHIP	330PF	10%	50V
C1454	1-100-566-11	CERAMIC CHIP	0.1uF	10%	25V
C1457	1-126-964-11	ELECT	10uF	20%	50V
C1458	1-126-964-11	ELECT	10uF	20%	50V
C1460	1-126-964-11	ELECT	10uF	20%	50V
C1462	1-162-963-11	CERAMIC CHIP	680PF	10%	50V
C1463	1-162-961-11	CERAMIC CHIP	330PF	10%	50V
C1468	1-126-964-11	ELECT	10uF	20%	50V
C1472	1-162-963-11	CERAMIC CHIP	680PF	10%	50V
C1473	1-162-961-11	CERAMIC CHIP	330PF	10%	50V
C1478	1-126-964-11	ELECT	10uF	20%	50V
C1481	1-162-961-11	CERAMIC CHIP	330PF	10%	50V
C1483	1-162-963-11	CERAMIC CHIP	680PF	10%	50V
C1487	1-162-966-11	CERAMIC CHIP	0.0022uF	10%	50V
C1488	1-126-964-11	ELECT	10uF	20%	50V (DE698/DV10)
C1491	1-126-964-11	ELECT	10uF	20%	50V
C1494	1-100-566-11	CERAMIC CHIP	0.1uF	10%	25V
C1495	1-162-960-11	CERAMIC CHIP	220PF	10%	50V
C1501	1-100-566-11	CERAMIC CHIP	0.1uF	10%	25V
C1502	1-100-566-11	CERAMIC CHIP	0.1uF	10%	25V
C1503	1-100-566-11	CERAMIC CHIP	0.1uF	10%	25V
C1504	1-100-566-11	CERAMIC CHIP	0.1uF	10%	25V
C1505	1-100-566-11	CERAMIC CHIP	0.1uF	10%	25V
C1506	1-100-566-11	CERAMIC CHIP	0.1uF	10%	25V
C1507	1-100-566-11	CERAMIC CHIP	0.1uF	10%	25V
C1508	1-100-566-11	CERAMIC CHIP	0.1uF	10%	25V
C1509	1-100-566-11	CERAMIC CHIP	0.1uF	10%	25V
C1510	1-100-566-11	CERAMIC CHIP	0.1uF	10%	25V
C1511	1-100-566-11	CERAMIC CHIP	0.1uF	10%	25V
C1513	1-100-566-11	CERAMIC CHIP	0.1uF	10%	25V
C1514	1-100-566-11	CERAMIC CHIP	0.1uF	10%	25V
C1515	1-126-925-11	ELECT	470uF	20%	10V
C1516	1-100-566-11	CERAMIC CHIP	0.1uF	10%	25V
C1517	1-126-925-11	ELECT	470uF	20%	10V
C1518	1-100-566-11	CERAMIC CHIP	0.1uF	10%	25V
C1519	1-100-566-11	CERAMIC CHIP	0.1uF	10%	25V
C1520	1-100-566-11	CERAMIC CHIP	0.1uF	10%	25V
C1521	1-162-920-11	CERAMIC CHIP	27PF	5%	50V
C1522	1-162-920-11	CERAMIC CHIP	27PF	5%	50V
C1525	1-126-925-11	ELECT	470uF	20%	10V
C1531	1-100-566-11	CERAMIC CHIP	0.1uF	10%	25V (DE698/DV10)
C1532	1-100-566-11	CERAMIC CHIP	0.1uF	10%	25V (DE698/DV10)
C1533	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V (DE698/DV10)
C1534	1-162-974-11	CERAMIC CHIP	0.01uF		50V (DE698/DV10)
C1535	1-126-964-11	ELECT	10uF	20%	50V (DE698/DV10)
C1547	1-162-966-11	CERAMIC CHIP	0.0022uF	10%	50V
C1557	1-162-966-11	CERAMIC CHIP	0.0022uF	10%	50V
C1558	1-162-966-11	CERAMIC CHIP	0.0022uF	10%	50V (DE698/DV10)
C1566	1-162-966-11	CERAMIC CHIP	0.0022uF	10%	50V
C1567	1-162-966-11	CERAMIC CHIP	0.0022uF	10%	50V
C1568	1-162-966-11	CERAMIC CHIP	0.0022uF	10%	50V
C1569	1-162-966-11	CERAMIC CHIP	0.0022uF	10%	50V
C1604	1-100-566-11	CERAMIC CHIP	0.1uF	10%	25V
C1605	1-100-566-11	CERAMIC CHIP	0.1uF	10%	25V
C1620	1-100-566-11	CERAMIC CHIP	0.1uF	10%	25V
C1905	1-100-566-11	CERAMIC CHIP	0.1uF	10%	25V
C1906	1-126-925-11	ELECT	470uF	20%	10V
C1908	1-126-925-11	ELECT	470uF	20%	10V
C1913	1-100-566-11	CERAMIC CHIP	0.1uF	10%	25V
C1914	1-126-947-11	ELECT	47uF	20%	35V

< CONNECTOR >

CNP503	1-779-977-11	PIN, CONNECTOR 6P
CNP504	1-784-922-11	PIN, CONNECTOR 5P
CNP505	1-779-799-11	PIN, CONNECTOR 9P
CNS501	1-573-829-11	CONNECTOR, BOARD TO BOARD 15P

Ref. No.	Part No.	Description	Remark
CNS502	1-766-719-41	CONNECTOR, BOARD TO BOARD 10P	
CNS504	1-568-826-11	CONNECTOR, FFC 7P	
CNS505	1-568-838-11	CONNECTOR, FFC 21P	
CNS508	1-568-830-11	CONNECTOR, FFC 11P (EXCEPT AEP,UK)	
CNS508	1-784-776-11	CONNECTOR, FFC 15P (AEP,UK)	
CNS509	1-784-774-11	CONNECTOR, FFC 13P	
		< DIODE >	
D1001	8-719-053-18	DIODE 1SR154-400TE-25	
D1003	8-719-049-09	DIODE 1SS367-T3SONY	
D1004	8-719-049-09	DIODE 1SS367-T3SONY	
D1103	8-719-988-61	DIODE 1SS355TE-17	
D1105	8-719-988-61	DIODE 1SS355TE-17	
D1106	8-719-988-61	DIODE 1SS355TE-17	
D1107	8-719-988-61	DIODE 1SS355TE-17	
D1108	8-719-988-61	DIODE 1SS355TE-17	
D1110	8-719-988-61	DIODE 1SS355TE-17	
D1111	8-719-988-61	DIODE 1SS355TE-17	
D1301	8-719-988-61	DIODE 1SS355TE-17	
D1302	8-719-988-61	DIODE 1SS355TE-17	
		< FERRITE BEAD >	
FB1101	1-400-862-11	BEAD, FERRITE	
FB1302	1-400-862-11	BEAD, FERRITE	
FB1305	1-400-862-11	BEAD, FERRITE	
FB1306	1-400-862-11	BEAD, FERRITE	
FB1308	1-400-862-11	BEAD, FERRITE	
FB1309	1-400-862-11	BEAD, FERRITE (DE698/DV10)	
FB1405	1-400-862-11	BEAD, FERRITE	
FB1452	1-400-862-11	BEAD, FERRITE	
FB1453	1-400-862-11	BEAD, FERRITE	
FB1501	1-400-862-11	BEAD, FERRITE	
FB1502	1-400-862-11	BEAD, FERRITE	
FB1503	1-400-862-11	BEAD, FERRITE	
FB1504	1-400-862-11	BEAD, FERRITE (DE698/DV10)	
		< IC >	
IC1001	8-759-231-53	IC TA7805S	
IC1031	6-705-464-01	IC BA50BC0T	
IC1071	6-702-771-01	IC TA78033LS (AEP,UK)	
IC1101	6-804-835-01	IC MB90488BPF-G-110E1 (DE698/DV10)	
IC1101	6-805-148-01	IC MB90488BPF-G-137E1 (DE598)	
IC1103	8-759-242-70	IC TC7WU04F (DE698/DV10)	
IC1111	6-702-913-01	IC S-80929CNMC-G8ZT2G	
IC1131	6-704-004-01	IC BR24L16F-WE2	
IC1301	8-759-825-15	IC LC89056W-E	
IC1302	8-759-595-15	IC TC74ACT153F(EL) (DE698/DV10)	
IC1303	8-759-242-70	IC TC7WU04F	
IC1351	6-600-014-01	IC TORX141L (DIGITAL VIDEO 2 IN (OPTICAL))	
IC1352	6-600-014-01	IC TORX141L (DIGITAL MD/TAPE IN (OPTICAL)) (DE698/DV10)	
IC1353	6-600-012-11	IC TOTX141L(RED) (DIGITAL MD/TAPE OUT (OPTICAL)) (DE698/DV10)	
IC1354	6-600-014-01	IC TORX141L (DIGITAL SA-CD/CD IN (OPTICAL))	
IC1401	8-759-560-56	IC PCM1800E/2K	
IC1403	8-759-710-97	IC NJM4565M-D	
IC1404	8-759-710-97	IC NJM4565M-D	
IC1405	8-759-710-97	IC NJM4565M-D	
IC1406	8-759-710-97	IC NJM4565M-D	
IC1452	6-703-787-01	IC PCM1609KPTR	
IC1501	6-705-900-01	IC CXD9718BQ	
IC1502	6-704-037-01	IC IC61LV6416-15TG	
IC1503	8-759-546-74	IC TC7WH157FU(TE12R)	
IC1506	8-759-546-74	IC TC7WH157FU(TE12R) (DE698/DV10)	
IC1507	6-707-666-01	IC NJU26902VM1-TE2 (DE698/DV10)	
IC1901	6-701-887-02	IC SI-3004KWF	
IC1902	6-703-550-01	IC TA7809LS	
IC1904	6-705-463-01	IC BA33BC0T	
		< JACK >	
J1301	1-794-972-11	JACK, PIN 1P (DIGITAL DVD IN (COAXIAL)) (DE598)	
J1301	1-818-314-11	JACK, PIN 2P (DIGITAL DVD IN (COAXIAL), SA-CD/CD IN (COAXIAL)) (DE698/DV10)	
		< JUMPER RESISTOR >	
JR1020	1-216-864-11	SHORT CHIP 0	
JR1201	1-211-950-11	SHORT CHIP 0	
JR1202	1-216-864-11	SHORT CHIP 0 (EXCEPT AEP,UK)	
JR1203	1-216-296-11	SHORT CHIP 0	
JR1204	1-211-950-11	SHORT CHIP 0	
JR1206	1-211-950-11	SHORT CHIP 0	
JR1211	1-216-296-11	SHORT CHIP 0	
JR1212	1-216-296-11	SHORT CHIP 0	
JR1214	1-216-296-11	SHORT CHIP 0	
JR1215	1-216-296-11	SHORT CHIP 0	
JR1302	1-216-864-11	SHORT CHIP 0 (DE598)	
JR1303	1-216-864-11	SHORT CHIP 0 (DE598)	
JR1501	1-216-864-11	SHORT CHIP 0	
JR1511	1-400-862-11	BEAD, FERRITE	
		< TRANSISTOR >	
Q1103	8-729-027-43	TRANSISTOR DTC114EKA-T146	
Q1104	8-729-230-49	TRANSISTOR 2SC2712-YG	
Q1105	8-729-230-49	TRANSISTOR 2SC2712-YG	
		< RESISTOR >	
R1018	1-216-864-11	SHORT CHIP 0 (DE598)	
R1019	1-216-864-11	SHORT CHIP 0 (DE598)	
R1035	1-216-825-11	METAL CHIP 2.2K 5% 1/10W	
R1039	1-216-833-11	METAL CHIP 10K 5% 1/10W	
R1041	1-216-809-11	METAL CHIP 100 5% 1/10W	
R1042	1-216-809-11	METAL CHIP 100 5% 1/10W	
R1044	1-216-809-11	METAL CHIP 100 5% 1/10W	
R1049	1-216-833-11	METAL CHIP 10K 5% 1/10W	
R1052	1-216-833-11	METAL CHIP 10K 5% 1/10W (DE598)	
R1053	1-216-833-11	METAL CHIP 10K 5% 1/10W (DE598)	
R1055	1-216-809-11	METAL CHIP 100 5% 1/10W (DE698/DV10)	
R1056	1-216-854-11	METAL CHIP 560K 5% 1/10W (DE698/DV10)	
R1057	1-216-837-11	METAL CHIP 22K 5% 1/10W (DE698/DV10)	

Ref. No.	Part No.	Description			Remark
R1058	1-216-813-11	METAL CHIP	220	5%	1/10W (AEP,UK)
R1059	1-216-813-11	METAL CHIP	220	5%	1/10W (AEP,UK)
R1060	1-216-821-11	METAL CHIP	1K	5%	1/10W (DE698/DV10)
R1061	1-216-809-11	METAL CHIP	100	5%	1/10W (EXCEPT DE598:AEP,UK)
R1062	1-216-809-11	METAL CHIP	100	5%	1/10W (EXCEPT DE598:AEP,UK)
R1063	1-216-809-11	METAL CHIP	100	5%	1/10W (DE698)
R1065	1-216-809-11	METAL CHIP	100	5%	1/10W
R1066	1-216-809-11	METAL CHIP	100	5%	1/10W
R1067	1-216-809-11	METAL CHIP	100	5%	1/10W
R1068	1-216-809-11	METAL CHIP	100	5%	1/10W
R1070	1-216-864-11	SHORT CHIP	0 (DE698/DV10)		
R1071	1-216-827-11	METAL CHIP	3.3K	5%	1/10W
R1072	1-216-827-11	METAL CHIP	3.3K	5%	1/10W
R1073	1-216-827-11	METAL CHIP	3.3K	5%	1/10W
R1075	1-216-833-11	METAL CHIP	10K	5%	1/10W (DE598:AEP,UK)
R1076	1-216-809-11	METAL CHIP	100	5%	1/10W
R1077	1-216-809-11	METAL CHIP	100	5%	1/10W
R1078	1-216-809-11	METAL CHIP	100	5%	1/10W
R1079	1-216-833-11	METAL CHIP	10K	5%	1/10W (DE598:AEP,UK)
R1082	1-216-809-11	METAL CHIP	100	5%	1/10W
R1083	1-216-833-11	METAL CHIP	10K	5%	1/10W
R1085	1-216-809-11	METAL CHIP	100	5%	1/10W (DE698/DV10)
R1086	1-216-809-11	METAL CHIP	100	5%	1/10W (DE698/DV10)
R1088	1-216-833-11	METAL CHIP	10K	5%	1/10W
R1094	1-216-833-11	METAL CHIP	10K	5%	1/10W (EXCEPT AEP,UK)
R1095	1-216-833-11	METAL CHIP	10K	5%	1/10W (EXCEPT AEP,UK)
R1096	1-216-833-11	METAL CHIP	10K	5%	1/10W
R1097	1-216-845-11	METAL CHIP	100K	5%	1/10W
R1098	1-216-833-11	METAL CHIP	10K	5%	1/10W
R1099	1-216-833-11	METAL CHIP	10K	5%	1/10W
R1105	1-216-833-11	METAL CHIP	10K	5%	1/10W
R1106	1-216-809-11	METAL CHIP	100	5%	1/10W
R1107	1-216-825-11	METAL CHIP	2.2K	5%	1/10W
R1108	1-216-825-11	METAL CHIP	2.2K	5%	1/10W
R1109	1-216-825-11	METAL CHIP	2.2K	5%	1/10W
R1110	1-216-825-11	METAL CHIP	2.2K	5%	1/10W
R1111	1-216-825-11	METAL CHIP	2.2K	5%	1/10W
R1112	1-216-809-11	METAL CHIP	100	5%	1/10W
R1113	1-216-809-11	METAL CHIP	100	5%	1/10W
R1114	1-216-825-11	METAL CHIP	2.2K	5%	1/10W
R1115	1-216-809-11	METAL CHIP	100	5%	1/10W
R1117	1-216-821-11	METAL CHIP	1K	5%	1/10W
R1118	1-216-821-11	METAL CHIP	1K	5%	1/10W
R1119	1-216-821-11	METAL CHIP	1K	5%	1/10W
R1120	1-216-821-11	METAL CHIP	1K	5%	1/10W
R1121	1-216-809-11	METAL CHIP	100	5%	1/10W
R1122	1-216-809-11	METAL CHIP	100	5%	1/10W
R1123	1-216-809-11	METAL CHIP	100	5%	1/10W
R1124	1-216-809-11	METAL CHIP	100	5%	1/10W
R1127	1-216-809-11	METAL CHIP	100	5%	1/10W
R1128	1-216-809-11	METAL CHIP	100	5%	1/10W
R1129	1-216-809-11	METAL CHIP	100	5%	1/10W
R1132	1-216-833-11	METAL CHIP	10K	5%	1/10W
R1134	1-216-809-11	METAL CHIP	100	5%	1/10W
R1135	1-216-809-11	METAL CHIP	100	5%	1/10W
R1136	1-216-809-11	METAL CHIP	100	5%	1/10W
R1137	1-216-809-11	METAL CHIP	100	5%	1/10W
R1138	1-216-833-11	METAL CHIP	10K	5%	1/10W
R1140	1-216-809-11	METAL CHIP	100	5%	1/10W
R1142	1-216-809-11	METAL CHIP	100	5%	1/10W
R1143	1-216-809-11	METAL CHIP	100	5%	1/10W
R1144	1-216-809-11	METAL CHIP	100	5%	1/10W
R1147	1-216-833-11	METAL CHIP	10K	5%	1/10W (DE598/DV10)
R1149	1-216-809-11	METAL CHIP	100	5%	1/10W
R1150	1-216-809-11	METAL CHIP	100	5%	1/10W
R1151	1-216-809-11	METAL CHIP	100	5%	1/10W
R1152	1-216-809-11	METAL CHIP	100	5%	1/10W
R1153	1-216-809-11	METAL CHIP	100	5%	1/10W
R1154	1-216-809-11	METAL CHIP	100	5%	1/10W
R1155	1-216-809-11	METAL CHIP	100	5%	1/10W
R1159	1-216-827-11	METAL CHIP	3.3K	5%	1/10W
R1160	1-216-809-11	METAL CHIP	100	5%	1/10W
R1161	1-216-809-11	METAL CHIP	100	5%	1/10W
R1162	1-216-809-11	METAL CHIP	100	5%	1/10W
R1163	1-216-841-11	METAL CHIP	47K	5%	1/10W (DE598/DV10)
R1164	1-216-825-11	METAL CHIP	2.2K	5%	1/10W (DV10)
R1164	1-216-841-11	METAL CHIP	47K	5%	1/10W (DE598)
R1164	1-216-864-11	SHORT CHIP	0 (DE698)		
R1167	1-216-809-11	METAL CHIP	100	5%	1/10W
R1168	1-216-809-11	METAL CHIP	100	5%	1/10W
R1175	1-216-809-11	METAL CHIP	100	5%	1/10W (AEP,UK)
R1176	1-216-833-11	METAL CHIP	10K	5%	1/10W
R1177	1-216-833-11	METAL CHIP	10K	5%	1/10W
R1178	1-216-833-11	METAL CHIP	10K	5%	1/10W
R1179	1-216-833-11	METAL CHIP	10K	5%	1/10W
R1180	1-216-833-11	METAL CHIP	10K	5%	1/10W
R1181	1-216-833-11	METAL CHIP	10K	5%	1/10W (DE698/DV10)
R1182	1-216-833-11	METAL CHIP	10K	5%	1/10W (DE698/DV10)
R1186	1-216-833-11	METAL CHIP	10K	5%	1/10W
R1187	1-216-833-11	METAL CHIP	10K	5%	1/10W
R1189	1-216-833-11	METAL CHIP	10K	5%	1/10W
R1190	1-216-833-11	METAL CHIP	10K	5%	1/10W
R1191	1-216-833-11	METAL CHIP	10K	5%	1/10W (DE698/DV10)
R1192	1-216-833-11	METAL CHIP	10K	5%	1/10W (DE698/DV10)
R1193	1-216-829-11	METAL CHIP	4.7K	5%	1/10W (DE598:KR,TW/DE698:AUS)
R1193	1-216-833-11	METAL CHIP	10K	5%	1/10W (DE698:AR)

Ref. No.	Part No.	Description			Remark
R1193	1-216-837-11	METAL CHIP	22K	5%	1/10W (DE598:AUS)
R1193	1-216-841-11	METAL CHIP	47K	5%	1/10W (DE598:AEP,UK,E2,AR/DE698:AEP,UK,E2)
R1194	1-216-825-11	METAL CHIP	2.2K	5%	1/10W (AEP,UK)
R1194	1-216-833-11	METAL CHIP	10K	5%	1/10W (DE598:E2)
R1194	1-216-837-11	METAL CHIP	22K	5%	1/10W (DE698:E2)
R1194	1-216-841-11	METAL CHIP	47K	5%	1/10W (AUS,AR,KR,TW)
R1194	1-216-864-11	SHORT CHIP	0 (US,CND)		
R1197	1-216-809-11	METAL CHIP	100	5%	1/10W (DE698)
R1198	1-216-864-11	SHORT CHIP	0 (DE698)		
R1199	1-216-864-11	SHORT CHIP	0 (DE698)		
R1201	1-216-837-11	METAL CHIP	22K	5%	1/10W
R1251	1-216-840-11	METAL CHIP	39K	5%	1/10W
R1252	1-216-840-11	METAL CHIP	39K	5%	1/10W
R1260	1-216-821-11	METAL CHIP	1K	5%	1/10W
R1261	1-216-821-11	METAL CHIP	1K	5%	1/10W
R1301	1-216-830-11	METAL CHIP	5.6K	5%	1/10W
R1302	1-216-829-11	METAL CHIP	4.7K	5%	1/10W
R1303	1-216-839-11	METAL CHIP	33K	5%	1/10W
R1304	1-216-809-11	METAL CHIP	100	5%	1/10W
R1305	1-216-819-11	METAL CHIP	680	5%	1/10W
R1306	1-216-801-11	METAL CHIP	22	5%	1/10W
R1307	1-216-809-11	METAL CHIP	100	5%	1/10W
R1308	1-216-809-11	METAL CHIP	100	5%	1/10W
R1309	1-216-809-11	METAL CHIP	100	5%	1/10W
R1310	1-216-857-11	METAL CHIP	1M	5%	1/10W
R1311	1-216-809-11	METAL CHIP	100	5%	1/10W
R1312	1-216-809-11	METAL CHIP	100	5%	1/10W
R1313	1-216-809-11	METAL CHIP	100	5%	1/10W
R1314	1-216-833-11	METAL CHIP	10K	5%	1/10W
R1315	1-216-809-11	METAL CHIP	100	5%	1/10W
R1316	1-216-809-11	METAL CHIP	100	5%	1/10W
R1318	1-216-833-11	METAL CHIP	10K	5%	1/10W
R1351	1-216-809-11	METAL CHIP	100	5%	1/10W
R1352	1-216-809-11	METAL CHIP	100	5%	1/10W (DE698/DV10)
R1353	1-216-809-11	METAL CHIP	100	5%	1/10W (DE698/DV10)
R1354	1-216-809-11	METAL CHIP	100	5%	1/10W
R1355	1-218-285-11	METAL CHIP	75	5%	1/10W
R1356	1-216-821-11	METAL CHIP	1K	5%	1/10W
R1357	1-216-837-11	METAL CHIP	22K	5%	1/10W
R1358	1-216-854-11	METAL CHIP	560K	5%	1/10W
R1359	1-216-809-11	METAL CHIP	100	5%	1/10W
R1360	1-216-809-11	METAL CHIP	100	5%	1/10W
R1361	1-216-809-11	METAL CHIP	100	5%	1/10W (DE698/DV10)
R1362	1-216-809-11	METAL CHIP	100	5%	1/10W
R1366	1-218-285-11	METAL CHIP	75	5%	1/10W (DE698/DV10)
R1401	1-216-821-11	METAL CHIP	1K	5%	1/10W
R1402	1-216-825-11	METAL CHIP	2.2K	5%	1/10W
R1403	1-216-833-11	METAL CHIP	10K	5%	1/10W
R1407	1-216-809-11	METAL CHIP	100	5%	1/10W

Ref. No.	Part No.	Description			Remark
R1414	1-218-867-11	METAL CHIP	6.8K	0.5%	1/10W
R1416	1-216-821-11	METAL CHIP	1K	5%	1/10W
R1420	1-216-864-11	SHORT CHIP	0		
R1421	1-218-867-11	METAL CHIP	6.8K	0.5%	1/10W
R1424	1-218-867-11	METAL CHIP	6.8K	0.5%	1/10W
R1425	1-216-864-11	SHORT CHIP	0		
R1426	1-216-821-11	METAL CHIP	1K	5%	1/10W
R1434	1-218-867-11	METAL CHIP	6.8K	0.5%	1/10W
R1435	1-216-864-11	SHORT CHIP	0		
R1436	1-216-821-11	METAL CHIP	1K	5%	1/10W
R1444	1-218-867-11	METAL CHIP	6.8K	0.5%	1/10W
R1445	1-216-864-11	SHORT CHIP	0		
R1446	1-216-821-11	METAL CHIP	1K	5%	1/10W
R1454	1-218-867-11	METAL CHIP	6.8K	0.5%	1/10W
R1455	1-216-864-11	SHORT CHIP	0		
R1456	1-216-821-11	METAL CHIP	1K	5%	1/10W (DE698/DV10)
R1460	1-216-864-11	SHORT CHIP	0		
R1461	1-216-864-11	SHORT CHIP	0		
R1463	1-218-867-11	METAL CHIP	6.8K	0.5%	1/10W
R1464	1-216-864-11	SHORT CHIP	0		
R1466	1-216-821-11	METAL CHIP	1K	5%	1/10W
R1470	1-218-867-11	METAL CHIP	6.8K	0.5%	1/10W
R1471	1-216-864-11	SHORT CHIP	0		
R1472	1-216-864-11	SHORT CHIP	0		
R1473	1-218-867-11	METAL CHIP	6.8K	0.5%	1/10W
R1474	1-216-833-11	METAL CHIP	10K	5%	1/10W
R1475	1-216-864-11	SHORT CHIP	0		
R1476	1-216-821-11	METAL CHIP	1K	5%	1/10W
R1483	1-218-867-11	METAL CHIP	6.8K	0.5%	1/10W
R1484	1-216-864-11	SHORT CHIP	0		
R1486	1-216-821-11	METAL CHIP	1K	5%	1/10W
R1490	1-218-867-11	METAL CHIP	6.8K	0.5%	1/10W
R1491	1-218-867-11	METAL CHIP	6.8K	0.5%	1/10W
R1492	1-218-867-11	METAL CHIP	6.8K	0.5%	1/10W
R1493	1-218-867-11	METAL CHIP	6.8K	0.5%	1/10W
R1494	1-218-867-11	METAL CHIP	6.8K	0.5%	1/10W
R1495	1-218-867-11	METAL CHIP	6.8K	0.5%	1/10W
R1500	1-216-809-11	METAL CHIP	100	5%	1/10W (DE698/DV10)
R1501	1-216-809-11	METAL CHIP	100	5%	1/10W
R1502	1-216-809-11	METAL CHIP	100	5%	1/10W
R1503	1-216-813-11	METAL CHIP	220	5%	1/10W
R1504	1-216-809-11	METAL CHIP	100	5%	1/10W
R1505	1-216-809-11	METAL CHIP	100	5%	1/10W
R1506	1-216-809-11	METAL CHIP	100	5%	1/10W
R1507	1-216-809-11	METAL CHIP	100	5%	1/10W
R1508	1-216-809-11	METAL CHIP	100	5%	1/10W
R1509	1-216-809-11	METAL CHIP	100	5%	1/10W
R1510	1-216-809-11	METAL CHIP	100	5%	1/10W
R1511	1-216-809-11	METAL CHIP	100	5%	1/10W
R1512	1-216-821-11	METAL CHIP	1K	5%	1/10W
R1513	1-216-833-11	METAL CHIP	10K	5%	1/10W
R1514	1-216-833-11	METAL CHIP	10K	5%	1/10W
R1515	1-216-857-11	METAL CHIP	1M	5%	1/10W
R1517	1-216-813-11	METAL CHIP	220	5%	1/10W
R1518	1-216-813-11	METAL CHIP	220	5%	1/10W
R1519	1-216-813-11	METAL CHIP	220	5%	1/10W

Ref. No.	Part No.	Description			Remark
R1520	1-216-813-11	METAL CHIP	220	5%	1/10W
R1521	1-216-813-11	METAL CHIP	220	5%	1/10W
R1522	1-216-813-11	METAL CHIP	220	5%	1/10W
R1523	1-216-813-11	METAL CHIP	220	5%	1/10W
R1524	1-216-864-11	SHORT CHIP	0		
R1525	1-216-813-11	METAL CHIP	220	5%	1/10W
R1526	1-216-813-11	METAL CHIP	220	5%	1/10W
R1527	1-216-813-11	METAL CHIP	220	5%	1/10W
R1528	1-216-813-11	METAL CHIP	220	5%	1/10W
R1530	1-216-809-11	METAL CHIP	100	5%	1/10W (DE698/DV10)
R1531	1-216-809-11	METAL CHIP	100	5%	1/10W (DE698/DV10)
R1532	1-216-813-11	METAL CHIP	220	5%	1/10W
R1533	1-216-813-11	METAL CHIP	220	5%	1/10W
R1534	1-216-813-11	METAL CHIP	220	5%	1/10W
R1535	1-216-813-11	METAL CHIP	220	5%	1/10W
R1536	1-216-813-11	METAL CHIP	220	5%	1/10W
R1537	1-216-813-11	METAL CHIP	220	5%	1/10W
R1538	1-216-813-11	METAL CHIP	220	5%	1/10W
R1539	1-216-813-11	METAL CHIP	220	5%	1/10W
R1540	1-216-813-11	METAL CHIP	220	5%	1/10W
R1541	1-216-813-11	METAL CHIP	220	5%	1/10W
R1542	1-216-813-11	METAL CHIP	220	5%	1/10W
R1543	1-216-813-11	METAL CHIP	220	5%	1/10W
R1544	1-216-813-11	METAL CHIP	220	5%	1/10W
R1545	1-216-813-11	METAL CHIP	220	5%	1/10W
R1546	1-216-813-11	METAL CHIP	220	5%	1/10W
R1547	1-216-813-11	METAL CHIP	220	5%	1/10W
R1548	1-216-813-11	METAL CHIP	220	5%	1/10W
R1549	1-216-813-11	METAL CHIP	220	5%	1/10W
R1550	1-216-813-11	METAL CHIP	220	5%	1/10W
R1551	1-216-813-11	METAL CHIP	220	5%	1/10W
R1552	1-216-813-11	METAL CHIP	220	5%	1/10W
R1553	1-216-813-11	METAL CHIP	220	5%	1/10W
R1554	1-216-813-11	METAL CHIP	220	5%	1/10W
R1555	1-216-813-11	METAL CHIP	220	5%	1/10W
R1556	1-216-809-11	METAL CHIP	100	5%	1/10W
R1570	1-216-833-11	METAL CHIP	10K	5%	1/10W
R1571	1-216-833-11	METAL CHIP	10K	5%	1/10W
R1572	1-216-833-11	METAL CHIP	10K	5%	1/10W
R1573	1-216-833-11	METAL CHIP	10K	5%	1/10W
R1574	1-216-833-11	METAL CHIP	10K	5%	1/10W
R1587	1-216-813-11	METAL CHIP	220	5%	1/10W (DE698/DV10)
R1588	1-216-833-11	METAL CHIP	10K	5%	1/10W (DE698/DV10)
R1635	1-216-825-11	METAL CHIP	2.2K	5%	1/10W
R1636	1-216-825-11	METAL CHIP	2.2K	5%	1/10W

< VIBRATOR >

X1101	1-813-448-21	OSCILLATOR, PIEZOELECTRIC (24MHz)
X1301	1-795-126-21	VIBRATOR, CRYSTAL (12.288MHz)
X1502	1-813-276-21	QUARTZ, CRYSTAL (13.9MHz)

****

Ref. No.	Part No.	Description	Remark
	A-1084-338-A	DISPLAY BOARD, COMPLETE (DE598)	
	A-1084-994-A	DISPLAY BOARD, COMPLETE (DE698/DV10)	
		**********	

< CAPACITOR >

C100	1-127-888-11	CERAMIC	0.1uF	10%	50V
C101	1-127-888-11	CERAMIC	0.1uF	10%	50V
C104	1-113-342-11	CERAMIC	0.1uF		50V (DE598)
C104	1-127-888-11	CERAMIC	0.1uF	10%	50V (DE698/DV10)
C105	1-126-795-11	ELECT	10uF	20%	50V
C106	1-127-868-11	CERAMIC	0.0022uF	10%	50V (DE698/DV10)
C107	1-127-868-11	CERAMIC	0.0022uF	10%	50V (DE698/DV10)
C108	1-127-888-11	CERAMIC	0.1uF	10%	50V
C109	1-127-888-11	CERAMIC	0.1uF	10%	50V
C110	1-162-286-31	CERAMIC	220PF	10%	50V
C111	1-162-286-31	CERAMIC	220PF	10%	50V
C112	1-162-286-31	CERAMIC	220PF	10%	50V
C114	1-127-888-11	CERAMIC	0.1uF	10%	50V
C115	1-126-795-11	ELECT	10uF	20%	50V
C132	1-162-286-31	CERAMIC	220PF	10%	50V
C133	1-162-286-31	CERAMIC	220PF	10%	50V
C134	1-162-286-31	CERAMIC	220PF	10%	50V
C135	1-162-286-31	CERAMIC	220PF	10%	50V
C136	1-162-286-31	CERAMIC	220PF	10%	50V
C137	1-162-286-31	CERAMIC	220PF	10%	50V
C138	1-162-286-31	CERAMIC	220PF	10%	50V
C139	1-162-286-31	CERAMIC	220PF	10%	50V
C140	1-162-286-31	CERAMIC	220PF	10%	50V
C141	1-162-286-31	CERAMIC	220PF	10%	50V
C142	1-162-286-31	CERAMIC	220PF	10%	50V
C143	1-162-286-31	CERAMIC	220PF	10%	50V
C144	1-127-888-11	CERAMIC	0.1uF	10%	50V
C150	1-127-888-11	CERAMIC	0.1uF	10%	50V
C151	1-126-795-11	ELECT	10uF	20%	50V
C152	1-162-286-31	CERAMIC	220PF	10%	50V
C153	1-162-286-31	CERAMIC	220PF	10%	50V
C154	1-162-286-31	CERAMIC	220PF	10%	50V
C155	1-127-888-11	CERAMIC	0.1uF	10%	50V
C156	1-127-888-11	CERAMIC	0.1uF	10%	50V
C157	1-127-888-11	CERAMIC	0.1uF	10%	50V

< CONNECTOR >

CNS100	1-568-838-11	CONNECTOR, FFC 21P

< DIODE >

D101	8-719-061-96	LED SLR-325DCT31 (2CH)
D102	8-719-061-96	LED SLR-325DCT31 (MUSIC)
D103	8-719-061-96	LED SLR-325DCT31 (MOVIE)
D104	8-719-061-96	LED SLR-325DCT31 (A.F.D.)
D105	6-500-647-01	LED SEL5E20C-STP15 (MULTI CHANNEL DECODING)

< VACUUM FLUORESCENT DISPLAY >

FL101	1-518-966-11	VACUUM FLUORESCENT DISPLAY

Ref. No.	Part No.	Description			Remark
		< IC >			
IC100	8-759-643-83	IC uPD16315GB-3BS			
IC101	8-759-036-90	IC MC74ACT08N			
IC102	6-600-349-31	IC NJL24H400A (IR)			
		< TRANSISTOR >			
Q110	8-729-119-78	TRANSISTOR 2SC2785-HFE			
		< RESISTOR >			
R101	1-249-409-11	CARBON	220	5%	1/4W
R102	1-249-411-11	CARBON	330	5%	1/4W
R103	1-249-413-11	CARBON	470	5%	1/4W
R104	1-249-415-11	CARBON	680	5%	1/4W
R105	1-247-831-00	CARBON	1K	5%	1/4W
R106	1-249-419-11	CARBON	1.5K	5%	1/4W
R107	1-249-421-11	CARBON	2.2K	5%	1/4W
R108	1-247-847-00	CARBON	4.7K	5%	1/4W
R109	1-249-429-11	CARBON	10K	5%	1/4W
R110	1-249-435-11	CARBON	33K	5%	1/4W (DE598)
R111	1-249-421-11	CARBON	2.2K	5%	1/4W
R121	1-249-409-11	CARBON	220	5%	1/4W
R122	1-249-411-11	CARBON	330	5%	1/4W
R123	1-249-413-11	CARBON	470	5%	1/4W
R124	1-249-415-11	CARBON	680	5%	1/4W
R125	1-247-831-00	CARBON	1K	5%	1/4W
R128	1-249-419-11	CARBON	1.5K	5%	1/4W
R142	1-249-409-11	CARBON	220	5%	1/4W
R143	1-249-411-11	CARBON	330	5%	1/4W
R144	1-249-413-11	CARBON	470	5%	1/4W
R148	1-249-415-11	CARBON	680	5%	1/4W
R154	1-249-393-11	CARBON	10	5%	1/4W F
R155	1-247-807-31	CARBON	100	5%	1/4W
R160	1-249-409-11	CARBON	220	5%	1/4W
R161	1-247-804-11	CARBON	75	5%	1/4W
R162	1-249-429-11	CARBON	10K	5%	1/4W
R171	1-249-440-11	CARBON	82K	5%	1/4W
R172	1-247-807-31	CARBON	100	5%	1/4W
R173	1-247-807-31	CARBON	100	5%	1/4W
R174	1-247-807-31	CARBON	100	5%	1/4W
R175	1-249-393-11	CARBON	10	5%	1/4W F
R198	1-249-381-11	CARBON	1	5%	1/4W F
R199	1-249-381-11	CARBON	1	5%	1/4W F
		< ROTARY ENCODER >			
RV101	1-418-817-11	ENCODER, ROTARY (–/+) (DE698/DV10)			
RV102	1-418-725-41	ENCODER, ROTARY (12 TYPE) (MASTER VOLUME)			
		< SWITCH >			
S100	1-771-410-21	SWITCH, TACTILE (>)			
S101	1-771-410-21	SWITCH, TACTILE (INPUT MODE)			
S102	1-771-410-21	SWITCH, TACTILE (DVD)			
S103	1-771-410-21	SWITCH, TACTILE (MD/TAPE)			
S104	1-771-410-21	SWITCH, TACTILE (SA-CD/CD)			
S105	1-771-410-21	SWITCH, TACTILE (FM) (DE598)			
S105	1-771-410-21	SWITCH, TACTILE (TUNER FM/AM) (DE698/DV10)			
S106	1-771-410-21	SWITCH, TACTILE (MAIN MENU)			
S107	1-771-410-21	SWITCH, TACTILE (ENTER)			
S108	1-771-410-21	SWITCH, TACTILE (<)			
S109	1-771-410-21	SWITCH, TACTILE (+) (DE598)			
S110	1-771-410-21	SWITCH, TACTILE (AM) (DE598)			
S110	1-771-410-21	SWITCH, TACTILE (AUX) (DE698/DV10)			
S120	1-771-410-21	SWITCH, TACTILE (SURR BACK DECODING)			
S121	1-771-410-21	SWITCH, TACTILE (MUSIC)			
S122	1-771-410-21	SWITCH, TACTILE (MOVIE)			
S123	1-771-410-21	SWITCH, TACTILE (A.F.D.)			
S124	1-771-410-21	SWITCH, TACTILE (2CH)			
S125	1-771-410-21	SWITCH, TACTILE (MULTI CH IN)			
S140	1-771-410-21	SWITCH, TACTILE (–) (DE598)			
S141	1-771-410-21	SWITCH, TACTILE (VIDEO 3)			
S142	1-771-410-21	SWITCH, TACTILE (VIDEO 2)			
S143	1-771-410-21	SWITCH, TACTILE (VIDEO 1)			
**********					
		HEADPHONE BOARD			
		**********			
		< CAPACITOR >			
C790	1-127-888-11	CERAMIC	0.1uF	10%	50V
		< CONNECTOR >			
CNP791	1-691-766-11	PLUG (MICRO CONNECTOR) 4P			
		< JACK >			
J791	1-815-314-21	JACK (PHONES)			
**********					
	A-1084-332-A	MAIN BOARD, COMPLETE (DE598:US,E2)			
	A-1084-399-A	MAIN BOARD, COMPLETE (DE598:CND)			
	A-1084-404-A	MAIN BOARD, COMPLETE (DE598:AEP,UK)			
	A-1084-563-A	MAIN BOARD, COMPLETE (DE698:US,E2/DV10)			
	A-1084-705-A	MAIN BOARD, COMPLETE (DE698:CND)			
	A-1085-097-A	MAIN BOARD, COMPLETE (DE698:AEP,UK)			
	A-1097-809-A	MAIN BOARD, COMPLETE (DE598:AUS,AR,KR,TW)			
	A-1097-810-A	MAIN BOARD, COMPLETE (DE698:AUS,AR)			
		**********			
	7-685-646-79	SCREW +BVTP 3X8 TYPE2 IT-3			
		< CAPACITOR >			
C400	1-127-868-11	CERAMIC	0.0022uF	10%	50V
C403	1-127-868-11	CERAMIC	0.0022uF	10%	50V
C408	1-126-963-11	ELECT	4.7uF	20%	50V
C409	1-126-963-11	ELECT	4.7uF	20%	50V
C444	1-127-868-11	CERAMIC	0.0022uF	10%	50V
C445	1-127-868-11	CERAMIC	0.0022uF	10%	50V
C458	1-126-963-11	ELECT	4.7uF	20%	50V
C459	1-126-963-11	ELECT	4.7uF	20%	50V
C464	1-127-888-11	CERAMIC	0.1uF	10%	50V
C468	1-162-282-31	CERAMIC	100PF	10%	50V
C469	1-162-282-31	CERAMIC	100PF	10%	50V
C471	1-126-963-11	ELECT	4.7uF	20%	50V

Ref. No.	Part No.	Description			Remark
C472	1-126-963-11	ELECT	4.7uF	20%	50V
C481	1-126-964-11	ELECT	10uF	20%	50V
C484	1-126-964-11	ELECT	10uF	20%	50V
C485	1-126-964-11	ELECT	10uF	20%	50V
C488	1-127-888-11	CERAMIC	0.1uF	10%	50V
C490	1-126-964-11	ELECT	10uF	20%	50V
C492	1-126-964-11	ELECT	10uF	20%	50V
C493	1-126-964-11	ELECT	10uF	20%	50V
C495	1-126-964-11	ELECT	10uF	20%	50V
C497	1-126-964-11	ELECT	10uF	20%	50V (DE698/DV10)
C499	1-162-286-31	CERAMIC	220PF	10%	50V
C501	1-126-963-11	ELECT	4.7uF	20%	50V
C503	1-104-658-11	ELECT	100uF	20%	10V
C504	1-107-585-11	CERAMIC	5PF	0.25PF	500V
C505	1-102-233-00	CERAMIC	33PF	10%	500V
C506	1-162-282-31	CERAMIC	100PF	10%	50V
C507	1-162-282-31	CERAMIC	100PF	10%	50V
C510	1-126-947-11	ELECT	47uF	20%	35V
C511	1-136-157-00	FILM	0.022uF	5%	50V
C516	1-162-815-11	CERAMIC	47PF	5%	500V
C517	1-162-815-11	CERAMIC	47PF	5%	500V
C519	1-162-286-31	CERAMIC	220PF	10%	50V
C531	1-136-157-00	FILM	0.022uF	5%	50V
C539	1-162-286-31	CERAMIC	220PF	10%	50V
C540	1-126-964-11	ELECT	10uF	20%	50V
C541	1-127-876-11	CERAMIC	0.01uF	10%	50V
C553	1-104-658-11	ELECT	100uF	20%	10V
C554	1-107-585-11	CERAMIC	5PF	0.25PF	500V
C561	1-126-963-11	ELECT	4.7uF	20%	50V
C565	1-102-233-00	CERAMIC	33PF	10%	500V
C566	1-162-282-31	CERAMIC	100PF	10%	50V
C567	1-162-282-31	CERAMIC	100PF	10%	50V
C570	1-126-947-11	ELECT	47uF	20%	35V
C576	1-162-815-11	CERAMIC	47PF	5%	500V
C577	1-162-815-11	CERAMIC	47PF	5%	500V
C580	1-126-964-11	ELECT	10uF	20%	50V
C581	1-127-876-11	CERAMIC	0.01uF	10%	50V
C601	1-126-963-11	ELECT	4.7uF	20%	50V
C603	1-104-658-11	ELECT	100uF	20%	10V
C604	1-107-583-11	CERAMIC	3PF	0.25PF	500V
C605	1-102-233-00	CERAMIC	33PF	10%	500V
C606	1-162-282-31	CERAMIC	100PF	10%	50V
C607	1-162-282-31	CERAMIC	100PF	10%	50V
C610	1-126-947-11	ELECT	47uF	20%	35V
C611	1-136-157-00	FILM	0.022uF	5%	50V
C619	1-162-286-31	CERAMIC	220PF	10%	50V
C620	1-162-815-11	CERAMIC	47PF	5%	500V
C621	1-162-815-11	CERAMIC	47PF	5%	500V
C640	1-126-964-11	ELECT	10uF	20%	50V
C642	1-127-876-11	CERAMIC	0.01uF	10%	50V
C651	1-126-963-11	ELECT	4.7uF	20%	50V
C653	1-104-658-11	ELECT	100uF	20%	10V
C654	1-107-583-11	CERAMIC	3PF	0.25PF	500V
C655	1-102-233-00	CERAMIC	33PF	10%	500V
C656	1-162-282-31	CERAMIC	100PF	10%	50V
C657	1-162-282-31	CERAMIC	100PF	10%	50V
C660	1-126-947-11	ELECT	47uF	20%	35V
C661	1-136-157-00	FILM	0.022uF	5%	50V
C666	1-162-815-11	CERAMIC	47PF	5%	500V
C669	1-162-815-11	CERAMIC	47PF	5%	500V
C670	1-162-286-31	CERAMIC	220PF	10%	50V
C680	1-126-964-11	ELECT	10uF	20%	50V
C681	1-127-876-11	CERAMIC	0.01uF	10%	50V
C691	1-127-888-11	CERAMIC	0.1uF	10%	50V
C701	1-126-963-11	ELECT	4.7uF	20%	50V
C702	1-126-964-11	ELECT	10uF	20%	50V
C703	1-104-658-11	ELECT	100uF	20%	10V
C704	1-107-583-11	CERAMIC	3PF	0.25PF	500V
C705	1-102-233-00	CERAMIC	33PF	10%	500V
C706	1-162-282-31	CERAMIC	100PF	10%	50V
C707	1-162-282-31	CERAMIC	100PF	10%	50V
C710	1-126-947-11	ELECT	47uF	20%	35V
C711	1-136-157-00	FILM	0.022uF	5%	50V
C716	1-162-815-11	CERAMIC	47PF	5%	500V
C717	1-162-815-11	CERAMIC	47PF	5%	500V
C720	1-162-286-31	CERAMIC	220PF	10%	50V
C721	1-126-923-11	ELECT	220uF	20%	10V
C722	1-126-964-11	ELECT	10uF	20%	50V
C732	1-128-582-11	ELECT	10uF	20%	100V
C733	1-128-582-11	ELECT	10uF	20%	100V
C740	1-126-964-11	ELECT	10uF	20%	50V
C741	1-128-579-11	ELECT	2.2uF	20%	100V
C742	1-127-876-11	CERAMIC	0.01uF	10%	50V
C743	1-128-579-11	ELECT	2.2uF	20%	100V
C744	1-128-579-11	ELECT	2.2uF	20%	100V
C750	1-126-964-11	ELECT	10uF	20%	50V
C751	1-126-963-11	ELECT	4.7uF	20%	50V
C752	1-127-876-11	CERAMIC	0.01uF	10%	50V
C753	1-104-658-11	ELECT	100uF	20%	10V
C754	1-107-583-11	CERAMIC	3PF	0.25PF	500V
C755	1-102-233-00	CERAMIC	33PF	10%	500V
C756	1-162-282-31	CERAMIC	100PF	10%	50V
C757	1-162-282-31	CERAMIC	100PF	10%	50V
C760	1-126-947-11	ELECT	47uF	20%	35V
C761	1-136-157-00	FILM	0.022uF	5%	50V
C762	1-126-964-11	ELECT	10uF	20%	50V
C766	1-162-815-11	CERAMIC	47PF	5%	500V
C767	1-162-815-11	CERAMIC	47PF	5%	500V
C770	1-162-286-31	CERAMIC	220PF	10%	50V
C791	1-126-923-11	ELECT	220uF	20%	10V
C801	1-126-947-11	ELECT	47uF	20%	35V
C802	1-126-947-11	ELECT	47uF	20%	35V
C803	1-109-932-14	ELECT(BLOCK)	10000uF	20%	71V
C804	1-109-932-14	ELECT(BLOCK)	10000uF	20%	71V
C805	1-135-851-21	MYLAR	0.22uF		100V
C806	1-135-851-21	MYLAR	0.22uF		100V
C807	1-126-947-11	ELECT	47uF	20%	35V
C808	1-126-947-11	ELECT	47uF	20%	35V
C809	1-127-888-11	CERAMIC	0.1uF	10%	50V
C810	1-127-888-11	CERAMIC	0.1uF	10%	50V
C811	1-127-888-11	CERAMIC	0.1uF	10%	50V
C822	1-126-947-11	ELECT	47uF	20%	35V
C830	1-127-888-11	CERAMIC	0.1uF	10%	50V
C831	1-127-888-11	CERAMIC	0.1uF	10%	50V
C832	1-126-936-11	ELECT	3300uF	20%	16V

MAIN

Ref. No.	Part No.	Description	Remark
CC01	1-162-282-31	CERAMIC 100PF 10% 50V	(DE698:AEP,UK,AUS,AR)
CC02	1-162-282-31	CERAMIC 100PF 10% 50V	(EXCEPT US,CND,E2)
CC04	1-162-282-31	CERAMIC 100PF 10% 50V	(EXCEPT US,CND,E2)
CC05	1-162-282-31	CERAMIC 100PF 10% 50V	(EXCEPT US,CND,E2)
CC06	1-162-282-31	CERAMIC 100PF 10% 50V	(EXCEPT US,CND,E2)
CC07	1-162-282-31	CERAMIC 100PF 10% 50V	(EXCEPT US,CND,E2)
CC08	1-162-282-31	CERAMIC 100PF 10% 50V	(EXCEPT US,CND,E2)
CC09	1-162-282-31	CERAMIC 100PF 10% 50V	(EXCEPT US,CND,E2)
CC11	1-127-876-11	CERAMIC 0.01uF 10% 50V	(EXCEPT US,CND,E2)
CC13	1-127-876-11	CERAMIC 0.01uF 10% 50V	(EXCEPT US,CND,E2)
CC15	1-127-876-11	CERAMIC 0.01uF 10% 50V	(EXCEPT US,CND,E2)
CC17	1-127-876-11	CERAMIC 0.01uF 10% 50V	(EXCEPT US,CND,E2)
CC31	1-162-286-31	CERAMIC 220PF 10% 50V	(EXCEPT US,CND,E2)
CC32	1-162-286-31	CERAMIC 220PF 10% 50V	(EXCEPT US,CND,E2)
CC33	1-162-286-31	CERAMIC 220PF 10% 50V	(EXCEPT US,CND,E2)
CC34	1-162-286-31	CERAMIC 220PF 10% 50V	(EXCEPT US,CND,E2)
CC35	1-162-286-31	CERAMIC 220PF 10% 50V	(EXCEPT US,CND,E2)
CC36	1-162-286-31	CERAMIC 220PF 10% 50V	(EXCEPT US,CND,E2)
CC51	1-162-282-31	CERAMIC 100PF 10% 50V	(DE698:AEP,UK,AUS,AR)
CC52	1-162-282-31	CERAMIC 100PF 10% 50V	(EXCEPT US,CND,E2)
CC54	1-162-282-31	CERAMIC 100PF 10% 50V	(EXCEPT US,CND,E2)
CC55	1-162-282-31	CERAMIC 100PF 10% 50V	(EXCEPT US,CND,E2)
CC56	1-162-282-31	CERAMIC 100PF 10% 50V	(EXCEPT US,CND,E2)
CC57	1-162-282-31	CERAMIC 100PF 10% 50V	(EXCEPT US,CND,E2)
CC58	1-162-282-31	CERAMIC 100PF 10% 50V	(EXCEPT US,CND,E2)
CC59	1-162-282-31	CERAMIC 100PF 10% 50V	(EXCEPT US,CND,E2)
		< CONNECTOR >	
CNP500	1-766-715-21	CONNECTOR, BOARD TO BOARD 10P	
CNP501	1-573-847-11	CONNECTOR, BOARD TO BOARD 15P	
CNP503	1-779-978-11	PIN, CONNECTOR 3P	
CNP802	1-691-767-11	PLUG (MICRO CONNECTOR) 5P	
CNP806	1-784-921-11	PIN, CONNECTOR 4P	
* CNP908	1-564-242-00	PIN, CONNECTOR (3.96mm PITCH) 5P	
CNP911	1-784-926-11	PIN, CONNECTOR 11P	
CNP912	1-691-766-11	PLUG (MICRO CONNECTOR) 4P	

Ref. No.	Part No.	Description	Remark
		< DIODE >	
D505	8-719-991-33	DIODE 1SS133T-77	
D540	8-719-991-33	DIODE 1SS133T-77	
D560	8-719-991-33	DIODE 1SS133T-77	
D580	8-719-991-33	DIODE 1SS133T-77	
D585	8-719-991-33	DIODE 1SS133T-77	
D605	8-719-991-33	DIODE 1SS133T-77	
D610	8-719-991-33	DIODE 1SS133T-77	
D640	8-719-991-33	DIODE 1SS133T-77	
D665	8-719-991-33	DIODE 1SS133T-77	
D680	8-719-991-33	DIODE 1SS133T-77	
D690	8-719-934-21	DIODE HZS30-1L	
D691	8-719-991-33	DIODE 1SS133T-77	
D705	8-719-991-33	DIODE 1SS133T-77	
D710	8-719-991-33	DIODE 1SS133T-77	
D721	8-719-991-33	DIODE 1SS133T-77	
D722	8-719-991-33	DIODE 1SS133T-77	
D732	8-719-991-33	DIODE 1SS133T-77	
D740	8-719-991-33	DIODE 1SS133T-77	
D750	8-719-991-33	DIODE 1SS133T-77	
D765	8-719-991-33	DIODE 1SS133T-77	
D791	8-719-991-33	DIODE 1SS133T-77	
D801	8-719-933-95	DIODE HZS20-1L	
D802	8-719-072-05	DIODE RBV-602LF-A	
D804	8-719-068-28	DIODE HZ6.8BP-TK	
D805	6-500-522-11	DIODE 10EDB40-TA2B5	
D806	6-500-522-11	DIODE 10EDB40-TA2B5	
D807	6-500-522-11	DIODE 10EDB40-TA2B5	
D808	6-500-522-11	DIODE 10EDB40-TA2B5	
D818	8-719-991-33	DIODE 1SS133T-77	
D896	8-719-043-76	DIODE AK04V0	
		< IC >	
IC401	6-707-362-01	IC BD3451KS	
IC402	8-759-167-88	IC NJM4565D	
IC501	6-700-943-01	IC uPC2581V-S	
IC601	6-700-943-01	IC uPC2581V-S	
IC691	8-759-167-88	IC NJM4565D	
IC701	6-700-943-01	IC uPC2581V-S	
IC801	8-759-071-48	IC TA7807S	
IC802	8-759-071-47	IC TA79007S	
		< JACK >	
J309	1-770-377-21	JACK, PIN 1P (SUB WOOFER AUDIO OUT)	
J400	1-774-411-11	JACK, PIN 6P (MD/TAPE OUT,SA-CD/CD IN, AUX IN)	(DE698/DV10)
J401	1-793-775-12	JACK, PIN 6P (MULTI CH IN FRONT,SURROUND,CENTER,SUB WOOFER)	
J402	1-770-614-11	JACK, PIN 4P (MD/TAPE OUT,SA-CD/CD IN)	(DE598)
J403	1-770-614-11	JACK, PIN 4P (MD/TAPE IN,DVD AUDIO IN)	
J404	1-774-411-11	JACK, PIN 6P (VIDEO 2 AUDIO IN, VIDEO 1 AUDIO OUT/IN)	
		< COIL >	
L601	1-420-872-52	COIL, AIR-CORE	
L651	1-420-872-52	COIL, AIR-CORE	
L701	1-420-872-52	COIL, AIR-CORE	

Ref. No.	Part No.	Description	Remark
L751	1-420-872-52	COIL, AIR-CORE	
		< TRANSISTOR >	
Q501	8-729-119-76	TRANSISTOR 2SA1175-HFE	
Q502	8-729-141-30	TRANSISTOR 2SC3623A-LK	
Q505	8-729-042-09	TRANSISTOR 2SA1038S-RSE-TP	
Q506	8-729-042-09	TRANSISTOR 2SA1038S-RSE-TP	
Q535	8-729-042-09	TRANSISTOR 2SA1038S-RSE-TP	
Q536	8-729-042-09	TRANSISTOR 2SA1038S-RSE-TP	
Q540	8-729-281-53	TRANSISTOR 2SC1815-GR	
Q560	8-729-119-78	TRANSISTOR 2SC2785-HFE	
Q571	8-729-119-76	TRANSISTOR 2SA1175-HFE	
Q572	8-729-141-30	TRANSISTOR 2SC3623A-LK	
Q580	8-729-281-53	TRANSISTOR 2SC1815-GR	
Q601	8-729-119-76	TRANSISTOR 2SA1175-HFE	
Q602	8-729-141-30	TRANSISTOR 2SC3623A-LK	
Q605	8-729-042-09	TRANSISTOR 2SA1038S-RSE-TP	
Q606	8-729-042-09	TRANSISTOR 2SA1038S-RSE-TP	
Q610	8-729-119-78	TRANSISTOR 2SC2785-HFE	
Q640	8-729-281-53	TRANSISTOR 2SC1815-GR	
Q651	8-729-119-76	TRANSISTOR 2SA1175-HFE	
Q652	8-729-141-30	TRANSISTOR 2SC3623A-LK	
Q655	8-729-042-09	TRANSISTOR 2SA1038S-RSE-TP	
Q656	8-729-042-09	TRANSISTOR 2SA1038S-RSE-TP	
Q680	8-729-281-53	TRANSISTOR 2SC1815-GR	
Q691	8-729-281-53	TRANSISTOR 2SC1815-GR	
Q692	8-729-029-40	TRANSISTOR DTA124ESA	
Q701	8-729-119-76	TRANSISTOR 2SA1175-HFE	
Q702	8-729-141-30	TRANSISTOR 2SC3623A-LK	
Q705	8-729-042-09	TRANSISTOR 2SA1038S-RSE-TP	
Q706	8-729-042-09	TRANSISTOR 2SA1038S-RSE-TP	
Q710	8-729-119-78	TRANSISTOR 2SC2785-HFE	
Q722	8-729-140-84	TRANSISTOR 2SC1841-PAFAEA	
Q723	8-729-119-78	TRANSISTOR 2SC2785-HFE	
Q725	8-729-042-09	TRANSISTOR 2SA1038S-RSE-TP	
Q740	8-729-281-53	TRANSISTOR 2SC1815-GR	
Q750	8-729-281-53	TRANSISTOR 2SC1815-GR	
Q751	8-729-119-76	TRANSISTOR 2SA1175-HFE	
Q752	8-729-141-30	TRANSISTOR 2SC3623A-LK	
Q755	8-729-042-09	TRANSISTOR 2SA1038S-RSE-TP	
Q756	8-729-042-09	TRANSISTOR 2SA1038S-RSE-TP	
Q790	8-729-119-78	TRANSISTOR 2SC2785-HFE	
Q793	8-729-119-78	TRANSISTOR 2SC2785-HFE	
Q795	8-729-042-09	TRANSISTOR 2SA1038S-RSE-TP	
Q801	8-729-140-97	TRANSISTOR 2SB734-34	
Q809	8-729-119-78	TRANSISTOR 2SC2785-HFE	
		< RESISTOR >	
R401	1-247-831-00	CARBON 1K 5% 1/4W	(DE698/DV10)
R402	1-247-831-00	CARBON 1K 5% 1/4W	
R404	1-247-831-00	CARBON 1K 5% 1/4W	
R405	1-247-831-00	CARBON 1K 5% 1/4W	
R406	1-247-831-00	CARBON 1K 5% 1/4W	
R407	1-247-831-00	CARBON 1K 5% 1/4W	
R408	1-247-831-00	CARBON 1K 5% 1/4W	
R409	1-247-831-00	CARBON 1K 5% 1/4W	
R428	1-247-831-00	CARBON 1K 5% 1/4W	

Ref. No.	Part No.	Description	Remark
R429	1-247-831-00	CARBON 1K 5% 1/4W	
R431	1-247-831-00	CARBON 1K 5% 1/4W	
R432	1-247-831-00	CARBON 1K 5% 1/4W	
R433	1-247-831-00	CARBON 1K 5% 1/4W	
R434	1-247-831-00	CARBON 1K 5% 1/4W	
R435	1-247-831-00	CARBON 1K 5% 1/4W	
R436	1-247-831-00	CARBON 1K 5% 1/4W	
R451	1-247-831-00	CARBON 1K 5% 1/4W	(DE698/DV10)
R452	1-247-831-00	CARBON 1K 5% 1/4W	
R454	1-247-831-00	CARBON 1K 5% 1/4W	
R455	1-247-831-00	CARBON 1K 5% 1/4W	
R456	1-247-831-00	CARBON 1K 5% 1/4W	
R457	1-247-831-00	CARBON 1K 5% 1/4W	
R458	1-247-831-00	CARBON 1K 5% 1/4W	
R459	1-247-831-00	CARBON 1K 5% 1/4W	
R468	1-247-879-00	CARBON 100K 5% 1/4W	
R469	1-247-831-00	CARBON 1K 5% 1/4W	
R470	1-247-871-00	CARBON 47K 5% 1/4W	
R473	1-249-429-11	CARBON 10K 5% 1/4W	
R474	1-249-429-11	CARBON 10K 5% 1/4W	
R475	1-249-429-11	CARBON 10K 5% 1/4W	
R476	1-249-429-11	CARBON 10K 5% 1/4W	
R480	1-247-871-00	CARBON 47K 5% 1/4W	
R499	1-247-871-00	CARBON 47K 5% 1/4W	
R501	1-247-831-00	CARBON 1K 5% 1/4W	
R502	1-249-439-11	CARBON 68K 5% 1/4W	
R503	1-249-421-11	CARBON 2.2K 5% 1/4W	
R505	1-249-439-11	CARBON 68K 5% 1/4W	
R510	1-249-421-11	CARBON 2.2K 5% 1/4W	
R511	1-249-440-11	CARBON 82K 5% 1/4W	
R513	1-249-414-11	CARBON 560 5% 1/4W	
R514	1-249-399-11	CARBON 33 5% 1/4W	F
R515	1-249-399-11	CARBON 33 5% 1/4W	F
R516	1-234-182-11	ENCAPSULATED COMPONENT 0.22X2 5W	
R517	1-249-393-11	CARBON 10 5% 1/4W	F
R520	1-247-847-00	CARBON 4.7K 5% 1/4W	
R521	1-240-855-81	CARBON 6.2K 5% 1/4W	F
R522	1-249-419-11	CARBON 1.5K 5% 1/4W	
R523	1-247-871-00	CARBON 47K 5% 1/4W	
R524	1-249-431-11	CARBON 15K 5% 1/4W	
R525	1-249-439-11	CARBON 68K 5% 1/4W	
R526	1-234-182-11	ENCAPSULATED COMPONENT 0.22X2 5W	
R530	1-247-847-00	CARBON 4.7K 5% 1/4W	
R531	1-240-855-81	CARBON 6.2K 5% 1/4W	F
R532	1-249-429-11	CARBON 10K 5% 1/4W	
R533	1-247-871-00	CARBON 47K 5% 1/4W	
R534	1-249-431-11	CARBON 15K 5% 1/4W	
R535	1-249-439-11	CARBON 68K 5% 1/4W	
R537	1-249-393-11	CARBON 10 5% 1/4W	F
R540	1-247-863-00	CARBON 22K 5% 1/4W	
R546	1-249-431-11	CARBON 15K 5% 1/4W	
R553	1-249-421-11	CARBON 2.2K 5% 1/4W	
R554	1-249-439-11	CARBON 68K 5% 1/4W	
R555	1-247-847-00	CARBON 4.7K 5% 1/4W	(DE598)
R555	1-247-871-00	CARBON 47K 5% 1/4W	(DE698/DV10)

Ref. No.	Part No.	Description				Remark
R556	1-247-863-00	CARBON	22K	5%	1/4W	(DE698/DV10)
R556	1-247-871-00	CARBON	47K	5%	1/4W	(DE598)
R557	1-249-431-11	CARBON	15K	5%	1/4W	
R561	1-247-831-00	CARBON	1K	5%	1/4W	
R562	1-249-439-11	CARBON	68K	5%	1/4W	
R570	1-249-421-11	CARBON	2.2K	5%	1/4W	
R571	1-249-440-11	CARBON	82K	5%	1/4W	
R572	1-249-419-11	CARBON	1.5K	5%	1/4W	
R573	1-247-871-00	CARBON	47K	5%	1/4W	
R574	1-249-399-11	CARBON	33	5%	1/4W	F
R575	1-249-399-11	CARBON	33	5%	1/4W	F
R576	1-249-414-11	CARBON	560	5%	1/4W	
R580	1-247-863-00	CARBON	22K	5%	1/4W	
R585	1-247-847-00	CARBON	4.7K	5%	1/4W	(DE598)
R585	1-247-871-00	CARBON	47K	5%	1/4W	(DE698/DV10)
R586	1-247-863-00	CARBON	22K	5%	1/4W	(DE698/DV10)
R586	1-247-871-00	CARBON	47K	5%	1/4W	(DE598)
R587	1-249-431-11	CARBON	15K	5%	1/4W	
R588	1-249-431-11	CARBON	15K	5%	1/4W	
R601	1-247-831-00	CARBON	1K	5%	1/4W	
R602	1-249-439-11	CARBON	68K	5%	1/4W	
R603	1-249-421-11	CARBON	2.2K	5%	1/4W	
R604	1-249-439-11	CARBON	68K	5%	1/4W	
R610	1-249-421-11	CARBON	2.2K	5%	1/4W	
R611	1-249-440-11	CARBON	82K	5%	1/4W	
R613	1-249-414-11	CARBON	560	5%	1/4W	
R614	1-249-399-11	CARBON	33	5%	1/4W	F
R615	1-249-399-11	CARBON	33	5%	1/4W	F
R616	1-234-182-11	ENCAPSULATED COMPONENT 0.22X2 5W				
R617	1-249-393-11	CARBON	10	5%	1/4W	F
R618	1-249-389-11	CARBON	4.7	5%	1/4W	F
R620	1-247-847-00	CARBON	4.7K	5%	1/4W	
R621	1-240-855-81	CARBON	6.2K	5%	1/4W	F
R622	1-249-419-11	CARBON	1.5K	5%	1/4W	
R623	1-247-871-00	CARBON	47K	5%	1/4W	
R624	1-249-431-11	CARBON	15K	5%	1/4W	
R625	1-249-439-11	CARBON	68K	5%	1/4W	
R631	1-249-421-11	CARBON	2.2K	5%	1/4W	
R634	1-249-404-00	CARBON	82	5%	1/4W	F
R638	1-249-439-11	CARBON	68K	5%	1/4W	
R640	1-247-863-00	CARBON	22K	5%	1/4W	
R648	1-249-431-11	CARBON	15K	5%	1/4W	
R651	1-247-831-00	CARBON	1K	5%	1/4W	
R652	1-249-439-11	CARBON	68K	5%	1/4W	
R653	1-249-421-11	CARBON	2.2K	5%	1/4W	
R654	1-249-439-11	CARBON	68K	5%	1/4W	
R655	1-247-847-00	CARBON	4.7K	5%	1/4W	(DE598)
R655	1-247-871-00	CARBON	47K	5%	1/4W	(DE698/DV10)
R656	1-247-863-00	CARBON	22K	5%	1/4W	(DE698/DV10)
R656	1-247-871-00	CARBON	47K	5%	1/4W	(DE598)
R657	1-249-431-11	CARBON	15K	5%	1/4W	
R660	1-249-421-11	CARBON	2.2K	5%	1/4W	
R661	1-249-440-11	CARBON	82K	5%	1/4W	
R663	1-249-414-11	CARBON	560	5%	1/4W	
R664	1-249-399-11	CARBON	33	5%	1/4W	F
R665	1-249-399-11	CARBON	33	5%	1/4W	F
R666	1-234-182-11	ENCAPSULATED COMPONENT 0.22X2 5W				
R667	1-249-393-11	CARBON	10	5%	1/4W	F
R668	1-249-389-11	CARBON	4.7	5%	1/4W	F
R669	1-247-847-00	CARBON	4.7K	5%	1/4W	
R671	1-240-855-81	CARBON	6.2K	5%	1/4W	F
R672	1-249-419-11	CARBON	1.5K	5%	1/4W	
R673	1-247-871-00	CARBON	47K	5%	1/4W	
R674	1-249-431-11	CARBON	15K	5%	1/4W	
R675	1-247-847-00	CARBON	4.7K	5%	1/4W	(DE598)
R675	1-247-871-00	CARBON	47K	5%	1/4W	(DE698/DV10)
R676	1-247-863-00	CARBON	22K	5%	1/4W	(DE698/DV10)
R676	1-247-871-00	CARBON	47K	5%	1/4W	(DE598)
R677	1-249-431-11	CARBON	15K	5%	1/4W	
R680	1-247-863-00	CARBON	22K	5%	1/4W	
R681	1-249-431-11	CARBON	15K	5%	1/4W	
R690	1-247-887-00	CARBON	220K	5%	1/4W	
⚠R691	1-215-888-00	METAL OXIDE	220	5%	2W	F
⚠R692	1-215-888-00	METAL OXIDE	220	5%	2W	F
R693	1-249-429-11	CARBON	10K	5%	1/4W	
R694	1-249-429-11	CARBON	10K	5%	1/4W	
R695	1-249-429-11	CARBON	10K	5%	1/4W	
R696	1-247-871-00	CARBON	47K	5%	1/4W	
R698	1-249-429-11	CARBON	10K	5%	1/4W	
R699	1-247-895-00	CARBON	470K	5%	1/4W	
R701	1-247-831-00	CARBON	1K	5%	1/4W	
R702	1-249-439-11	CARBON	68K	5%	1/4W	
R703	1-249-421-11	CARBON	2.2K	5%	1/4W	
R704	1-249-439-11	CARBON	68K	5%	1/4W	
R710	1-249-421-11	CARBON	2.2K	5%	1/4W	
R711	1-249-440-11	CARBON	82K	5%	1/4W	
R713	1-249-414-11	CARBON	560	5%	1/4W	
R714	1-249-399-11	CARBON	33	5%	1/4W	F
R715	1-249-399-11	CARBON	33	5%	1/4W	F
R716	1-234-182-11	ENCAPSULATED COMPONENT 0.22X2 5W				
R717	1-249-393-11	CARBON	10	5%	1/4W	F
R718	1-249-389-11	CARBON	4.7	5%	1/4W	F
R719	1-247-847-00	CARBON	4.7K	5%	1/4W	
R721	1-240-855-81	CARBON	6.2K	5%	1/4W	F
R722	1-249-419-11	CARBON	1.5K	5%	1/4W	
R723	1-247-871-00	CARBON	47K	5%	1/4W	
R724	1-249-431-11	CARBON	15K	5%	1/4W	
R725	1-249-439-11	CARBON	68K	5%	1/4W	
R731	1-249-421-11	CARBON	2.2K	5%	1/4W	
R732	1-249-381-11	CARBON	1	5%	1/4W	F
R733	1-249-381-11	CARBON	1	5%	1/4W	F
R734	1-249-404-00	CARBON	82	5%	1/4W	F
R735	1-249-427-11	CARBON	6.8K	5%	1/4W	
R736	1-247-831-00	CARBON	1K	5%	1/4W	
R737	1-249-436-11	CARBON	39K	5%	1/4W	

Ref. No.	Part No.	Description			Remark
R740	1-247-863-00	CARBON	22K	5%	1/4W
R741	1-249-431-11	CARBON	15K	5%	1/4W
R743	1-249-431-11	CARBON	15K	5%	1/4W
R744	1-249-431-11	CARBON	15K	5%	1/4W
R745	1-247-847-00	CARBON	4.7K	5%	1/4W (DE598)
R745	1-247-871-00	CARBON	47K	5%	1/4W (DE698/DV10)
R746	1-247-863-00	CARBON	22K	5%	1/4W (DE698/DV10)
R746	1-247-871-00	CARBON	47K	5%	1/4W (DE598)
R747	1-249-431-11	CARBON	15K	5%	1/4W
R748	1-249-431-11	CARBON	15K	5%	1/4W
R750	1-247-863-00	CARBON	22K	5%	1/4W
R751	1-247-831-00	CARBON	1K	5%	1/4W
R752	1-249-439-11	CARBON	68K	5%	1/4W
R753	1-249-421-11	CARBON	2.2K	5%	1/4W
R754	1-249-439-11	CARBON	68K	5%	1/4W
R755	1-247-847-00	CARBON	4.7K	5%	1/4W (DE598)
R755	1-247-871-00	CARBON	47K	5%	1/4W (DE698/DV10)
R756	1-247-863-00	CARBON	22K	5%	1/4W (DE698/DV10)
R756	1-247-871-00	CARBON	47K	5%	1/4W (DE598)
R757	1-249-431-11	CARBON	15K	5%	1/4W
R758	1-249-431-11	CARBON	15K	5%	1/4W
R760	1-249-421-11	CARBON	2.2K	5%	1/4W
R761	1-249-440-11	CARBON	82K	5%	1/4W
R763	1-249-414-11	CARBON	560	5%	1/4W
R764	1-249-399-11	CARBON	33	5%	1/4W F
R765	1-249-399-11	CARBON	33	5%	1/4W F
R766	1-234-182-11	ENCAPSULATED COMPONENT 0.22X2 5W			
R767	1-249-393-11	CARBON	10	5%	1/4W F
R768	1-249-389-11	CARBON	4.7	5%	1/4W F
R769	1-247-847-00	CARBON	4.7K	5%	1/4W
R771	1-240-855-81	CARBON	6.2K	5%	1/4W F
R772	1-249-419-11	CARBON	1.5K	5%	1/4W
R773	1-247-871-00	CARBON	47K	5%	1/4W
R775	1-249-439-11	CARBON	68K	5%	1/4W
R778	1-249-431-11	CARBON	15K	5%	1/4W
R780	1-249-429-11	CARBON	10K	5%	1/4W
R791	1-249-421-11	CARBON	2.2K	5%	1/4W
⚠R792	1-215-868-00	METAL OXIDE	680	5%	1W F
R793	1-249-404-00	CARBON	82	5%	1/4W F
⚠R794	1-215-868-00	METAL OXIDE	680	5%	1W F
R802	1-249-409-11	CARBON	220	5%	1/4W F
R803	1-249-389-11	CARBON	4.7	5%	1/4W F
R804	1-249-429-11	CARBON	10K	5%	1/4W
R806	1-247-863-00	CARBON	22K	5%	1/4W
R824	1-249-421-11	CARBON	2.2K	5%	1/4W
R830	1-249-404-00	CARBON	82	5%	1/4W F (CND)
R831	1-249-404-00	CARBON	82	5%	1/4W F
⚠R910	1-240-877-11	FUSIBLE	0.15	5%	1/2W F
RR11	1-249-393-11	CARBON	10	5%	1/4W F (EXCEPT US,CND,E2)
RR12	1-249-393-11	CARBON	10	5%	1/4W F (EXCEPT US,CND,E2)
RR13	1-249-393-11	CARBON	10	5%	1/4W F (EXCEPT US,CND,E2)
RR14	1-249-393-11	CARBON	10	5%	1/4W F (EXCEPT US,CND,E2)
		< RELAY >			
RY560	1-755-267-11	RELAY			
RY601	1-755-170-11	RELAY (12V)			
RY701	1-755-170-11	RELAY (12V)			
RY791	1-755-170-11	RELAY (12V)			
RY801	1-755-013-11	RELAY (EXCEPT CND)			
RY802	1-755-494-11	RELAY (CND)			
RY803	1-755-494-11	RELAY (CND)			
		< TERMINAL BOARD >			
TM601	1-780-216-11	TERMINAL BOARD (8P) (SPEAKERS FRONT A,SURROUND)			
**********					
		OPT3 BOARD (DE698/DV10)			
		**********			
		< CAPACITOR >			
C290	1-127-888-11	CERAMIC	0.1uF	10%	50V
		< CONNECTOR >			
CN202	1-779-978-21	PIN, CONNECTOR 3P			
		< IC >			
IC200	6-600-057-01	IC TORX141PL (VIDEO 3 INPUT DIGITAL(OPT))			
		< COIL >			
L290	1-410-517-11	INDUCTOR	47uH		
		< RESISTOR >			
R290	1-247-807-31	CARBON	100	5%	1/4W
**********					
		POWER BOARD			
		**********			
		< CONNECTOR >			
* CNP102	1-564-518-11	PLUG, CONNECTOR 3P			
		< RESISTOR >			
R129	1-249-421-11	CARBON	2.2K	5%	1/4W
R130	1-247-847-00	CARBON	4.7K	5%	1/4W
		< SWITCH >			
S128	1-771-410-21	SWITCH, TACTILE (SPEAKERS (OFF/A/B/A+B))			
S129	1-771-410-21	SWITCH, TACTILE (DISPLAY)			
S130	1-771-410-21	SWITCH, TACTILE (DIMMER)			
S131	1-771-410-21	SWITCH, TACTILE (I/⏻)			
**********					

Ref. No.	Part No.	Description				Remark
	A-1084-980-A	SB AMP BOARD, COMPLETE (DE698/DV10)				
		**********				
		< CAPACITOR >				
C2561	1-126-963-11	ELECT	4.7uF	20%	50V	
C2562	1-162-282-31	CERAMIC	100PF	10%	50V	
C2563	1-102-978-00	CERAMIC	220PF	5%	50V	
C2564	1-107-616-11	CERAMIC	150PF	5%	500V	
C2565	1-107-583-11	CERAMIC	3PF	0.25PF	500V	
C2566	1-104-658-11	ELECT	100uF	20%	10V	
C2571	1-126-947-11	ELECT	47uF	20%	35V	
C2573	1-162-815-11	CERAMIC	47PF	5%	500V	
C2575	1-162-815-11	CERAMIC	47PF	5%	500V	
C2576	1-127-876-11	CERAMIC	0.01uF	10%	50V	
C2577	1-126-964-11	ELECT	10uF	20%	50V	
C2578	1-162-286-31	CERAMIC	220PF	10%	50V	
C2581	1-136-157-00	FILM	0.022uF	5%	50V	
		< CONNECTOR >				
CN2570	1-785-103-11	PIN, CONNECTOR (3.96mm PITCH) 5P				
CN2571	1-779-799-11	PIN, CONNECTOR 9P				
		< DIODE >				
D2575	8-719-991-33	DIODE 1SS133T-77				
D2576	8-719-991-33	DIODE 1SS133T-77				
		< IC >				
IC2501	8-749-011-16	IC STK350-230				
		< TRANSISTOR >				
Q2575	8-729-042-09	TRANSISTOR 2SA1038S-RSE-TP				
Q2576	8-729-042-09	TRANSISTOR 2SA1038S-RSE-TP				
Q2577	8-729-281-53	TRANSISTOR 2SC1815-GR				
		< RESISTOR >				
R2560	1-249-411-11	CARBON	330	5%	1/4W	
R2561	1-247-831-00	CARBON	1K	5%	1/4W	
R2562	1-249-439-11	CARBON	68K	5%	1/4W	
R2565	1-249-439-11	CARBON	68K	5%	1/4W	
R2566	1-249-421-11	CARBON	2.2K	5%	1/4W	
R2571	1-249-428-11	CARBON	8.2K	5%	1/4W	
R2572	1-247-847-00	CARBON	4.7K	5%	1/4W	
R2574	1-247-831-00	CARBON	1K	5%	1/4W	
R2575	1-249-399-11	CARBON	33	5%	1/4W	F
R2576	1-240-855-81	CARBON	6.2K	5%	1/4W	F
R2577	1-247-847-00	CARBON	4.7K	5%	1/4W	
R2578	1-234-182-11	ENCAPSULATED COMPONENT 0.22X2 5W				
R2579	1-249-419-11	CARBON	1.5K	5%	1/4W	
R2580	1-249-439-11	CARBON	68K	5%	1/4W	
R2581	1-249-393-11	CARBON	10	5%	1/4W	F
R2582	1-249-399-11	CARBON	33	5%	1/4W	F
R2583	1-249-431-11	CARBON	15K	5%	1/4W	
R2584	1-249-431-11	CARBON	15K	5%	1/4W	
R2585	1-247-871-00	CARBON	47K	5%	1/4W	
R2586	1-247-863-00	CARBON	22K	5%	1/4W	
R2587	1-247-871-00	CARBON	47K	5%	1/4W	
R2588	1-247-863-00	CARBON	22K	5%	1/4W	
R2589	1-249-431-11	CARBON	15K	5%	1/4W	
		SPEAKER C/SB BOARD				
		**********				
		< CAPACITOR >				
CC15	1-127-876-11	CERAMIC	0.01uF	10%	50V	
						(DE698:AEP,UK,AUS,AR)
CC16	1-127-876-11	CERAMIC	0.01uF	10%	50V	
						(EXCEPT US,CND,E2)
CC17	1-127-876-11	CERAMIC	0.01uF	10%	50V	
						(EXCEPT US,CND,E2)
		< CONNECTOR >				
* CNP503	1-564-241-11	PIN, CONNECTOR (3.96mm PITCH) 4P				
CNP504	1-564-320-00	PIN, CONNECTOR (3.96mm PITCH) 2P				
						(DE698/DV10)
		< DIODE >				
D510	8-719-991-33	DIODE 1SS133T-77				
D760	8-719-991-33	DIODE 1SS133T-77 (DE698/DV10)				
		< COIL >				
L571	1-420-872-52	COIL, AIR-CORE				
L751	1-420-872-52	COIL, AIR-CORE				
L752	1-420-872-52	COIL, AIR-CORE (DE698/DV10)				
		< TRANSISTOR >				
Q550	8-729-119-78	TRANSISTOR 2SC2785-HFE				
Q760	8-729-119-78	TRANSISTOR 2SC2785-HFE (DE698/DV10)				
		< RESISTOR >				
R531	1-249-421-11	CARBON	2.2K	5%	1/4W	
R534	1-249-404-00	CARBON	82	5%	1/4W	F
R578	1-249-389-11	CARBON	4.7	5%	1/4W	F
R751	1-249-389-11	CARBON	4.7	5%	1/4W	F
R752	1-249-389-11	CARBON	4.7	5%	1/4W	F
						(DE698/DV10)
R753	1-249-421-11	CARBON	2.2K	5%	1/4W	
						(DE698/DV10)
R774	1-249-404-00	CARBON	82	5%	1/4W	F
						(DE698/DV10)
RR15	1-249-393-11	CARBON	10	5%	1/4W	F
						(DE698:AEP,UK,AUS,AR)
RR16	1-249-393-11	CARBON	10	5%	1/4W	F
						(EXCEPT US,CND,E2)
RR17	1-249-393-11	CARBON	10	5%	1/4W	F
						(EXCEPT US,CND,E2)
		< RELAY >				
RY500	1-755-170-11	RELAY (12V) (DE698/DV10)				
RY501	1-755-170-11	RELAY (12V)				
		< TERMINAL BOARD >				
TM501	1-780-215-11	TERMINAL BOARD (4P) (SPEAKERS				
		SURROUND BACK,CENTER) (DE598)				
TM501	1-780-215-11	TERMINAL BOARD (4P) (SPEAKERS				
		SURROUND BACK L,CENTER) (DE698/DV10)				

Ref. No.	Part No.	Description	Remark
TM502	1-780-217-11	TERMINAL BOARD (2P) (SPEAKERS SURROUND BACK R) (DE698/DV10)	
**********			
		SPEAKER B (P) BOARD (DE598)	
		**********	
		< CAPACITOR >	
CC30	1-127-876-11	CERAMIC 0.01uF 10% 50V	(DE598:EXCEPT US,CND,E2)
CC31	1-127-876-11	CERAMIC 0.01uF 10% 50V	(DE598:EXCEPT US,CND,E2)
		< CONNECTOR >	
CNP610	1-785-102-11	PIN, CONNECTOR (3.96mm PITCH) 4P (DE598)	
CNP611	1-779-978-11	PIN, CONNECTOR 3P (DE598)	
		< DIODE >	
D810	8-719-991-33	DIODE 1SS133T-77 (DE598)	
		< TRANSISTOR >	
Q810	8-729-119-78	TRANSISTOR 2SC2785-HFE (DE598)	
		< RESISTOR >	
R810	1-249-404-00	CARBON 82 5% 1/4W F	(DE598)
R811	1-249-421-11	CARBON 2.2K 5% 1/4W	(DE598)
RR30	1-249-393-11	CARBON 10 5% 1/4W F	(DE598:EXCEPT US,CND,E2)
RR31	1-249-393-11	CARBON 10 5% 1/4W F	(DE598:EXCEPT US,CND,E2)
		< RELAY >	
RY610	1-755-170-11	RELAY (12V) (DE598)	
		< TERMINAL BOARD >	
* TM610	1-537-240-21	TERMINAL BOARD (CHECKER PIN) (4P) (SPEAKERS FRONT B) (DE598)	
**********			
		SPEAKER B (S) BOARD (DE698/DV10)	
		**********	
		< CAPACITOR >	
CC20	1-127-876-11	CERAMIC 0.01uF 10% 50V	(DE698:AEP,UK,AUS,AR)
CC21	1-127-876-11	CERAMIC 0.01uF 10% 50V	(DE698:AEP,UK,AUS,AR)
		< CONNECTOR >	
CNP600	1-785-102-11	PIN, CONNECTOR (3.96mm PITCH) 4P	(DE698/DV10)
CNP601	1-779-978-11	PIN, CONNECTOR 3P (DE698/DV10)	
		< DIODE >	
D800	8-719-991-33	DIODE 1SS133T-77 (DE698/DV10)	
		< TRANSISTOR >	
Q800	8-729-119-78	TRANSISTOR 2SC2785-HFE (DE698/DV10)	
		< RESISTOR >	
R800	1-249-404-00	CARBON 82 5% 1/4W F	(DE698/DV10)
R812	1-249-421-11	CARBON 2.2K 5% 1/4W	(DE698/DV10)
RR20	1-249-393-11	CARBON 10 5% 1/4W F	(DE698:AEP,UK,AUS,AR)
RR21	1-249-393-11	CARBON 10 5% 1/4W F	(DE698:AEP,UK,AUS,AR)
		< RELAY >	
RY600	1-755-170-11	RELAY (12V) (DE698/DV10)	
		< TERMINAL BOARD >	
TM600	1-780-215-11	TERMINAL BOARD (4P) (SPEAKERS FRONT B)	(DE698/DV10)
**********			
	A-1084-334-A	STANDBY BOARD, COMPLETE (DE598:US,CND)	
	A-1084-405-A	STANDBY BOARD, COMPLETE	(DE598:AEP,UK,AUS,AR,KR/DE698:AR)
	A-1084-703-A	STANDBY BOARD, COMPLETE (DE598:TW)	
	A-1084-969-A	STANDBY BOARD, COMPLETE	(DE698:US,CND/DV10)
	A-1084-975-A	STANDBY BOARD, COMPLETE (DE598:E2)	
	A-1085-098-A	STANDBY BOARD, COMPLETE (DE698:AEP,UK)	
	A-1085-210-A	STANDBY BOARD, COMPLETE (DE698:AUS)	
	A-1085-251-A	STANDBY BOARD, COMPLETE (DE698:E2)	
		**********	
	1-533-217-41	HOLDER, FUSE	
		< CAPACITOR >	
C913	1-127-888-11	CERAMIC 0.1uF 10% 50V	
C914	1-127-888-11	CERAMIC 0.1uF 10% 50V	
C915	1-126-943-11	ELECT 2200uF 20% 25V	
C916	1-126-942-61	ELECT 1000uF 20% 25V	
C920	1-127-888-11	CERAMIC 0.1uF 10% 50V	
C921	1-127-888-11	CERAMIC 0.1uF 10% 50V	
C922	1-127-888-11	CERAMIC 0.1uF 10% 50V	
C924	1-126-960-11	ELECT 1uF 20% 50V	
C950	1-126-936-11	ELECT 3300uF 20% 16V	
		< CONNECTOR >	
CNP801	1-784-922-11	PIN, CONNECTOR 5P	
CNP804	1-564-506-11	PLUG, CONNECTOR 3P	
CNP901	1-564-321-00	PIN, CONNECTOR (3.96mm PITCH) 2P	
CNP902	1-794-577-21	PIN, CONNECTOR (POWER) 2P	
CNP903	1-784-922-11	PIN, CONNECTOR 5P	
CNP906	1-568-106-11	PIN, CONNECTOR (3.96mm PITCH) 4P (E2)	
		< DIODE >	
D901	8-719-991-33	DIODE 1SS133T-77	
D910	6-500-522-11	DIODE 10EDB40-TA2B5	
D911	6-500-522-11	DIODE 10EDB40-TA2B5	
D912	6-500-522-11	DIODE 10EDB40-TA2B5	

Ref. No.	Part No.	Description			Remark
D913	6-500-522-11	DIODE 10EDB40-TA2B5			
D914	8-719-991-33	DIODE 1SS133T-77			
D915	8-719-991-33	DIODE 1SS133T-77			
D920	6-500-522-11	DIODE 10EDB40-TA2B5			
D921	6-500-522-11	DIODE 10EDB40-TA2B5			
D922	6-500-522-11	DIODE 10EDB40-TA2B5			
D923	6-500-522-11	DIODE 10EDB40-TA2B5			
		< GROUND TERMINAL >			
G901	1-537-738-21	TERMINAL, GROUND			
		< AC OUTLET >			
⚠J911	1-251-417-11	OUTLET, AC (1P) (AC OUTLET) (DE698:AUS)			
⚠J911	1-785-285-11	OUTLET, AC (1P) (AC OUTLET) (DE698:AEP,UK)			
⚠J911	1-785-834-11	OUTLET, AC (1P) (AC OUTLET) (DE698:US,CND,E2/DV10)			
		< TRANSISTOR >			
Q901	8-729-119-78	TRANSISTOR 2SC2785-HFE			
Q921	8-729-119-78	TRANSISTOR 2SC2785-HFE			
		< RESISTOR >			
⚠R810	1-243-634-11	FUSIBLE	0.22	5% 1/2W F	
⚠R811	1-243-634-11	FUSIBLE	0.22	5% 1/2W F	
⚠R901	1-219-237-11	SOLID	3.3M	20% 1/2W F (US,CND)	
R902	1-247-871-00	CARBON	47K	5% 1/4W	
R903	1-249-421-11	CARBON	2.2K	5% 1/4W	
R904	1-249-381-11	CARBON	1	5% 1/4W F	
R921	1-247-871-00	CARBON	47K	5% 1/4W	
R922	1-247-863-00	CARBON	22K	5% 1/4W	
R923	1-249-429-11	CARBON	10K	5% 1/4W	
		< RELAY >			
⚠RY901	1-755-541-11	RELAY			
		< TRANSFORMER >			
⚠T902	1-443-516-11	TRANSFORMER, POWER (US,CND)			
⚠T902	1-443-517-11	TRANSFORMER, POWER (AEP,UK,AUS,AR,KR)			
⚠T902	1-443-519-11	TRANSFORMER, POWER (TW)			
⚠T902	1-443-520-11	TRANSFORMER, POWER (E2)			
**********					
	A-1084-978-A	S-VIDEO BOARD, COMPLETE (DE698)			
	A-1098-467-A	S-VIDEO BOARD, COMPLETE (DV10)			
		**********			
		< CAPACITOR >			
C247	1-127-888-11	CERAMIC	0.1uF	10% 50V (DE698)	
C248	1-126-916-11	ELECT	1000uF	20% 6.3V (DE698)	
C249	1-126-960-11	ELECT	1uF	20% 50V (DE698)	
C250	1-104-658-11	ELECT	100uF	20% 10V (DE698)	
C251	1-126-947-11	ELECT	47uF	20% 35V (DE698/DV10)	

Ref. No.	Part No.	Description			Remark
C252	1-127-888-11	CERAMIC	0.1uF	10% 50V (DE698/DV10)	
C253	1-127-888-11	CERAMIC	0.1uF	10% 50V (DE698/DV10)	
C254	1-126-947-11	ELECT	47uF	20% 35V (DE698/DV10)	
C255	1-127-888-11	CERAMIC	0.1uF	10% 50V (DE698/DV10)	
C256	1-127-888-11	CERAMIC	0.1uF	10% 50V (DE698/DV10)	
C257	1-128-817-11	CERAMIC	470PF	5% 50V (DE698/DV10)	
C258	1-128-805-11	CERAMIC	47PF	5% 50V (DE698/DV10)	
C259	1-128-805-11	CERAMIC	47PF	5% 50V (DE698/DV10)	
C260	1-126-964-11	ELECT	10uF	20% 50V (DE698/DV10)	
C261	1-127-888-11	CERAMIC	0.1uF	10% 50V (DE698/DV10)	
C262	1-126-964-11	ELECT	10uF	20% 50V (DE698/DV10)	
C263	1-127-888-11	CERAMIC	0.1uF	10% 50V (DE698/DV10)	
C265	1-128-805-11	CERAMIC	47PF	5% 50V (DE698/DV10)	
C266	1-128-805-11	CERAMIC	47PF	5% 50V (DE698/DV10)	
C267	1-128-817-11	CERAMIC	470PF	5% 50V (DE698/DV10)	
C268	1-126-964-11	ELECT	10uF	20% 50V (DE698/DV10)	
C269	1-127-888-11	CERAMIC	0.1uF	10% 50V (DE698/DV10)	
C275	1-128-817-11	CERAMIC	470PF	5% 50V (DE698/DV10)	
		< CONNECTOR >			
CNS252	1-568-442-11	SOCKET, CONNECTOR 9P (DE698/DV10)			
		< DIODE >			
D251	8-719-991-33	DIODE 1SS133T-77 (DE698/DV10)			
D252	8-719-991-33	DIODE 1SS133T-77 (DE698/DV10)			
D253	8-719-991-33	DIODE 1SS133T-77 (DE698)			
D254	8-719-991-33	DIODE 1SS133T-77 (DE698)			
		< IC >			
IC251	6-701-890-01	IC NJM2595D (DE698/DV10)			
IC252	6-701-890-01	IC NJM2595D (DE698/DV10)			
IC253	8-759-822-05	IC LA7213 (DE698)			
		< CONNECTOR >			
J251	1-537-943-11	CONNECTOR (DIN) 1P (MONITOR S-VIDEO OUT) (DE698/DV10)			
J252	1-794-937-11	CONNECTOR (DIN) 2P (DVD S-VIDEO IN, VIDEO 2 S-VIDEO IN) (DE698/DV10)			
J253	1-794-937-11	CONNECTOR (DIN) 2P (VIDEO 1 S-VIDEO OUT/IN) (DE698/DV10)			
		< TRANSISTOR >			
Q250	8-729-029-66	TRANSISTOR DTC114ESA (DE698)			

Ref. No.	Part No.	Description			Remark
Q251	8-729-201-53	TRANSISTOR 2SA1015-GR (DE698)			
		< RESISTOR >			
R206	1-247-804-11	CARBON	75	5%	1/4W (DE698/DV10)
R251	1-247-804-11	CARBON	75	5%	1/4W (DE698/DV10)
R252	1-247-804-11	CARBON	75	5%	1/4W (DE698/DV10)
R253	1-247-804-11	CARBON	75	5%	1/4W (DE698/DV10)
R254	1-247-804-11	CARBON	75	5%	1/4W (DE698/DV10)
R255	1-247-804-11	CARBON	75	5%	1/4W (DE698/DV10)
R257	1-247-804-11	CARBON	75	5%	1/4W (DE698/DV10)
R258	1-247-804-11	CARBON	75	5%	1/4W (DE698/DV10)
R259	1-247-804-11	CARBON	75	5%	1/4W (DE698/DV10)
R260	1-247-804-11	CARBON	75	5%	1/4W (DE698/DV10)
R261	1-249-429-11	CARBON	10K	5%	1/4W (DE698)
R262	1-249-421-11	CARBON	2.2K	5%	1/4W (DE698)
R263	1-249-411-11	CARBON	330	5%	1/4W (DE698)
R264	1-247-883-00	CARBON	150K	5%	1/4W (DE698)
		< RELAY >			
RY250	1-755-184-11	RELAY (DE698)			
**********					
	A-1084-974-A	S-VIDEO UP CONVERT BOARD, COMPLETE			(DE698:US,CND)
	A-1085-099-A	S-VIDEO UP CONVERT BOARD, COMPLETE			(DE698:AEP,UK,AUS)
	A-1097-712-A	S-VIDEO UP CONVERT BOARD, COMPLETE			(DE698:E2,AR)
		**********			
		< CAPACITOR >			
C341	1-162-199-31	CERAMIC	10PF	5%	50V (DE698:US,CND,E2,AR)
C351	1-162-211-31	CERAMIC	33PF	5%	50V (DE698:US,CND,E2,AR)
C352	1-127-888-11	CERAMIC	0.1uF	10%	50V (DE698)
C353	1-104-658-11	ELECT	100uF	20%	10V (DE698)
C354	1-127-876-11	CERAMIC	0.01uF	10%	50V (DE698)
C355	1-126-959-11	ELECT	0.47uF	20%	50V (DE698)
C356	1-127-876-11	CERAMIC	0.01uF	10%	50V (DE698)
C357	1-127-876-11	CERAMIC	0.01uF	10%	50V (DE698)
C358	1-162-201-31	CERAMIC	12PF	5%	50V (DE698)
C362	1-126-925-11	ELECT	470uF	20%	10V (DE698)
C363	1-128-801-11	CERAMIC	22PF	5%	50V (DE698)
C364	1-162-201-31	CERAMIC	12PF	5%	50V (DE698)
C365	1-126-947-11	ELECT	47uF	20%	35V (DE698)
C366	1-127-888-11	CERAMIC	0.1uF	10%	50V (DE698)
C367	1-127-876-11	CERAMIC	0.01uF	10%	50V (DE698)
C368	1-126-963-11	ELECT	4.7uF	20%	50V (DE698)
C369	1-130-495-00	MYLAR	0.1uF	5%	50V (DE698)
C371	1-128-801-11	CERAMIC	22PF	5%	50V (DE698)
C372	1-162-201-31	CERAMIC	12PF	5%	50V (DE698)
C373	1-128-801-11	CERAMIC	22PF	5%	50V (DE698)
C374	1-126-925-11	ELECT	470uF	20%	10V (DE698)
C375	1-126-965-11	ELECT	22uF	20%	50V (DE698)
C376	1-126-947-11	ELECT	47uF	20%	35V (DE698)
C377	1-127-888-11	CERAMIC	0.1uF	10%	50V (DE698)
C378	1-127-888-11	CERAMIC	0.1uF	10%	50V (DE698)
C379	1-128-812-11	CERAMIC	180PF	5%	50V (DE698)
C380	1-127-876-11	CERAMIC	0.01uF	10%	50V (DE698)
C381	1-127-876-11	CERAMIC	0.01uF	10%	50V (DE698)
C382	1-127-888-11	CERAMIC	0.1uF	10%	50V (DE698)
C383	1-104-658-11	ELECT	100uF	20%	10V (DE698)
C384	1-127-888-11	CERAMIC	0.1uF	10%	50V (DE698)
C385	1-127-876-11	CERAMIC	0.01uF	10%	50V (DE698)
C386	1-104-658-11	ELECT	100uF	20%	10V (DE698)
C387	1-127-876-11	CERAMIC	0.01uF	10%	50V (DE698)
C388	1-127-876-11	CERAMIC	0.01uF	10%	50V (DE698)
C389	1-127-888-11	CERAMIC	0.1uF	10%	50V (DE698)
C390	1-104-658-11	ELECT	100uF	20%	10V (DE698)
C392	1-162-199-31	CERAMIC	10PF	5%	50V (DE698:AEP,UK,AUS)
C393	1-128-802-11	CERAMIC	27PF	5%	50V (DE698:AEP,UK,AUS)
C394	1-126-947-11	ELECT	47uF	20%	35V (DE698)

Ref. No.	Part No.	Description			Remark
C395	1-127-888-11	CERAMIC	0.1uF	10%	50V (DE698)
C397	1-127-888-11	CERAMIC	0.1uF	10%	50V (DE698)
		< CONNECTOR >			
CNS351	1-568-442-11	SOCKET, CONNECTOR 9P (DE698)			
		< TRIMMER CAPACITOR >			
CT380	1-141-442-91	CAP, CERAMIC TRIMMER 20PF			(DE698:US,CND,E2,AR)
CT381	1-141-442-91	CAP, CERAMIC TRIMMER 20PF			(DE698:AEP,UK,AUS)
		< FERRITE BEAD >			
FB353	1-412-911-11	INDUCTOR, FERRITE BEAD (DE698)			
FB354	1-412-911-11	INDUCTOR, FERRITE BEAD (DE698)			
FB355	1-412-911-11	INDUCTOR, FERRITE BEAD (DE698)			
		< IC >			
IC370	6-701-597-01	IC TC90A69N (DE698)			
IC371	8-759-917-18	IC SN74HCU04AN (DE698)			
IC372	6-803-031-01	IC NJM2268D (DE698)			
IC373	8-759-232-01	IC TC74HC00AP (DE698:AEP,UK,AUS)			
		< COIL >			
L370	1-410-514-11	INDUCTOR	27uH (DE698)		
L371	1-410-514-11	INDUCTOR	27uH (DE698)		
L372	1-414-189-31	INDUCTOR	100uH (DE698)		
L373	1-414-189-31	INDUCTOR	100uH (DE698)		
L374	1-410-514-11	INDUCTOR	27uH (DE698)		
L376	1-414-189-31	INDUCTOR	100uH (DE698)		
L377	1-414-189-31	INDUCTOR	100uH (DE698)		
		< TRANSISTOR >			
Q371	8-729-119-78	TRANSISTOR	2SC2785-HFE (DE698)		
Q372	8-729-119-78	TRANSISTOR	2SC2785-HFE (DE698)		
Q373	8-729-119-78	TRANSISTOR	2SC2785-HFE (DE698)		
		< RESISTOR >			
R358	1-247-831-00	CARBON	1K	5%	1/4W (DE698)
R359	1-247-831-00	CARBON	1K	5%	1/4W (DE698)
R363	1-247-903-00	CARBON	1M	5%	1/4W (DE698)
R365	1-247-807-31	CARBON	100	5%	1/4W (DE698)
R366	1-247-807-31	CARBON	100	5%	1/4W (DE698)
R367	1-249-429-11	CARBON	10K	5%	1/4W (DE698)
R368	1-247-843-11	CARBON	3.3K	5%	1/4W (DE698)
R369	1-247-843-11	CARBON	3.3K	5%	1/4W (DE698)
R373	1-249-416-11	CARBON	820	5%	1/4W (DE698)
R374	1-247-903-00	CARBON	1M	5%	1/4W (DE698)

Ref. No.	Part No.	Description			Remark
R375	1-249-424-11	CARBON	3.9K	5%	1/4W (DE698)
R376	1-247-831-00	CARBON	1K	5%	1/4W (DE698)
R377	1-249-416-11	CARBON	820	5%	1/4W (DE698)
R378	1-249-416-11	CARBON	820	5%	1/4W (DE698)
R379	1-249-416-11	CARBON	820	5%	1/4W (DE698)
R382	1-249-418-11	CARBON	1.2K	5%	1/4W (DE698)
R383	1-249-420-11	CARBON	1.8K	5%	1/4W (DE698)
R384	1-249-424-11	CARBON	3.9K	5%	1/4W (DE698)
R385	1-249-416-11	CARBON	820	5%	1/4W (DE698)
R386	1-247-807-31	CARBON	100	5%	1/4W (DE698)
R387	1-247-903-00	CARBON	1M	5%	1/4W (DE698:AEP,UK,AUS)
R388	1-247-903-00	CARBON	1M	5%	1/4W (DE698:US,CND,E2,AR)
R389	1-249-411-11	CARBON	330	5%	1/4W (DE698:US,CND,E2,AR)
R390	1-247-807-31	CARBON	100	5%	1/4W (DE698:US,CND,E2,AR)
R391	1-247-807-31	CARBON	100	5%	1/4W (DE698:AEP,UK,AUS)
R392	1-249-411-11	CARBON	330	5%	1/4W (DE698:AEP,UK,AUS)
R393	1-249-430-11	CARBON	12K	5%	1/4W (DE698)
R394	1-249-430-11	CARBON	12K	5%	1/4W (DE698)
		< VIBRATOR >			
X370	1-781-134-21	VIBRATOR, CRYSTAL (4.43MHz)			(DE698:AEP,UK,AUS)
X371	1-781-342-21	OSCILLATOR, CRYSTAL (3.58MHz)			(DE698:US,CND,E2,AR)

****

		TUNING BOARD				
		**********				
		< CONNECTOR >				
*	CNP104	1-564-517-11	PLUG, CONNECTOR 2P			
		< RESISTOR >				
	R149	1-247-831-00	CARBON	1K	5%	1/4W
	R150	1-249-419-11	CARBON	1.5K	5%	1/4W
	R151	1-249-421-11	CARBON	2.2K	5%	1/4W
	R152	1-247-847-00	CARBON	4.7K	5%	1/4W
	R153	1-249-429-11	CARBON	10K	5%	1/4W
		< SWITCH >				
	S148	1-771-410-21	SWITCH, TACTILE (TUNING –)			
	S149	1-771-410-21	SWITCH, TACTILE (FM MODE)			
	S150	1-771-410-21	SWITCH, TACTILE (MEMORY)			
	S151	1-771-410-21	SWITCH, TACTILE (PRESET TUNING –)			

Ref. No.	Part No.	Description	Remark
S152	1-771-410-21	SWITCH, TACTILE (PRESET TUNING +)	
S153	1-771-410-21	SWITCH, TACTILE (TUNING +)	
**********			
	A-1084-344-A	VIDEO BOARD, COMPLETE	(DE598:EXCEPT AEP,UK)
	A-1084-408-A	VIDEO BOARD, COMPLETE (DE598:AEP,UK)	
	A-1084-442-A	VIDEO BOARD, COMPLETE (DE698)	
	A-1097-367-A	VIDEO BOARD, COMPLETE (DV10)	
	**********		
		< CAPACITOR >	
C200	1-128-805-11	CERAMIC 47PF 5% 50V	
C201	1-128-805-11	CERAMIC 47PF 5% 50V	
C206	1-126-964-11	ELECT 10uF 20% 50V	
C207	1-126-964-11	ELECT 10uF 20% 50V	
C208	1-126-964-11	ELECT 10uF 20% 50V	
C209	1-126-964-11	ELECT 10uF 20% 50V	
C210	1-126-964-11	ELECT 10uF 20% 50V	
C213	1-126-923-11	ELECT 220uF 20% 10V	
C214	1-127-888-11	CERAMIC 0.1uF 10% 50V	
C215	1-127-888-11	CERAMIC 0.1uF 10% 50V	
C220	1-126-947-11	ELECT 47uF 20% 35V	
C221	1-126-923-11	ELECT 220uF 20% 10V	
C223	1-127-888-11	CERAMIC 0.1uF 10% 50V	
C224	1-127-888-11	CERAMIC 0.1uF 10% 50V	
C308	1-126-964-11	ELECT 10uF 20% 50V	(EXCEPT DE598:AEP,UK)
C309	1-126-964-11	ELECT 10uF 20% 50V	(EXCEPT DE598:AEP,UK)
C310	1-126-964-11	ELECT 10uF 20% 50V	(EXCEPT DE598:AEP,UK)
C311	1-126-964-11	ELECT 10uF 20% 50V	(EXCEPT DE598:AEP,UK)
C312	1-126-964-11	ELECT 10uF 20% 50V	(EXCEPT DE598:AEP,UK)
C313	1-126-964-11	ELECT 10uF 20% 50V	(EXCEPT DE598:AEP,UK)
C314	1-127-868-11	CERAMIC 0.0022uF 10% 50V	
C315	1-127-868-11	CERAMIC 0.0022uF 10% 50V	(EXCEPT DE598:AEP,UK)
C316	1-127-868-11	CERAMIC 0.0022uF 10% 50V	
C317	1-126-947-11	ELECT 47uF 20% 35V	(EXCEPT DE598:AEP,UK)
C330	1-127-888-11	CERAMIC 0.1uF 10% 50V	(EXCEPT DE598:AEP,UK)
C331	1-127-888-11	CERAMIC 0.1uF 10% 50V	(EXCEPT DE598:AEP,UK)
C338	1-126-947-11	ELECT 47uF 20% 35V	(EXCEPT DE598:AEP,UK)
		< CONNECTOR >	
* CNP202	1-564-705-11	PIN, CONNECTOR (SMALL TYPE) 3P (DE598)	
* CNP202	1-564-708-11	PIN, CONNECTOR (SMALL TYPE) 6P	(DE698/DV10)
CNP203	1-691-765-11	PLUG (MICRO CONNECTOR) 3P	
CNS201	1-568-442-11	SOCKET, CONNECTOR 9P (DE698/DV10)	
CNS202	1-568-442-11	SOCKET, CONNECTOR 9P (DE698)	
CNS250	1-568-443-11	SOCKET, CONNECTOR 13P	

Ref. No.	Part No.	Description	Remark
		< DIODE >	
D203	8-719-991-33	DIODE 1SS133T-77	
D204	8-719-991-33	DIODE 1SS133T-77	
		< IC >	
IC203	6-701-890-01	IC NJM2595D	
IC304	6-707-363-01	IC NJM2586L (EXCEPT DE598:AEP,UK)	
IC804	8-759-245-79	IC TA79005S	
IC807	8-759-231-53	IC TA7805S	
		< JACK >	
J200	1-794-978-11	JACK, PIN 3P (DVD VIDEO IN,	VIDEO 2 VIDEO IN,VIDEO 1 VIDEO OUT)
J201	1-815-043-11	JACK, PIN 2P (VIDEO 1 VIDEO IN,	MONITOR VIDEO OUT)
J301	1-816-592-11	JACK, PIN 9P (COMPONENT VIDEO	DVD IN (ASSIGNABLE), VIDEO 2 IN (ASSIGNABLE),MONITOR OUT) (EXCEPT DE598:AEP,UK)
		< RESISTOR >	
R200	1-247-804-11	CARBON 75 5% 1/4W	
R201	1-247-804-11	CARBON 75 5% 1/4W	
R218	1-247-804-11	CARBON 75 5% 1/4W	
R219	1-247-804-11	CARBON 75 5% 1/4W	
R220	1-247-804-11	CARBON 75 5% 1/4W	
R221	1-247-804-11	CARBON 75 5% 1/4W	
R301	1-247-804-11	CARBON 75 5% 1/4W	(EXCEPT DE598:AEP,UK)
R302	1-247-804-11	CARBON 75 5% 1/4W	(EXCEPT DE598:AEP,UK)
R303	1-247-804-11	CARBON 75 5% 1/4W	(EXCEPT DE598:AEP,UK)
R304	1-247-804-11	CARBON 75 5% 1/4W	(EXCEPT DE598:AEP,UK)
R305	1-247-804-11	CARBON 75 5% 1/4W	(EXCEPT DE598:AEP,UK)
R306	1-247-804-11	CARBON 75 5% 1/4W	(EXCEPT DE598:AEP,UK)
R307	1-247-804-11	CARBON 75 5% 1/4W	(EXCEPT DE598:AEP,UK)
R308	1-247-804-11	CARBON 75 5% 1/4W	(EXCEPT DE598:AEP,UK)
R309	1-247-804-11	CARBON 75 5% 1/4W	(EXCEPT DE598:AEP,UK)
R310	1-247-831-00	CARBON 1K 5% 1/4W	(EXCEPT DE598:AEP,UK)
R311	1-247-831-00	CARBON 1K 5% 1/4W	(EXCEPT DE598:AEP,UK)
R312	1-247-831-00	CARBON 1K 5% 1/4W	(EXCEPT DE598:AEP,UK)
R313	1-247-863-00	CARBON 22K 5% 1/4W	(EXCEPT DE598:AEP,UK)
**********			

Ref. No.	Part No.	Description			Remark
		VIDEO3 BOARD (DE598)			
		**********			
		< CAPACITOR >			
C293	1-127-888-11	CERAMIC	0.1uF	10%	50V
C294	1-127-888-11	CERAMIC	0.1uF	10%	50V
C298	1-162-286-31	CERAMIC	220PF	10%	50V
C299	1-162-286-31	CERAMIC	220PF	10%	50V
		< CONNECTOR >			
CN201	1-784-922-11	PIN, CONNECTOR 5P			
		< JACK >			
J298	1-819-187-11	JACK, PIN 3P (VIDEO 3 INPUT			VIDEO,AUDIO L/R)
		< RESISTOR >			
R298	1-247-831-00	CARBON	1K	5%	1/4W
R299	1-247-831-00	CARBON	1K	5%	1/4W
		< LEAD WIRE >			
* W290	1-690-880-31	LEAD (WITH CONNECTOR)			
**********					
		VIDEO3 (DE61) BOARD (DE698/DV10)			
		**********			
		< CAPACITOR >			
C293	1-127-888-11	CERAMIC	0.1uF	10%	50V
C294	1-127-888-11	CERAMIC	0.1uF	10%	50V
C298	1-162-286-31	CERAMIC	220PF	10%	50V
C299	1-162-286-31	CERAMIC	220PF	10%	50V
		< CONNECTOR >			
CN201	1-784-922-21	PIN, CONNECTOR 5P			
		< JACK >			
J298	1-819-187-11	JACK, PIN 3P (VIDEO 3 INPUT			VIDEO,AUDIO L/R)
		< RESISTOR >			
R298	1-247-831-00	CARBON	1K	5%	1/4W
R299	1-247-831-00	CARBON	1K	5%	1/4W
		< LEAD WIRE >			
* W290	1-690-880-31	LEAD (WITH CONNECTOR)			
**********					

Ref. No.	Part No.	Description	Remark
		MISCELLANEOUS	
		**********	
102	1-828-963-11	WIRE (FLAT TYPE) (11 CORE) (EXCEPT AEP,UK)	
102	1-828-980-11	WIRE (FLAT TYPE) (15 CORE) (AEP,UK)	
103	1-828-972-11	WIRE (FLAT TYPE) (13 CORE)	
105	1-828-954-11	WIRE (FLAT TYPE) (9 CORE) (DE698)	
108	1-828-954-11	WIRE (FLAT TYPE) (9 CORE) (DE698/DV10)	
⚠110	1-769-079-23	CORD, POWER (KR)	
⚠110	1-777-071-23	CORD, POWER (E2)	
⚠110	1-777-071-83	CORD, POWER (AEP,UK)	
⚠110	1-783-820-11	CORD, POWER (US,CND)	
⚠110	1-783-941-12	CORD, POWER (AR)	
⚠110	1-827-295-22	CORD, POWER (AUS)	
⚠110	1-827-597-41	CORD, POWER (TW)	
⚠F901	1-532-464-33	FUSE (T2.5AL/250V) (AEP,UK,AUS,AR,KR)	
⚠F901	1-532-465-33	FUSE (3.15A/125V) (E2)	
⚠F901	1-532-504-33	FUSE (4A/250V) (TW)	
⚠F901	1-533-454-12	FUSE, GLASS TUBE (DIA. 5) (6.3A/125V)	(US,CND)
⚠F902	1-532-464-33	FUSE (T2.5AL/250V) (DE698:AEP,UK,E2,AUS)	
⚠F902	1-533-453-12	FUSE, GLASS TUBE (DIA. 5) (5A/125V)	(DE698:US,CND/DV10)
Q503	6-702-390-01	TRANSISTOR MN2488-OPY-MK	
Q504	6-702-391-01	TRANSISTOR MP1620-OPY-MK	
Q533	6-702-390-01	TRANSISTOR MN2488-OPY-MK	
Q534	6-702-391-01	TRANSISTOR MP1620-OPY-MK	
Q572	8-729-026-08	TRANSISTOR 2SC4495 (DE698/DV10)	
Q603	6-702-390-01	TRANSISTOR MN2488-OPY-MK	
Q604	6-702-391-01	TRANSISTOR MP1620-OPY-MK	
Q653	6-702-390-01	TRANSISTOR MN2488-OPY-MK	
Q654	6-702-391-01	TRANSISTOR MP1620-OPY-MK	
Q703	6-702-390-01	TRANSISTOR MN2488-OPY-MK	
Q704	6-702-391-01	TRANSISTOR MP1620-OPY-MK	
Q753	6-702-390-01	TRANSISTOR MN2488-OPY-MK	
Q754	6-702-391-01	TRANSISTOR MP1620-OPY-MK	
Q2573	6-702-390-01	TRANSISTOR MN2488-OPY-MK (DE698/DV10)	
Q2754	6-702-391-01	TRANSISTOR MP1620-OPY-MK (DE698/DV10)	
⚠T901	1-439-550-21	TRANSFORMER, POWER (AEP,UK,AUS,AR,KR)	
⚠T901	1-439-552-21	TRANSFORMER, POWER (TW)	
⚠T901	1-439-553-21	TRANSFORMER, POWER (E2)	
⚠T901	1-439-611-11	TRANSFORMER, POWER (US,CND)	
TN1	1-693-675-11	TUNER PACK (ANTENNA) (DE598:US,CND,E2)	
TN1	1-693-675-21	TUNER PACK (ANTENNA)	(DE698:US,CND,E2/DV10)
TN1	1-693-676-11	TUNER PACK (ANTENNA) (DE698:AEP,UK)	
TN1	1-693-676-21	TUNER PACK (ANTENNA) (DE598:AEP,UK)	
TN1	1-693-678-11	TUNER PACK (ANTENNA) (AUS,AR,KR,TW)	
**********			

Ref. No.	Part No.	Description	Remark
		ACCESSORIES	
		**********	
	1-479-147-11	COMMANDER, STANDARD (RM-AAU001)	(DE598/DV10)
	1-479-150-11	COMMANDER, STANDARD (RM-AAP001)	(DE698)
	1-501-374-12	ANTENNA, LOOP (AM)	
	1-501-807-12	ANTENNA (FM) (EXCEPT US,CND,E2)	
⚠	1-569-008-22	ADAPTOR, CONVERSION 2P (E2)	
⚠	1-770-019-51	ADAPTOR, CONVERSION PLUG (UK)	
	1-793-184-23	CONNECTOR (F TYPE ADAPTOR) (FM)	(US,CND,E2)
	2-549-732-11	MANUAL, INSTRUCTION (ENGLISH)	(DE598:EXCEPT KR)
	2-549-732-21	MANUAL, INSTRUCTION (FRENCH)	(DE598:CND,AEP,E2)
	2-549-732-31	MANUAL, INSTRUCTION (SPANISH)	(DE598:AEP,E2,AR)
	2-549-732-41	MANUAL, INSTRUCTION (GERMAN,DUTCH,	SWEDISH) (DE598:AEP)
	2-549-732-51	MANUAL, INSTRUCTION (ITALIAN,POLISH)	(DE598:AEP)
	2-549-732-61	MANUAL, INSTRUCTION	(TRADITIONAL CHINESE) (DE598:TW)
	2-549-732-71	MANUAL, INSTRUCTION (KOREAN) (DE598:KR)	
	2-549-733-11	MANUAL, INSTRUCTION (DANISH,FINNISH)	(DE598:AEP)
	2-549-733-21	MANUAL, INSTRUCTION (PORTUGUESE)	(DE598:AEP)
	2-549-733-31	MANUAL, INSTRUCTION (RUSSIAN)	(DE598:AEP)
	2-549-733-41	MANUAL, INSTRUCTION (GREEK) (DE598:AEP)	
	2-549-733-51	MANUAL, INSTRUCTION (TURKISH)	(DE598:AEP)
	2-549-733-61	MANUAL, INSTRUCTION (SLOVAKIAN)	(DE598:AEP)
	2-549-733-71	MANUAL, INSTRUCTION (HUNGARIAN,CZECH)	(DE598:AEP)
	2-560-571-11	MANUAL, INSTRUCTION (ENGLISH) (DE698)	
	2-560-571-21	MANUAL, INSTRUCTION (FRENCH)	(DE698:CND,AEP,E2)
	2-560-571-31	MANUAL, INSTRUCTION (SPANISH)	(DE698:AEP,E2,AR)
	2-560-571-41	MANUAL, INSTRUCTION (GERMAN,DUTCH,	SWEDISH) (DE698:AEP)
	2-560-571-51	MANUAL, INSTRUCTION (ITALIAN,POLISH)	(DE698:AEP)
	2-560-572-11	MANUAL, INSTRUCTION (DANISH,FINNISH)	(DE698:AEP)
	2-560-572-21	MANUAL, INSTRUCTION (PORTUGUESE)	(DE698:AEP)
	2-560-572-31	MANUAL, INSTRUCTION (RUSSIAN)	(DE698:AEP)
	2-560-572-41	MANUAL, INSTRUCTION (GREEK) (DE698:AEP)	
	2-560-572-51	MANUAL, INSTRUCTION (TURKISH)	(DE698:AEP)
	2-560-572-61	MANUAL, INSTRUCTION (SLOVAKIAN)	(DE698:AEP)
	2-560-572-71	MANUAL, INSTRUCTION (HUNGARIAN,CZECH)	(DE698:AEP)
	2-560-573-11	MANUAL, INSTRUCTION (ENGLISH) (DV10)	

REVISION HISTORY

Clicking the version allows you to jump to the revised page.
Also, clicking the version at the upper on the revised page allows you to jump to the next revised page.

Ver.	Date	Description of Revision
1.0	2005. 02	New
1.1	2005. 04	Argentina, E2, Korean and Taiwan model addition in STR-DE598. Argentina and E2 model addition in STR-DE698.